


Notes:

- 1. All male and female tabs are 1" unless otherwise stated
- 2. Tab length (0.25") is equal to wood thickness
- 3. Large hole is for power switch whereas the small hole is for charging access
- 4. To make the Speaker Box Front Panel, remove the two holes

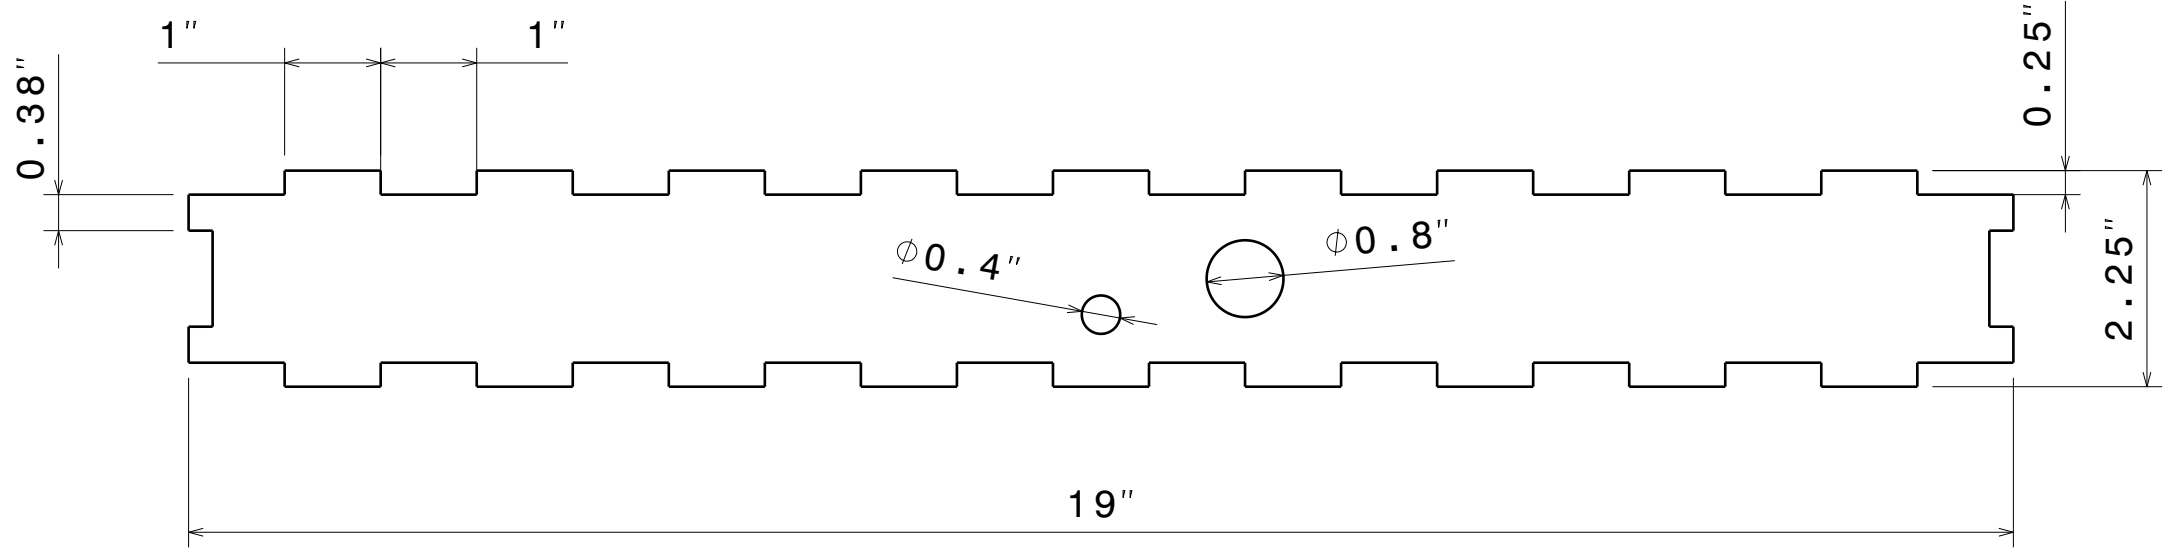

Speaker Box Back Panel