



H4 jumper pins 1 and 2 to send 5v to amp and motor
H4 jumper pins 3 and 2 to send 12v to amp and motor

H6 = Chinese import amplifier

H5 = optional stereo line out connection
jumper pins 1 and 2 to send both channels to Chinese amp