


LCD MAIN MENU

Purpose: Selection of LCD Main Menu item

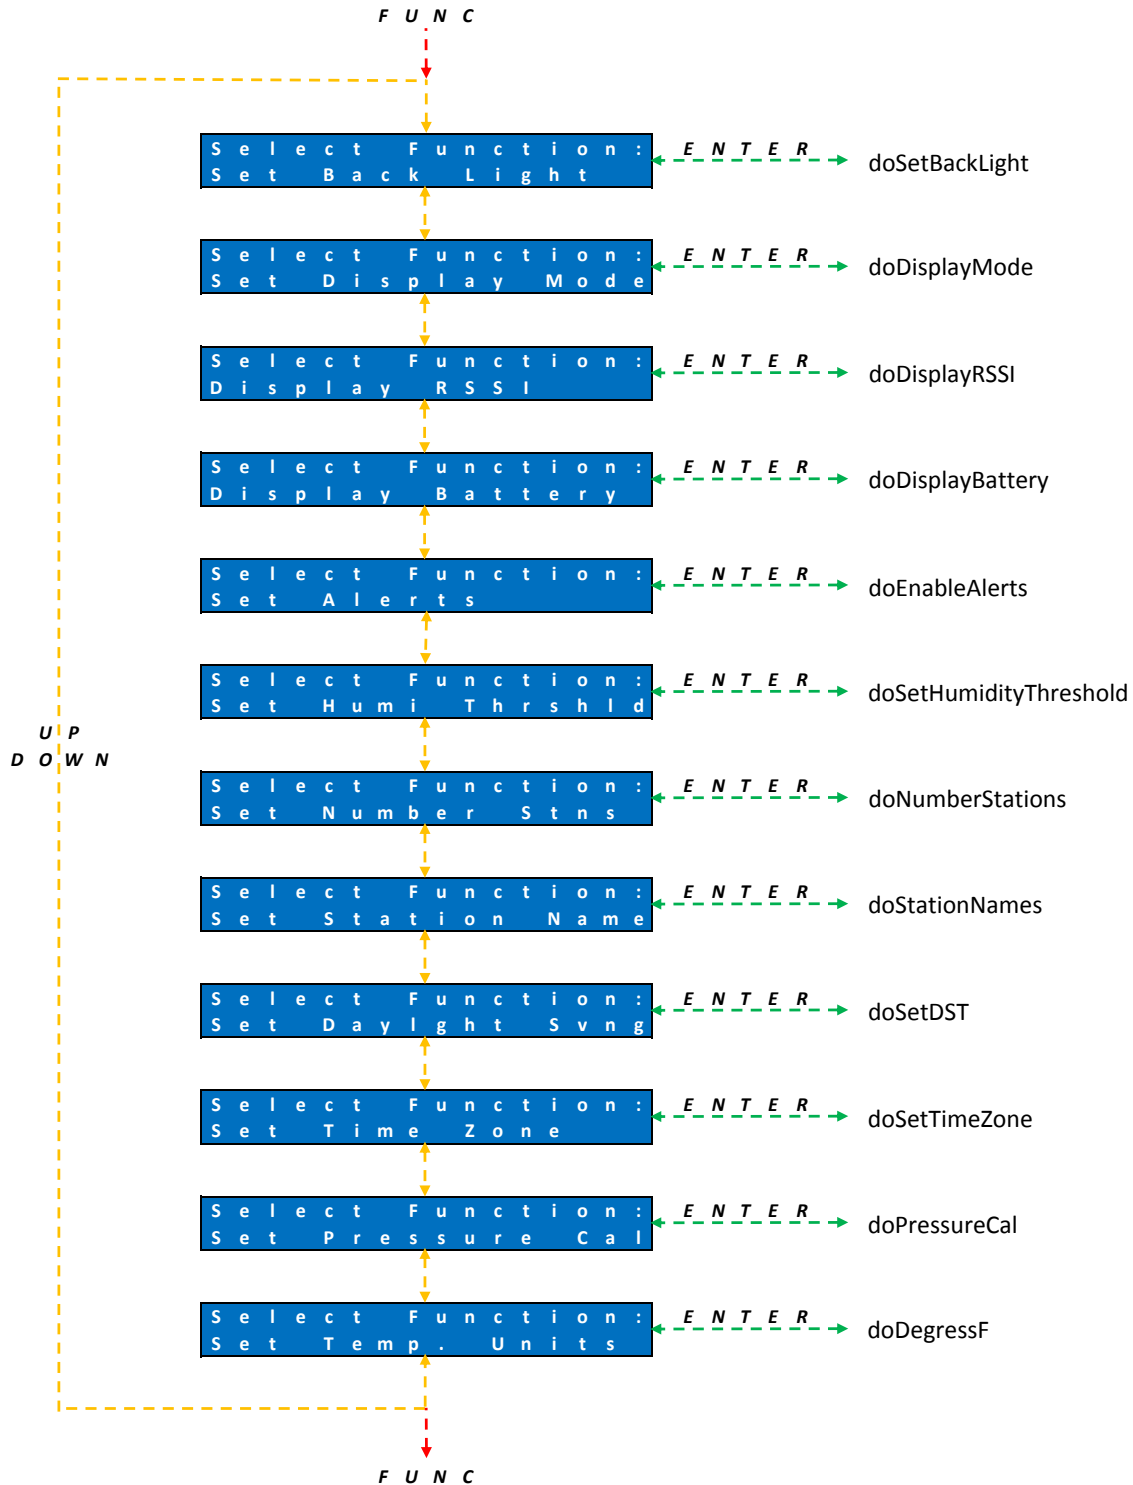

Press **F U N C** button to enter LCD Main Menu as above.

Press **U P** & **D O W N** buttons to navigate LCD Main Menu options

Press **E N T E R** button to select a LCD Main Menu option and move to the corresponding LCD Submenu

Press **F U N C** button to exit LCD Main Menu and save persistent changes to EEPROM