

Connect the QTR-8 Sensor array to the Micro:bit according to the following table

QTR-8	Micro:bit
VCC	3V
GND	GND
Pin 2	Pin 10
Pin 3	Pin 4
Pin 4	Pin 3
Pin 5	Pin 2
Pin 6	Pin 1
Pin 7	Pin 0

Pins 1 and 8 on the QTR-8 Sensor array are unused

