



ELEVATE ARCADE

BY D-FUNCT

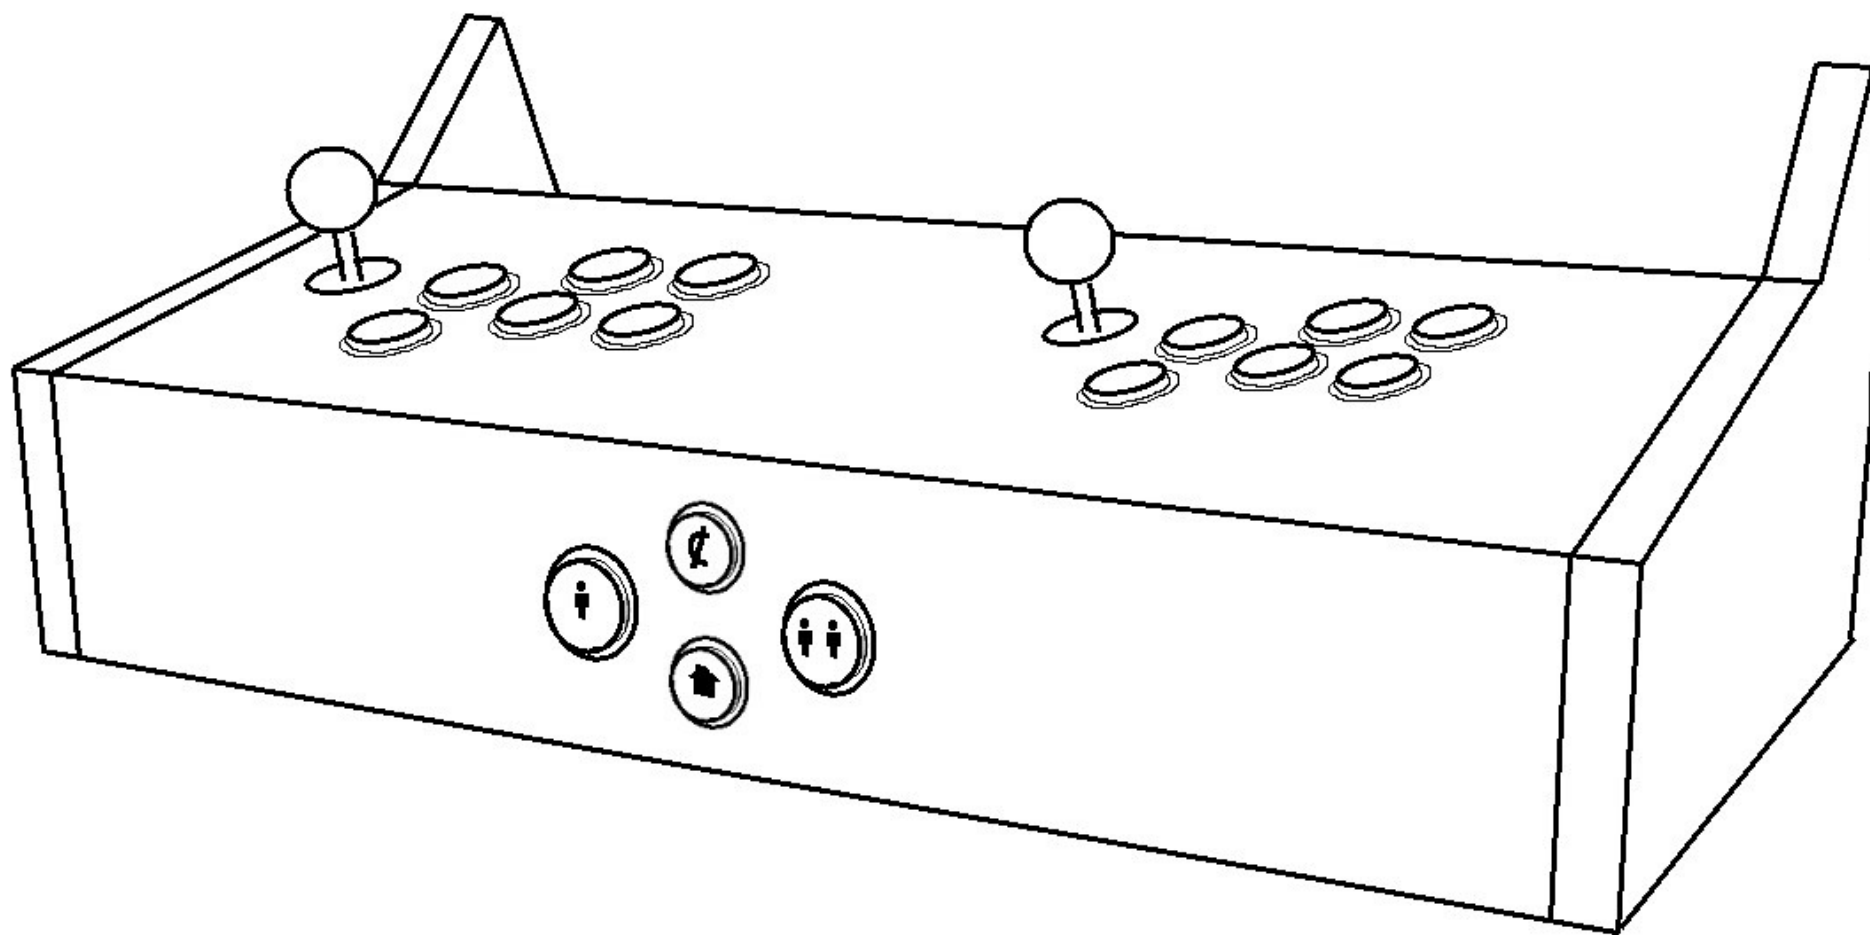

ELEVATE ARCADE


BY D-FUNCT

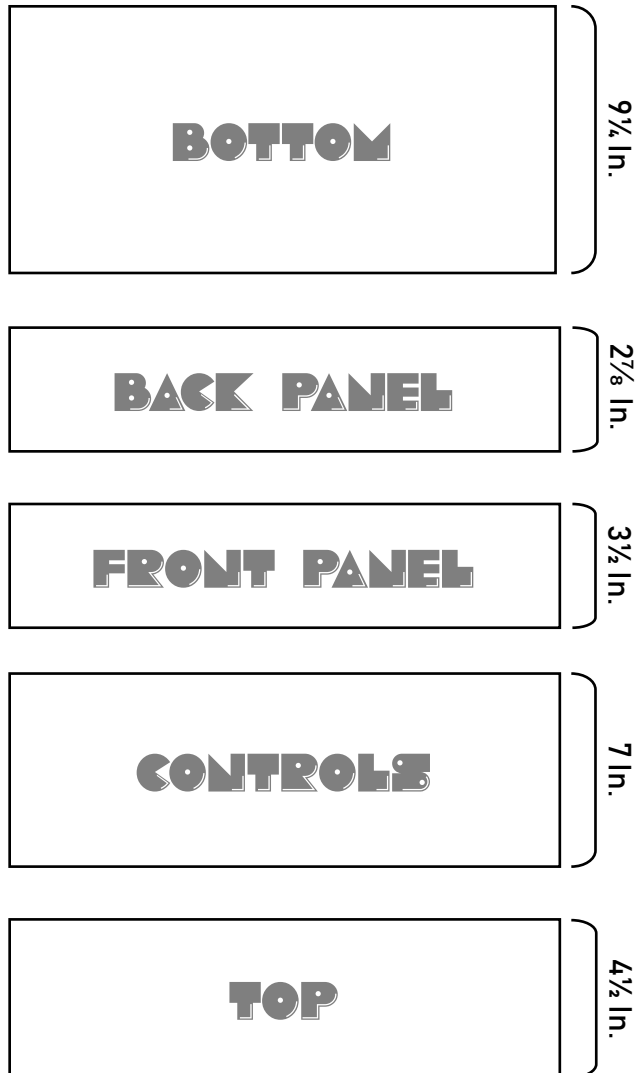

Use this as a plans sheet to cut out all of the panels

Check out my Instructable for a full guide!

<https://www.instructables.com/id/2-4-player-plug-and-play-raspberry-pi-arcade>

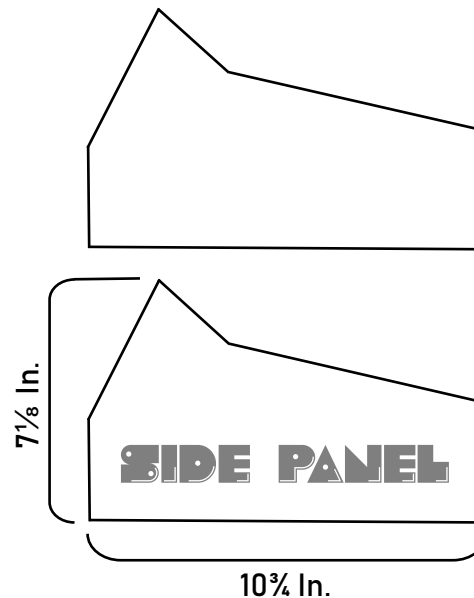

Note: Not to scale!

ELEVATE ARCADE

BY D-FUNCT

- Be sure to measure from left to right always
- Both inlays are 4x3in. The first inlay starts .5in from the left and 1.5in from the bottom, and the other is 9.25in from the left and 1.5in from the bottom

