About Working mode:

Momentary: Push the remote button, the relay connects, release the remote button, the relay disconnects.

Toggle: Push once the remote button, the relay connects, push again the remote button, the relay disconnects.

Latching: Push the remote button A, the relay connects, push the remote button B, the relay disconnect.

Clearing the code:

Push the learning button on the receivers for 8 times, the codes will be cleaned.

After clearing the code, all the remote control can not work anymore.

Learning the code: (Momentary)

Press the learning key (on the Receiver) once time, the LED (on the Receiver) will blink one time. When the LED is on, press the button of the remote control (You want to let it learn), the LED (on the Receiver) will blink for 3 times and then turn off, Learning to succeed.

Learning the code: (Toggle)

Press the learning key (on the Receiver) 2 times, the LED (on the Receiver) will blink 2 times. When the LED is on, press the button of the remote control (You want to let it learn), the LED (on the Receiver)will blink for 3 times and then turn off, Learning to succeed.

Learning the code: (Latching)

Note: When you choose for latching mode, to learn more remote control, you need to learn two different buttons, the first time learnt is for "ON", the second time learnt for "OFF".

```
For example : button A = ON , button B = OFF
```

Press the learning key(on the Receiver) 3 times, the LED (on the Receiver) will blink 3 times. When the LED is on, press the button of the remote control(You want to let it learn), Push the remote button A, LED flashes 3 times. Push the remote button B, Led flash for 3 times. After 3 seconds, the LED indicator will be off, Learning to succeed.

```
A = ON, B = OFF.
```

NOTE: The system can store 25 pcs of remotes, if the remote get more than 25 pcs, the receiver will stop working or not working properly.