


LCD SUB MENU: Set Display Mode

Purpose: Set the Display Mode for station data display on Line 2 of the LCD. Three Display Modes are currently supported, and each mode can be set for temperature or humidity display.

Last Stn: Last Station mode displays either temperature or humidity of the last station report received. Updates immediately when a station report is received.

Fixed Stn: Displays either temperature or humidity for a designated station. Useful for close monitoring of a given station. Display updates on one minute interval, stations report every ten minutes.

Cycle Stn: Cycles through temperature or humidity for all active stations, one minute per station.

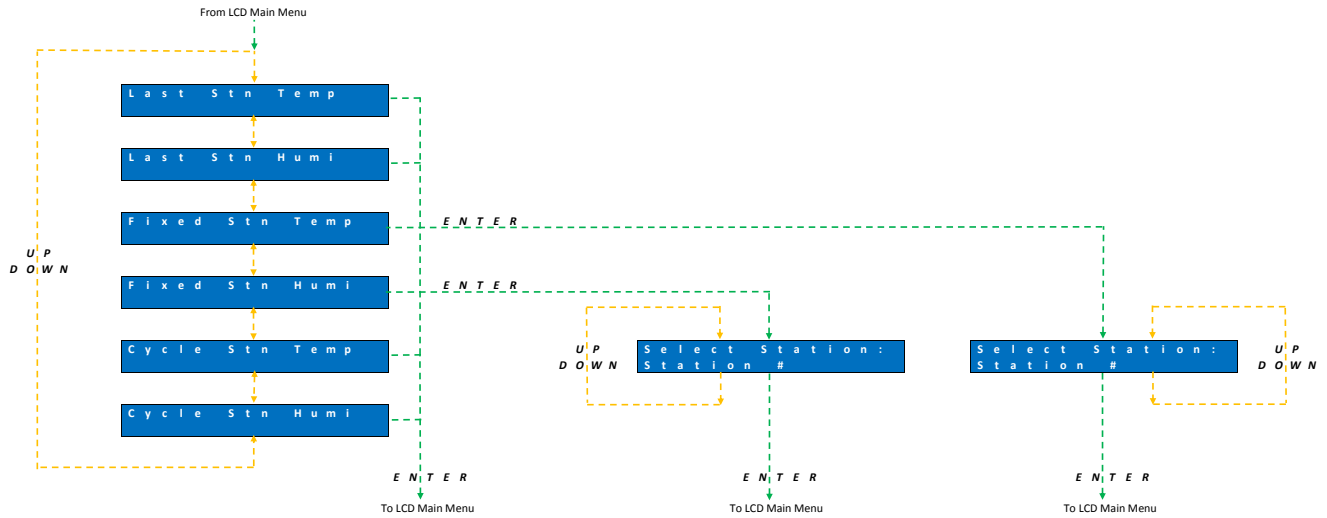

Press **UP & DOWN** buttons to cycle through six display modes
 For Last Station and Cycle Station Modes, press **ENTER** to select and return to LCD Main Menu
 For Fixed Station Modes, press **ENTER** to go to station selection menus

Press **UP & DOWN** buttons to cycle through stations
 Press **ENTER** to select station for Fixed Station Mode and return to LCD Main Menu