


LCD SUB MENU: Set Humidity Threshold

Purpose: Set humidity threshold to trigger an alert for each active station

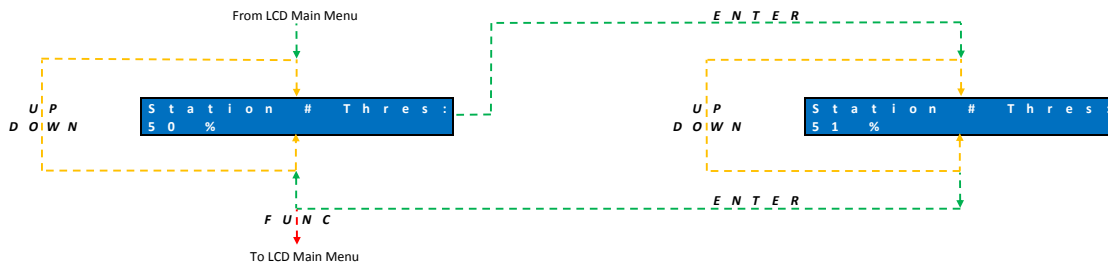

Press **UP & DOWN** buttons to cycle through the Station Menu showing humidity threshold for each station
Press **ENTER** button once to edit humidity threshold for the selected station
Press **FUNC** button to return to the LCD Main Menu from the Station Menu

Press **UP & DOWN** buttons to increment & decrement humidity threshold by 1, respectively
Press **ENTER** button a second time to return to the Station Menu