


## LCD SUB MENU: Set Pressure Calibration Offset

Purpose: To calibrate the pressure sensor reading to account for altitude of the station location

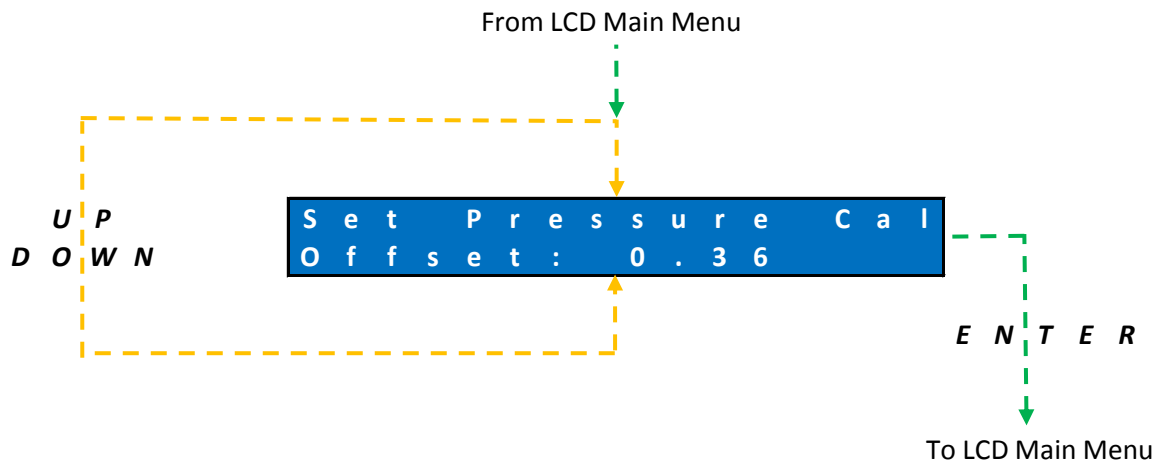

Press **UP** & **DOWN** buttons to increment & decrement the offset in steps of 0.01 inHg  
Press **ENTER** button to save the offset and return to the LCD Main Menu