

## Tektronix Tube to Part Number Cross Reference

June 10, 2007

B5092	154-0327-00	230, 6R1 Numbers Nixie
B5094	154-0326-00	230, 6R1 Units Nixie
B5971	154-0509-00	230 Alpha-Numeric Nixie
CK512AX	154-0114-00	570
ECC81/12AT7	154-0039-04	TL43B
ECC81/12AT7	154-0039-05	TELEQUIPMENT
ECC82/12AU7	154-0041-03	
ECF80	154-0278-01	TELEQUIPMENT
ECF80/6BL8	154-0278-02	TELEQUIPMENT
ECL85/6GV8	154-0468-00	RM529, 526, 529
EF184/6EJ7	154-0421-00	RM527, 526, 527
EL86/6CW5	154-0202-00	RM527, RM546, RM547, R544, 132, 133, 519, 527, 544, 546, 547
EL86	154-0202-01	TLD56
E180F/6688	154-0215-00	3T77, 3T77A, 5T1, 5T1A, 519, 526, 80/P80
E182CC/7119	154-0340-00	RM543B, RM545B, 191, 3A3, 3B4, 3B5, 516, 543B, 545B, 661
E810F/7788	154-0420-00	RM529, RM543B, RM545B, RM585A, 529, 543B, 545B, 581A, 585A
E88CC/6922	154-0195-00	3S3, 3S76, 4S3
OA2	154-0001-00	107, 110, 111, 124, 130, 182B, 183B
OB2	154-0075-00	E, TU50, 109, 110, 190, 190A, 190B, 53/54E
OC3	154-0002-00	104, 104A, 511
OD3	154-0003-00	511, 513, 514
OG3	154-0291-00	MANY INSTRUMENTS
GV4 S1400	154-0432-00	422
Y1506	154-0499-00	1L20
Y1641	154-0506-00	1L20, 1L40, 491
ZZ1000	154-0370-00	129, 3B1, 3B2, 3B3, 3S76, 422
1B3GT	154-0091-00	511, 512
1V2	154-0004-00	511, 512, 514
1X2B	154-0005-00	RM565, 565
1X2B	154-0005-01	RM565, 507, 519, 565
2AS15A	154-0006-00	517, 517A, 555
2C43	154-0559-00	067-0532-00/-01
2X2A	154-0085-00	511
4CX250F	154-0300-00	519
5AR4	154-0168-00	RM502A, 160A, 502, 502A
5R4GB	154-0007-00	517, 517A
5U4G	154-0086-00	511
5V4AG	154-0008-00	RM32, 104, 104A, 105, 112, 160, 160A, 507, 511, 514, 532
5Y3GT	154-0009-00	190, 190A, 190B
6AB4	154-0010-00	

6AC7	154-0011-00	511, 514
6AF3	154-0301-00	519
6AG7	154-0012-00	104, 104A, 105, 112, 507, 511, 512, 513, 514, 514AD, 514D, 517, 517A, 524D, 524AD
6AG7	154-0012-02	
6AH6	154-0013-00	TU50, 121, 180, 513, 524AD, 524D
6AK5	154-0014-00	CA, K, S, 121, 124, 517, 517A, 524D, 524AD, 53B, 53/54C, 53/54G, 53/54K
6AK5W/5654	154-0206-00	
6AK6	154-0015-00	112, 315, 512
6AL5	154-0016-00	MANY INSTRUMENTS
6AL5	154-0016-01	CA, 575
6AL5W/5726	154-0016-02	
6AL5	154-0016-10	MANY INSTRUMENTS
6AL5W/5726	154-0282-00	310A
6AN8	154-0078-00	MANY INSTRUMENTS
6AQ5	154-0017-00	MANY INSTRUMENTS
6AQ5W/6005	154-0017-01	
6AQ5W/6005	154-0283-00	310A
6AR8	154-0200-00	526
6AS5	154-0018-00	180, 315, 507, 513, 514, 517, 517A, 524D
6AS6	154-0019-00	525 (CAN USE 154-0223-00 6DB6)
6AS7G	154-0020-00	112, 160, 180, 506, 511, 512, 513, 514, 517, 517A, 524AD, 524D, 561, 561A, 564, 575
6AS7GA	154-0116-00	
6AU5GT	154-0021-00	MANY INSTRUMENTS
6AU6	154-0022-00	MANY INSTRUMENTS
6AU6/8425	154-0022-03	MANY INSTRUMENTS
6AU6	154-0022-05	581A, 585A
6AU6WA	154-0022-06	
6AU6/8425	154-0022-07	MANY INSTRUMENTS
6AU6	154-0022-10	MANY INSTRUMENTS
6AU6WA	154-0284-00	310A
6AU8	154-0132-00	T, 53/54T
6AW8	154-0095-00	132, 133, 160A, 541, 545
6AX4	154-0113-00	570
6AX5	154-0023-00	TU50, 124, 181, 570
6AZ5	154-0024-00	NO KNOWN USE
6BA8A	154-0163-00	RM33, RM33A, RM43, RM43A, RM527, RM543B, 125, 2A61, 3A2, 3A72, 526, 527, 533, 533A, 543, 543A, 543B, 59
6BC7	154-0232-00	RM503, RM504, RM565, 2B67, 503, 504, 526, 565, 67
6BE6	154-0025-00	130, 53C

6BH6	154-0026-00	112, 124, 130, 162, 310, 310A, 512, 517, 517A, 524AD, 524D, 53/54G
6BH6	154-0026-02	
6BH6	154-0285-00	310A
6BJ7	154-0453-00	RM503, RM504, RM565, 2B67, 503, 504, 526, 565, 67
6BJ8	154-0305-00	RM527, TU4, 507, 51, 527
6BK7	154-0027-00	513
6BL8	154-0278-00	MANY INSTRUMENTS
6BL8/ECF80	154-0278-02	TELEQUIPMENT
6BQ7A	154-0028-00	MANY INSTRUMENTS
6BQ7A	154-0028-01	310
6BQ7A	154-0028-10	MANY INSTRUMENTS
6BW4	154-0119-00	RM502A, 107, 126, 502, 502A, 524AD, 575
6BY8	154-0414-00	RM546, RM547, R544, 544, 546, 547
6C4	154-0029-00	TU50, 180, 190, 190A, 3B2, 507, 511, 513, 514, 517, 517A
6CB6A	154-0030-00	MANY INSTRUMENTS
6CB6	154-0030-10	MANY INSTRUMENTS
6CD6GA	154-0112-00	570
6CG7	154-0134-00	Q, 3C66, 575
6CL6	154-0031-00	MANY INSTRUMENTS
6CL6	154-0010-10	MANY INSTRUMENTS
6CL6	154-0286-00	310A
6CV5	154-0207-00	RM585A, 581, 581A, 585A,
6CW4	154-0323-00	RM565, 1A7, 3A8, 3B2, 3S76, 565, 6R1, 6R1A
6CW5/EL86	154-0202-00	RM527, RM546, RM547, R544, 132, 133, 519, 526, 527, 544, 546, 547
6CY5	154-0207-00	
6CZ5	154-0167-00	RM17, RM527, RM561, RM561A, RM564, RM565, 317, 506, 526, 527, 555, 561, 561A, 564, 565, 567, 661
6DB6	154-0223-00	RM527, 525, 526
6DJ8	154-0187-00	MANY INSTRUMENTS
6DJ8	154-0187-01	TELEQUIPMENT
6DJ8	154-0187-02	RM585A, 581, 581A, 585A
6DJ8	154-0187-03	TELEQUIPMENT
6DJ8	154-0187-10	MANY INSTRUMENTS
6DJ8	154-0305-00	RM527, TU4, 507, 51, 527
6DK6	154-0149-00	MANY INSTRUMENTS
6DQ5	154-0317-00	560
6DQ6A, B	154-0277-00	RM503, RM504, 503, 504
6DT5	154-0302-00	502, 502A
6EJ7/EF184	154-0421-00	RM527, 526, 527
6EW6	154-0212-00	MANY INSTRUMENTS
6EW6	154-0212-01	

6EW6	154-0212-10	MANY INSTRUMENTS
6G11	154-0660-00	125, 132, 519
6GE8/7734	154-0260-00	RM527, 1121, 125, 132, 133, 519, 527, 560
6GF5	154-0494-00	549
6GM8	154-0259-00	S, 81
6GM8	154-0259-10	S
6GV8/ECL85	154-0468-00	RM529, 526, 529
6HZ6	154-0447-00	RM527, 525, 526
6J6	154-0032-00	104, 104A, 105, 121, 161, 511, 512, 513, 514, 517, 517A
6JE8	154-0460-00	3T4
6KV8	154-0497-00	3A8
6L6	154-0087-00	511
6L6WGB	154-0087-01	
6LY8	154-0497-00	3A8
6M11	154-0493-00	R556, 556
6SJ7	154-0088-00	511
6U8	154-0033-00	MANY INSTRUMENTS
6V6	154-0089-00	511
6W4GT	154-0034-00	512
6X4	154-0035-00	121, 124, 128, 130, 180, 181, 507, 511, 512, 513, 514, 517, 517A, 524AD, 524, 570
6X5	154-0090-00	511
6X8	154-0036-00	
12A4	154-0037-00	517
12AL5	154-0038-00	MANY INSTRUMENTS
12AT7	154-0039-00	MANY INSTRUMENTS
12AT7	154-0039-01	RM529, RM565, 565
12AT7	154-0039-02	A, G, K, M, RM502A, 127, 502A, 524AD, 524, 53C, 53G, 53/54A, 53/54C, 53/54G, 53/54K
12AT7/WA	154-0039-03	
12AT7WA	154-0205-00	
12AT7/ECC81	154-0039-04	TL43B
12AT7/ECC81	154-0039-05	TELEQUIPMENT
12AT7	154-0039-10	MANY INSTRUMENTS
12AU6	154-0040-00	MANY INSTRUMENTS
12AU6	154-0040-01	
12AU6	154-0040-02	
12AU6	154-0040-03	
12AU6	154-0040-04	
12AU6/8426	154-0040-05	MANY INSTRUMENTS
12AU6	154-0040-10	MANY INSTRUMENTS
12AU7A	154-0041-00	MANY INSTRUMENTS
12AU7 RCA	154-0041-01	3C66, 561
12AU7	154-0041-02	E, 53/54E
12AU7/ECC82	154-0041-03	

12AU7	154-0041-04	
12AU7	154-0041-05	TL43B
12AU7/ECC82	154-0041-06	TELEQUIPMENT
12AU7	154-0041-10	MANY INSTRUMENTS
12AU7WA/6189	154-0287-00	310A
12AW6	154-0042-00	513, 514
12AX7	154-0043-00	MANY INSTRUMENTS
12AX7	154-0043-01	E, 122, 53/54E
12AX7	154-0043-01	MANY INSTRUMENTS
12B4A	154-0044-00	MANY INSTRUMENTS
12BH7A	154-0046-00	RM561, RM561A, 5M564, 506, 507, 513, 517, 517A, 561, 561A, 564, 567
12BY7A	154-0047-00	MANY INSTRUMENTS
12BY7	154-0047-02	
12BY7	154-0047-05	
12BY7	154-0047-06	
12BY7	154-0047-10	MANY INSTRUMENTS
12BZ7	154-0048-00	124, 524AD, 524D
12HG7	154-0496-00	519
19J6	154-0049-00	514
19X8	154-0100-00	53/54K
25L6GT	154-0050-00	121
5642	154-0051-00	MANY INSTRUMENTS
5642	154-0079-00	
5651	154-0052-00	MANY INSTRUMENTS
5651WA	154-0052-10	
5651WA	154-0288-00	310A
5654	154-0084-00	B, L, 53B, 53/54B, 53/54L
5654/6AK5W	154-0206-00	
5675	154-0464-00	L30, 1L30
5718	154-0053-00	321
5726/6AL5W	154-0016-02	
5726/6AL5W	154-0282-00	310A
5751	154-0094-00	53/54E
5814A	154-0054-00	53D, 53/54D, 53/54E
5814A	154-0316-00	
5842	154-0408-00	2A61
5879	154-0055-00	RM16
5894	154-0130-00	536
5965	154-0147-00	TU50, 180A
6005/6AQ5W	154-0017-01	
6005/6AQ5W	154-0283-00	310A
6005	154-0317-00	560
6080	154-0056-00	MANY INSTRUMENTS
6080WA	154-0056-01	
6080WA	154-0315-00	

6086	154-0223-00	525, 526, 527
6110	154-0240-00	
6189/12AU7WA	154-0287-00	310A
6197	154-0146-00	RM31A, RM33, RM33A, RM35A, RM41A, RM527, RM546, RM547, R544, 3A75, 516, 527, 531, 533, 533A, 535, 535A, 544, 546, 547
6336A	154-0423-00	129
6360	154-0191-00	536
6688/E180F	154-0215-00	3T77, 3T77A, 5T1, 5T1A, 519, 526, 80/P80
6922	154-0204-00	
6922/E88CC	154-0195-00	3S3, 3S76, 4S3
6939	154-0209-00	581, 585
7119/E182CC	154-0340-00	RM543B, RM545B, 191, 3A3, 3B4, 3B5, 516, 543B, 661
7189A	154-0503-00	106
7199	154-0309-00	3L10
7233	154-0307-00	RM561, RM561A, RM564, RM565, 132, 133, 506, 549, 561, 561A, 564, 565, 661
7247	154-0257-00	3C66
7308	154-0371-00	1121, 3S3, 3S76, 4S3
7486	154-0474-00	L20
7548	154-0310-00	519
7586	154-0306-00	MANY INSTRUMENTS
7586	154-0306-01	1S2
7586 AGED	154-0306-02	MANY INSTRUMENTS
7586 AGED	154-0306-03	1S2
7587	154-0465-00	184
7699	154-0281-00	581, 585
7734/6GE8	154-0260-00	RM527, 1121, 125, 132, 133, 519, 527, 560
7788/E810F	154-0420-00	RM529, RM543B, RM545B, RM585A, 529, 543B, 545B, 581A, 585A
7895	154-0378-00	3B1, 3B3
8056	154-0417-00	1S1, 3S3, 3T4, 422/R, 5T3
8056	154-0417-10	1S1, 3S3, 3T4, 422/R, 5T3
8136	154-0367-00	MANY INSTRUMENTS
8228	154-0370-00	129, 3B1, 3B2, 3B3, 3S76, 420, 422/R
8233	154-0361-00	3A1, 3A5, 3A6, 9A1, 9A2
8254/EC1000	154-0324-00	
8393	154-0461-00	422/R, 453/R, 454/R
8416	154-0413-00	W, 1S1, 2A61, 3A8, 3L5, 84
8425/6AU6	154-0022-03	MANY INSTRUMENTS
8426/12AU6	154-0040-05	MANY INSTRUMENTS
8608	154-0491-00	R556, 3A7, 549, 556