BOUNCING CARDBOARD DISC

Release a lightweight disc to bounce along surfaces.

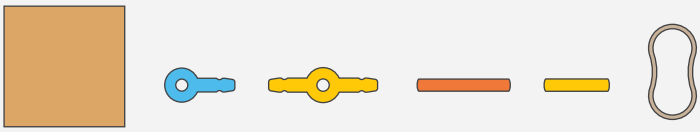

1 Create a beam to draw with

× 3 × 1 × 1 × 1

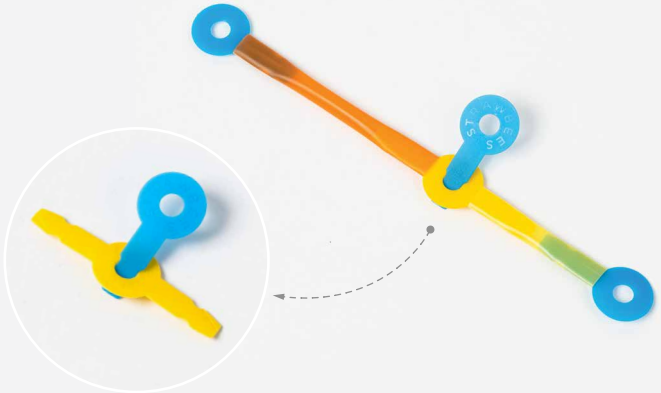

2 Trim a cardboard sheet, poke a hole, then fit the beam inside

× 1

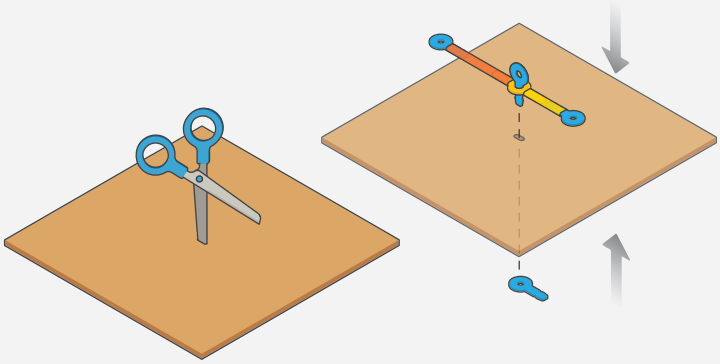

3 Lock the beam on the back side of the sheet

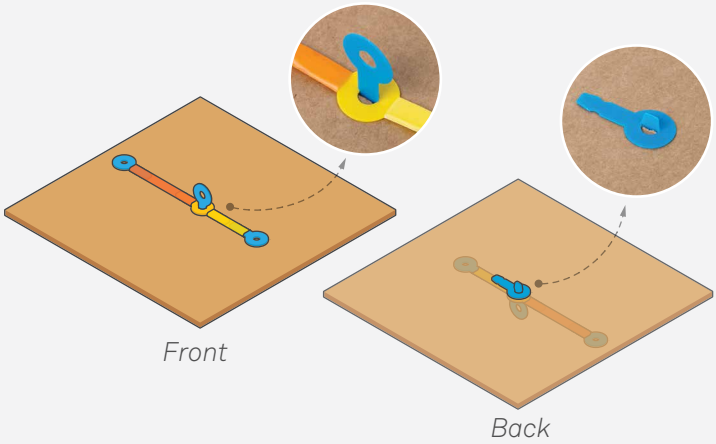

4 Point a marker down through the beam then draw 2 circles. Cut the disc

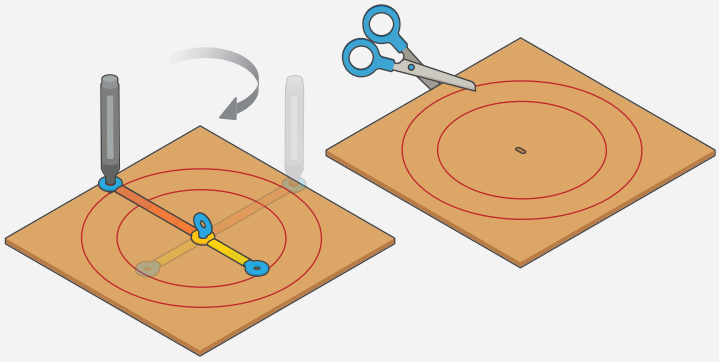

5 Draw a tiny triangle on the disc edge and cut out

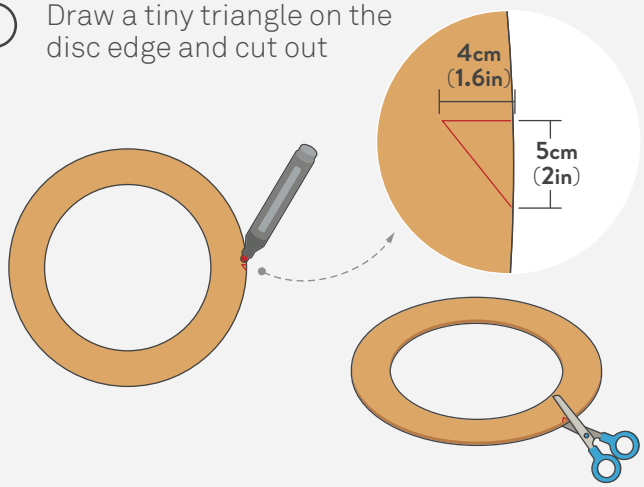

6 Take a rubber band, hook it on the notch, then launch your disc!

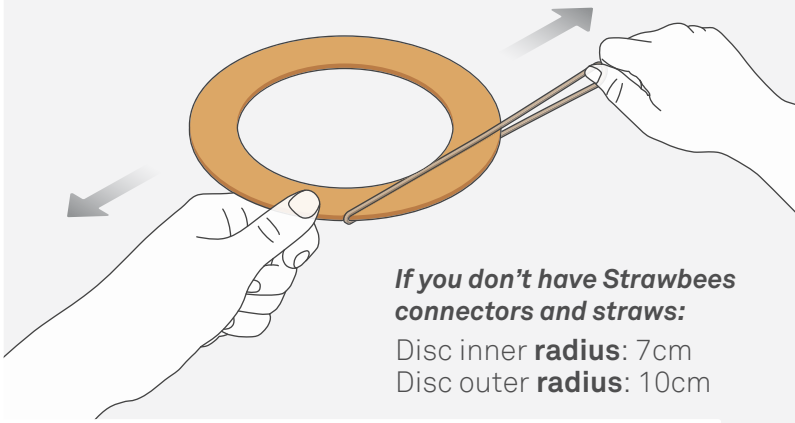

If you don't have Strawbees connectors and straws:

Disc inner **radius**: 7cm
Disc outer **radius**: 10cm

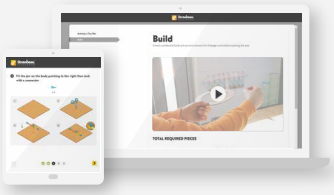

Explore more on Strawbees Classroom

strawbees.com/cardboarddisc

Strawbees® CLASSROOM

© Strawbees AB. All rights reserved.