LCD SUB MENU: Display Battery

<u>Purpose</u>: Display voltage to the Feather board

From LCD Main Menu

U P

D O W N

```
S t a t i o n     #     B a t t . :
3 . 8 9     v o l t s
```

E N T E R
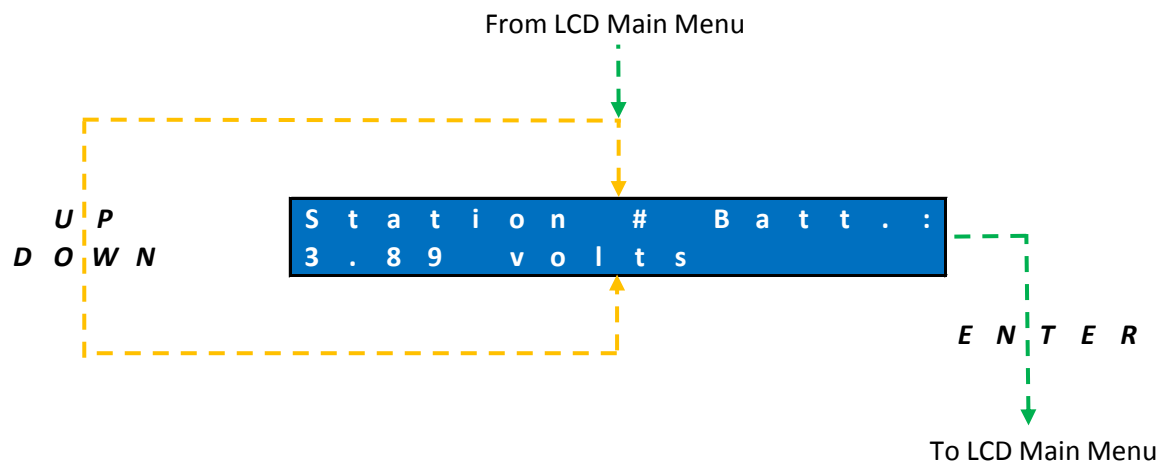
To LCD Main Menu

Press *UP* & *DOWN* buttons to cycle through stations
Press *ENTER* button to return to the LCD Main Menu