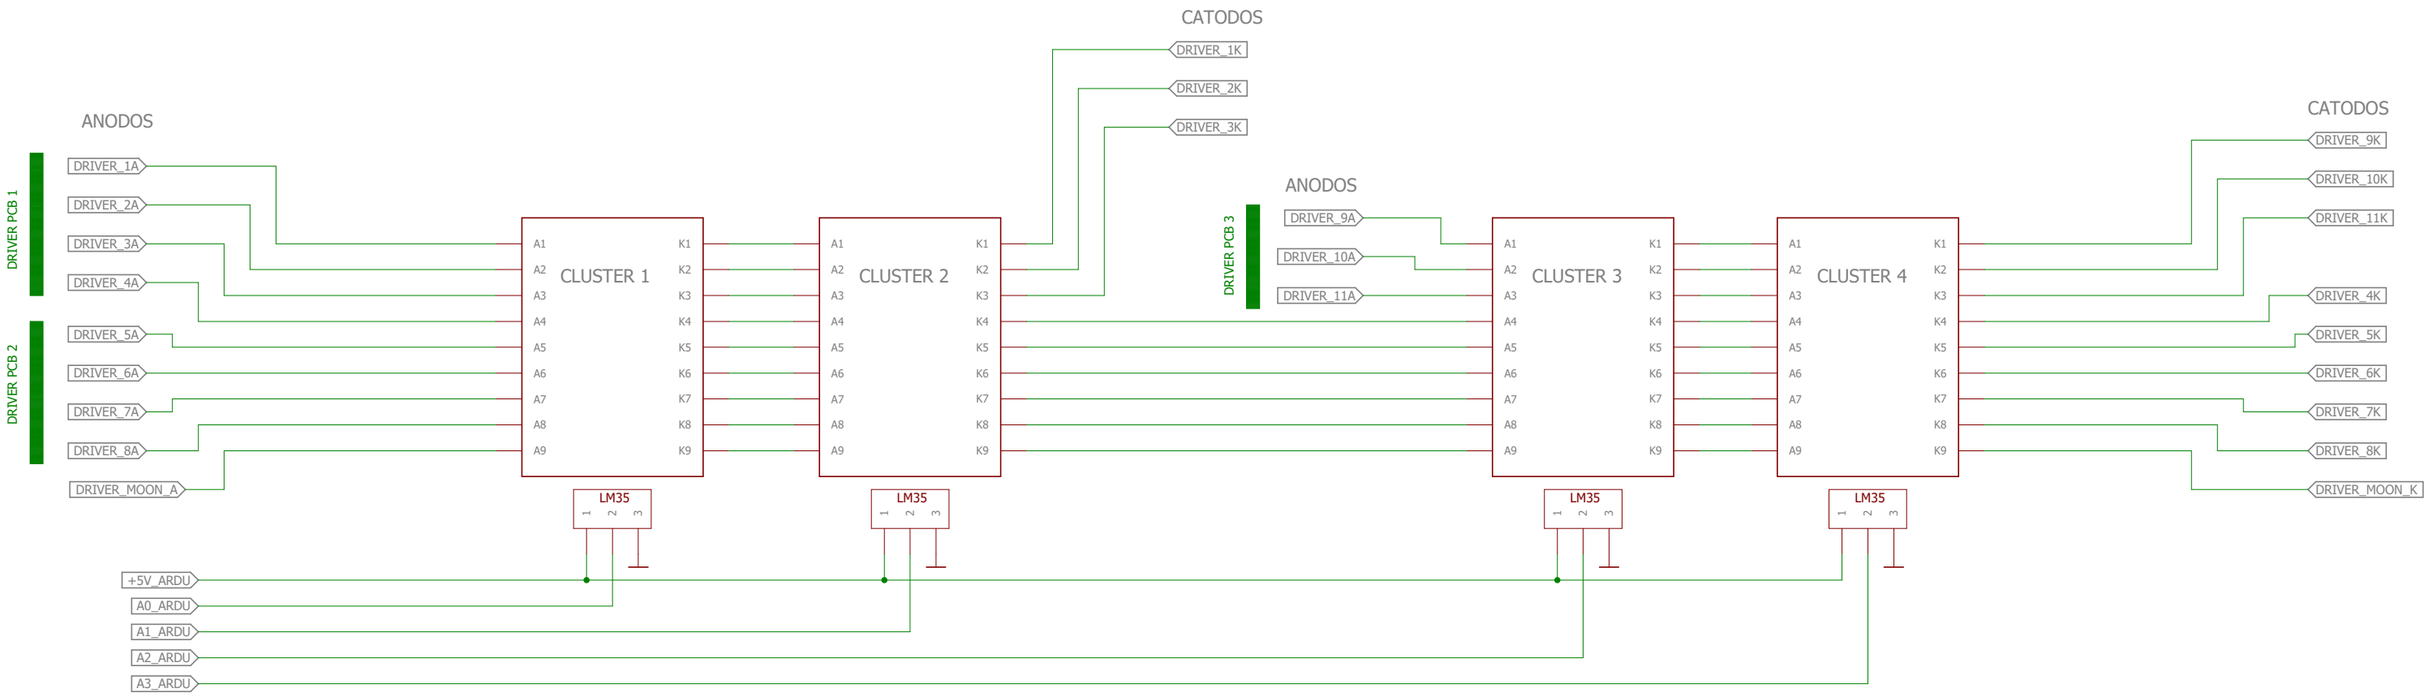
ANODOS
DRIVER_1A
DRIVER_2A
DRIVER_3A
DRIVER_4A
DRIVER_5A
DRIVER_6A
DRIVER_7A
DRIVER_8A
DRIVER_MOON_A
DRIVER PCB 1
DRIVER PCB 2
CLUSTER 1
CLUSTER 2
CLUSTER 3
CLUSTER 4
A1 A2 A3 A4 A5 A6 A7 A8 A9
K1 K2 K3 K4 K5 K6 K7 K8 K9
CATODOS
DRIVER_1K
DRIVER_2K
DRIVER_3K
ANODOS
DRIVER_9A
DRIVER_10A
DRIVER_11A
DRIVER PCB 3
CATODOS
DRIVER_9K
DRIVER_10K
DRIVER_11K
DRIVER_4K
DRIVER_5K
DRIVER_6K
DRIVER_7K
DRIVER_8K
DRIVER_MOON_K
LM35
1 2 3
+5V_ARDU
A0_ARDU
A1_ARDU
A2_ARDU
A3_ARDU