ESP32 Developer Timer firmware load. V1.0 B 5/02/2024

Note:- this is an early version & screen shots show different file names

Note:- These guides below must be followed in the correct order ESP32 Installing CP2102 or CH340 USB Driver ESP32 Firmware Load

Download the code from the github page.

click on the green <>Code button, which will allow you to download all of the files as a zip file. Unzip (extract) the downloaded file. <u>billbill100/Build-a-B-W-Film-Developer-Timer-Auto-Twiddler-Cheap-Easy-it-Works: Build a Black & White Film</u> <u>Developing Timer with optional motor driven twiddler for agitation (github.com)</u>

Download the Flashing software.

A program called Flash Download Tool is required. It is included on the Github page, or can be downloaded from Tools | Espressif Systems


Unzip (extract) the folder and put the files somewhere suitable on the computer. The software is stand-alone and does not need to be installed.

Checking the ESP32 USB driver.

The USB driver should have been installed, following the driver installation guide. To confirm, after connecting the ESP32 board, press Windows key + x and select Device Manager. Look for the COM ports and expand. The ESP module should be seen, as in this example on COM port 6, showing the CP2102 driver. Your will most likely show a different com port & if using the Lolin board, a different driver.



If the driver is missing, as shown on the screen below (Yellow Triangle) refer to the document Installing CP2102 Driver. Found in the github repository.

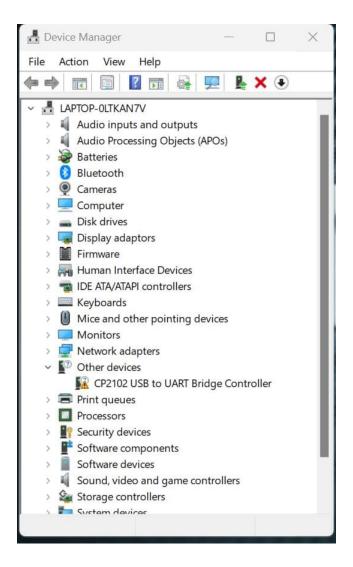


Flash the Developer Timer firmware to ESP32

Find the folder where the Flash Download Tool files were extracted to.

Launch the Flash Download Tool by double clicking on 'flash_download_tool_3.9.5.exe'

Select 'ESP32 from the drop-down box, as shown in the screenshot below and click ok.

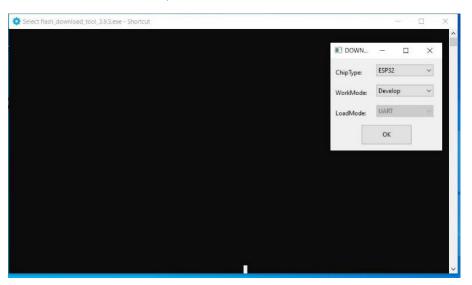

A screen like the below will appear and must now be populated. (The two windows can be moved as required)

🔅 flash_download_tool_3.9.5.exe - Sh — 🗆	1 X	ESP32 FLA	SH DOWNLOAD	TOOL V3	.9.5	3	-		×
1 kill		SPIDownload	ł						
1 1111									^
							0		
							0		
							@		
							0		
							0		
							0		
							0		
		SPIFlashConfi					0		~
		SPI SPEED	SPI MODE		NotChgBir		Det	tectedInfo	
	40MHz	QIO						^	
		 26.7MHz 20MHz 80MHz 	QOUT O DOUT FASTRD	LockSettings					
				CombineBin					
					Default				
			0						
									×
	×	DownloadPan	el 1						
		IDLE							^
		等待							~
		START	STOP	FRASE	COM:	CO	M6		~
		S IGHT	5101		BAUD:	1152	00		~
									-

Populate the values as follows

1) Click the three dots, navigate to, and select the downloaded *developerTimer_x_x_x_x.ino.bootloader.bin.bin* file.

Do the same on the second line, selecting $developerTimer_x_x_x_$.ino.partitions.bin and again for the third line $developerTimer_x_x_x$.ino.bin If the files are selected correctly, the black window (5) will show each file name

- 2) Type 0x1000 into the top box, 0x8000 into the second and 0x10000 into the third.
- 3) Tick the three boxes next to the file names
- 4) Select the correct COM port from the drop-down box

ESP32 FLASH DOWI	NLOAD TOOL V3.9.5	- 🗆 X		- 0
C:\ShutterTester\e	ODE DUT DONotChgBin UT UT Default		flash_download_tool_3.9.5.exe - Shortcut C:\temp C:\ShutterTester\esp32_shutterTester_3_0_7_5.i C:\ShutterTester C:\ShutterTester C:\ShutterTester C:\ShutterTester\esp32_shutterTester_3_0_7_5.i C:\ShutterTester\esp32_shutterTester_3_0_7_5.i ShutterTester\esp32_shutterTester_3_0_7_5.i	ino.partitions.bin
DownloadPanel 1 IDLE 等待 START STOP	ERASE	M6 600 ~	4	

The file names and number boxes will be green, if the Flash Download Tool as found the files & is happy with the values.

Now press 'Start' at the bottom left of the box. The green 'IDLE' box will change to 'SYNC'

A line of dots will appear on the black screen, press the Boot button on the ESP32 board for 3 seconds and then

release. (If using the Lolin D32, this board does not have a boot button & this step is not required).

ESP32 FLASH DOWNLOAD TOOL V3.9.5	<u>,</u>		×	🔅 flash_download_tool_3.9.5.exe - Shortcut — 🗆 🗙
SPIDownload				test offset : 4096 0x1000
✓ Itertimer_2_lasers_3_0_7_5.ino.bootloader.bii ✓ C:\temp\esp32_shuttertimer_2_lasers_3_0_7 ✓ For the state of the state o	5 @ 5 @ @ @ @	0x1000 0x8000 0x10000 0x10000		case ok test offset : 32768 0x8000 case ok test offset : 65536 0x10000 case ok test offset : 4096 0x1000 case ok test offset : 32768 0x8000 case ok test offset : 65536 0x10000 case ok
DownloadPanel 1				
SYNC 等待上电阀步			< >	
START STOP ERASE COM: BAUD:	COM6 921600		>	



If successful, a screen, as below, will be seen. The Black screen will show the flashing to the device. A green progress bar blue box will appear in the other screen, then the green start button will change to a blue 'FINISH'

ESP32 FLA	SH DOWNLOAE	D TOOL V3.9.5		-		×	🔅 flash_download_tool_3.9.5.exe - Shortcut — 🗆 🗙	
SPIDownloa	d						C:\temp	
C:\Shut	terTester\esp32_ terTester\esp32_	_5.ino.bootloader.bin shutterTester_3_0_7_5.ind shutterTester_3_0_7_5.ind shutterTester_3_0_7_5.ind DoNotChgBin LockSettings CombineBin Default			0x1000 (0x8000 (0x10000 (0x10000 (0x10000) (0x10000) (0x10000) (0x10000) (0x10000) (0x10000) (0x1000) (0x1000) (0x1000) (0x800) (0x800) (0x800) (0x800) (0x800) (0x800) (0x800) (0x800) (0x800) (0x800) (0x800) (0x800) (0x800) (0x800) (0x800) (0x800) (0x800) (0x800) (0x8		C:\ShutterTester\esp32_shutterTester_3_0_7_5.ino.bootloader.bin C:\ShutterTester C:\ShutterTester C:\ShutterTester C:\ShutterTester\esp32_shutterTester_3_0_7_5.ino.bin test offset : 4096 0x1000 case ok test offset : 32768 0x8000 case ok test offset : 65536 0x10000 case ok Uploading stub Running stub Stub running Changing baud rate to 921600 Changed. NO XWC flash detected! FLASH_CRYPT_CNT 0 ABS_DONE_0 False Compressed 18992 bytes to 13112 Compressed 3072 bytes to 146 Compressed 361136 bytes to 202758 is stub and send flash finish	
DownloadPar	DownloadPanel 1							
FINISH 完成 AP: 7088F65874C5 STA: 7088F65874C4 BT: 7088F65874C6 ETHERNET: 7088F65874C7								
START	STOP	ERASE	D <mark>M6</mark> 1600			× ×		

Note:- the flashed code will not start running until the Reset button has been pushed on the ESP32 board, located on the opposite side of the USB connector to the Boot button.

If problems occur, check the following:-

Remove & insert the USB cable into the computer. Windows, by default will make a sound indicating a USB device has been connected.

Open Device Manager and check the ESP32 board is shown. Removing & re-inserting the USB cable will make the ESP32 disappear & re-appear.

Ensure there is no yellow warning triangle by the COM port in Device Manager, indicating the device driver is not loaded.

Try changing the baud value to 115200 and try again.

If any of the file names or numbers did not turn green as they were selected & the black window report 'case ok', then there is an issue with the downloaded flash files, or the stored location on the computer.