



3 D P R I N T E D **FORKLIFT** **WIRELESS CHARGER**

A design model for the Bambu Lab Wireless Charger Kit-K012


Assembly Guide



1 | Install Circuit Board & LED Lights

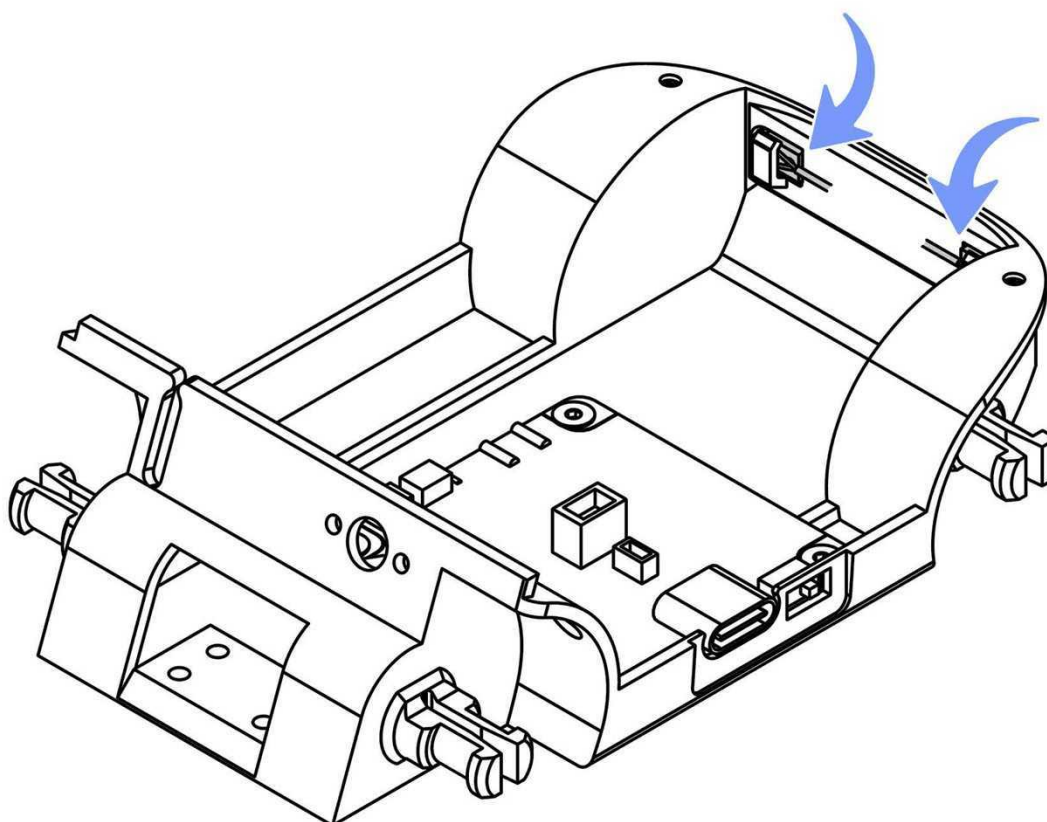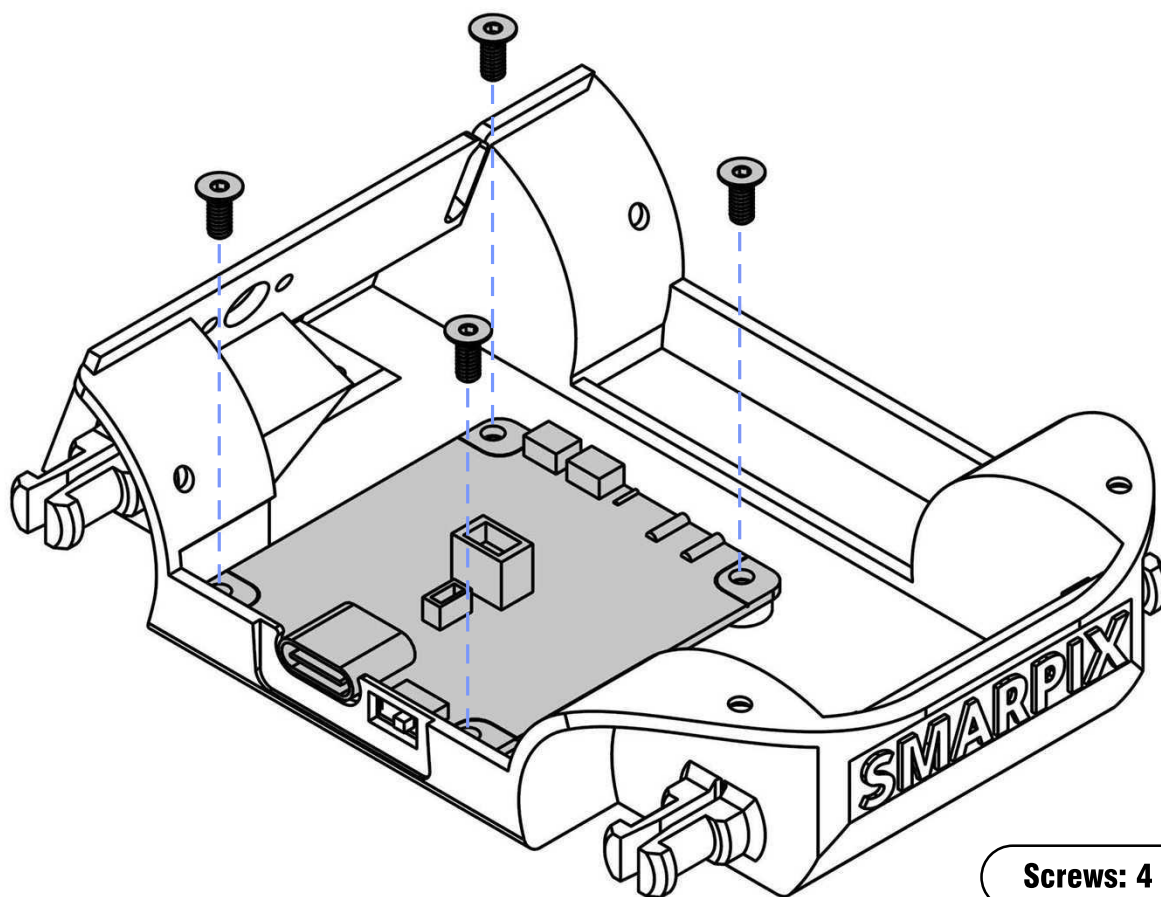


2 | Install Switch Board

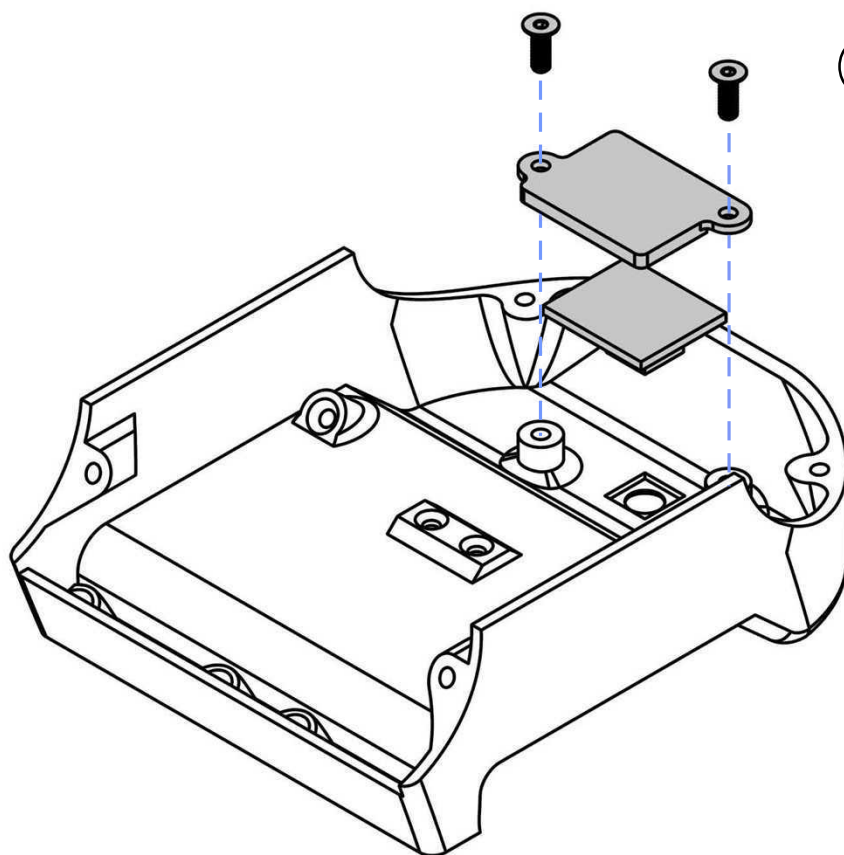


Screws: 2 x M2*6

3 | Install Seat

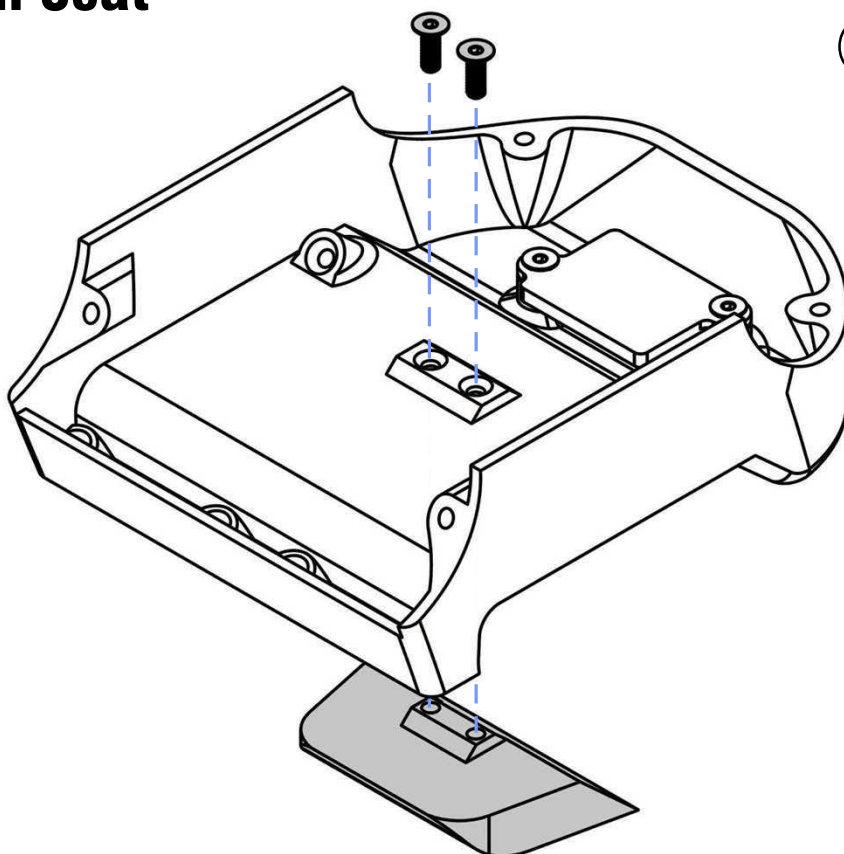


Screws: 2 x M2*6

4 | Install Driver Cab & Steering Wheel

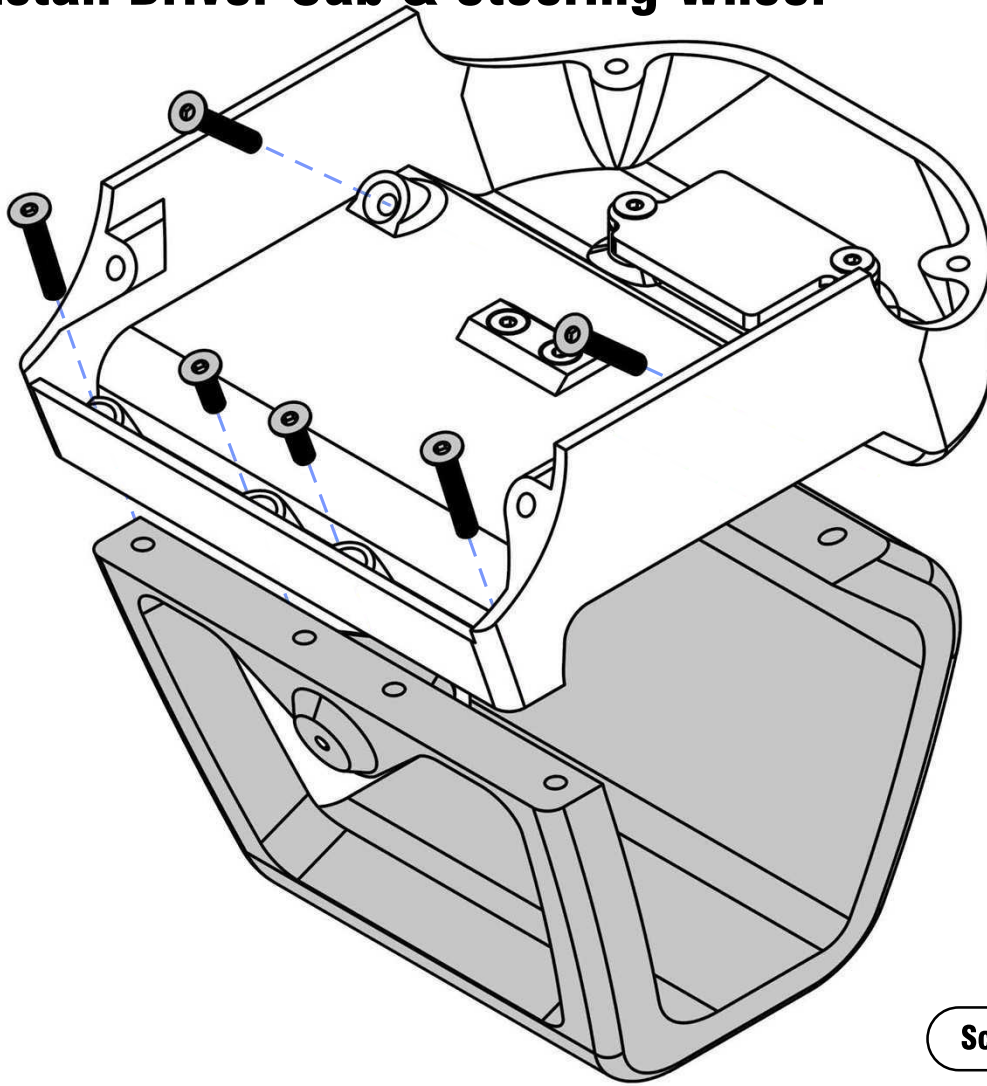


Screws: 4 x M2*12

+ 2 x M2*6

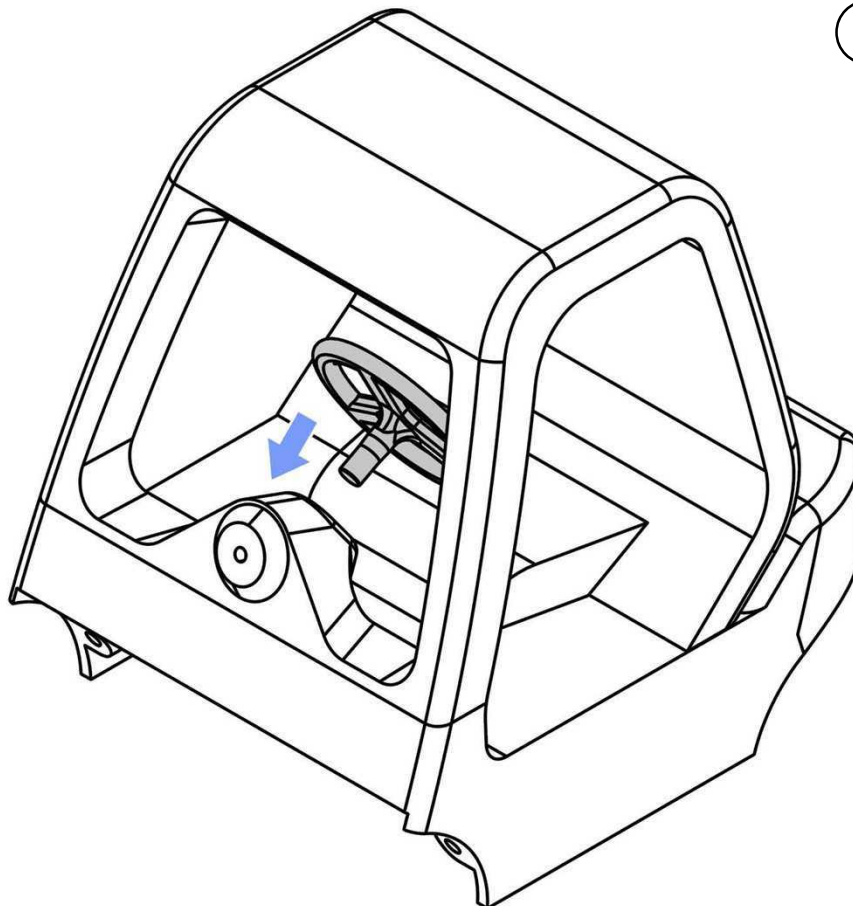


5 | Install Motor

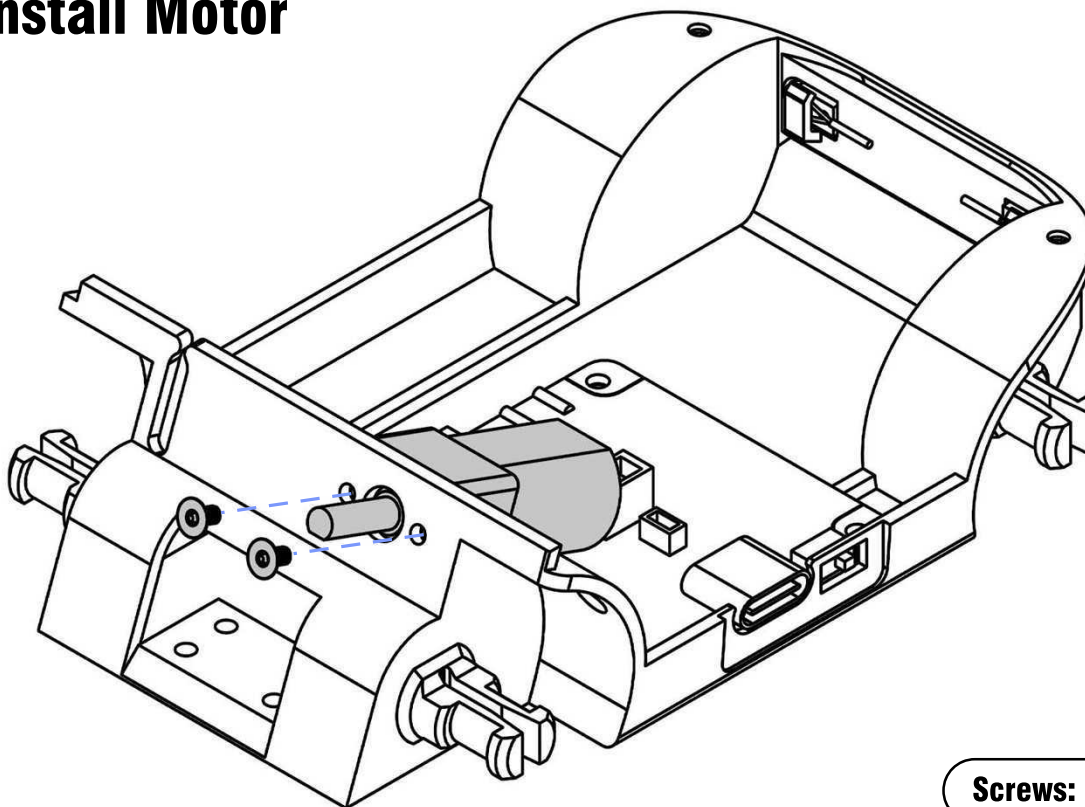


Screws: 2 x M1.6*3

6 | Join Body Parts

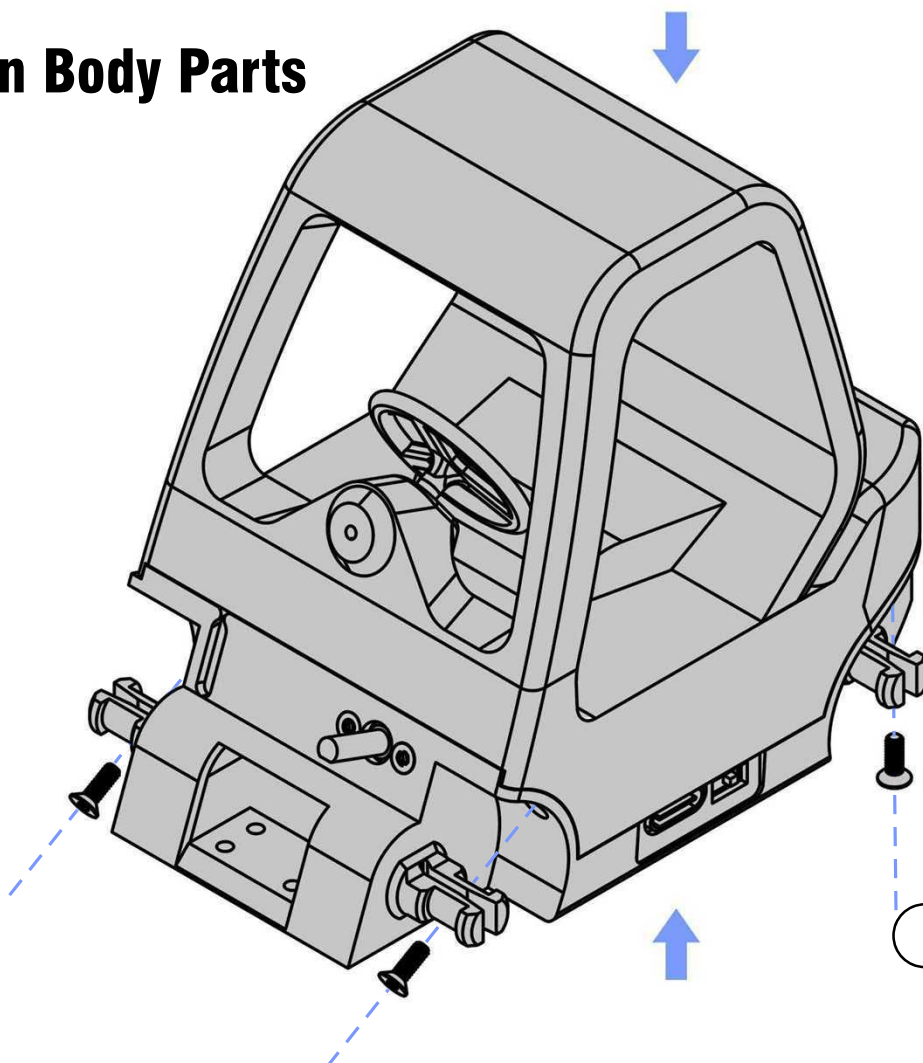


Screws: 4 x M2*6

7 | Install Gears

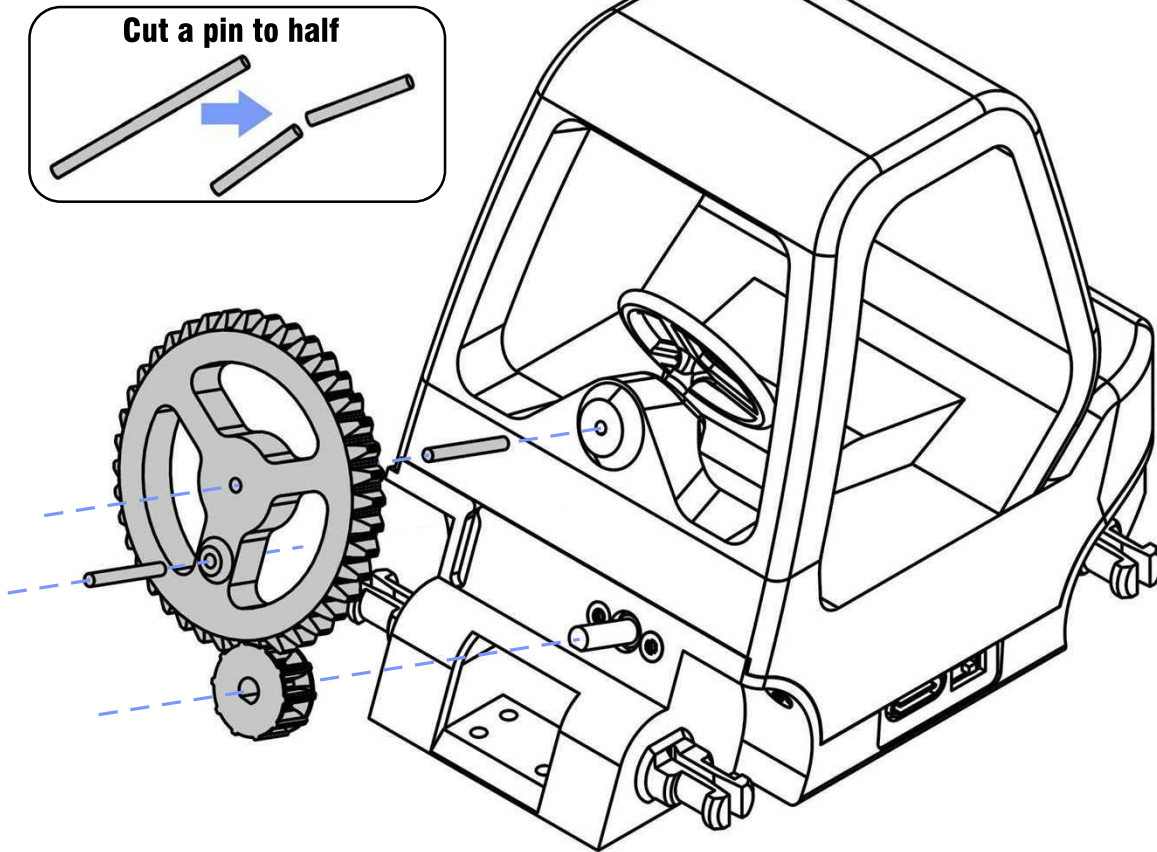


8 | Mount Mast Forks

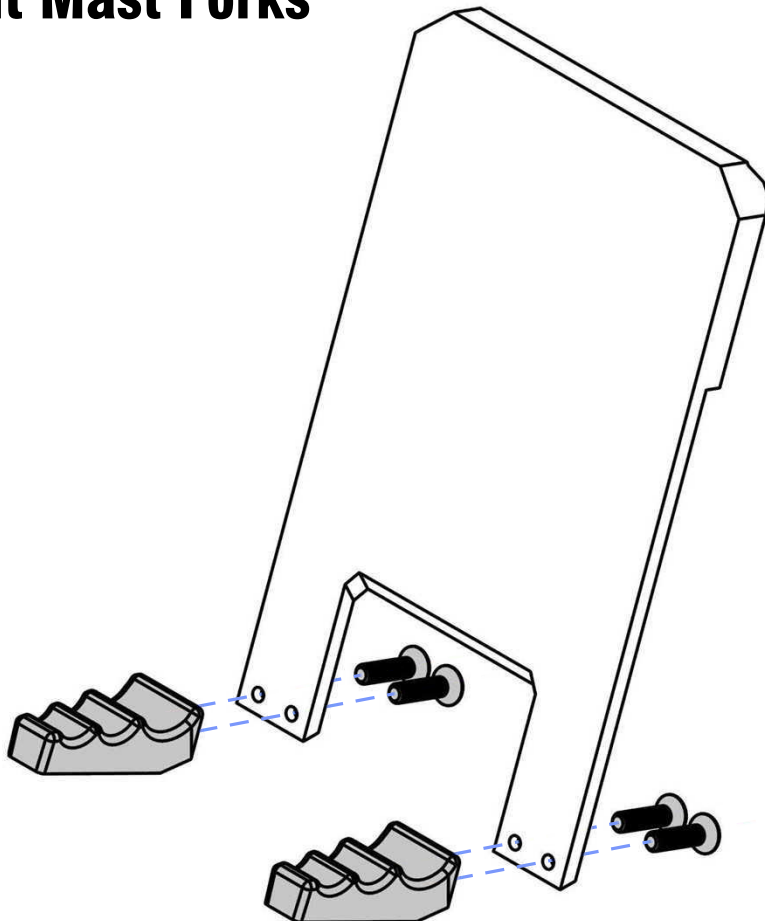


Screws: 4 x M2*12

9 | Insert Dowel Pins

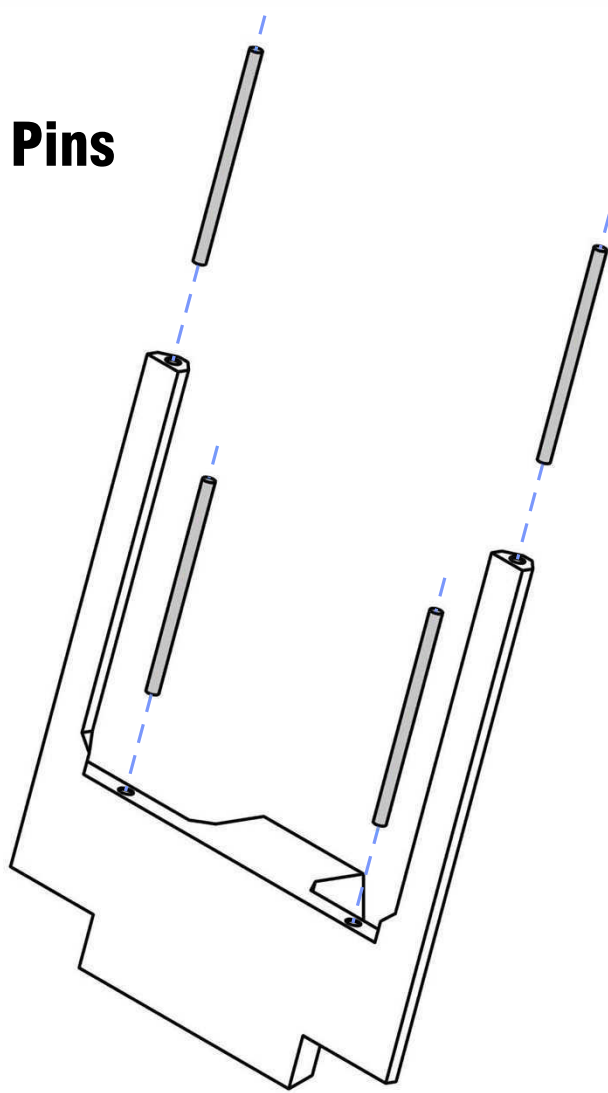


10 | Install Coil & Cover

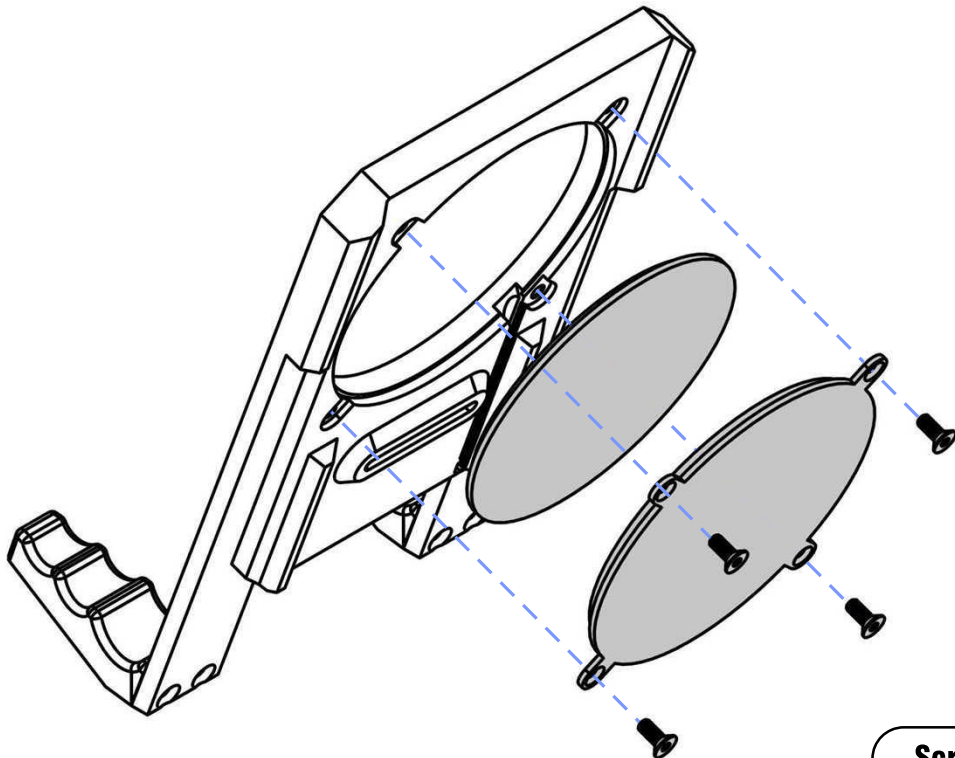


Screws: 4 x M2*5

11 | Connect Mast Parts

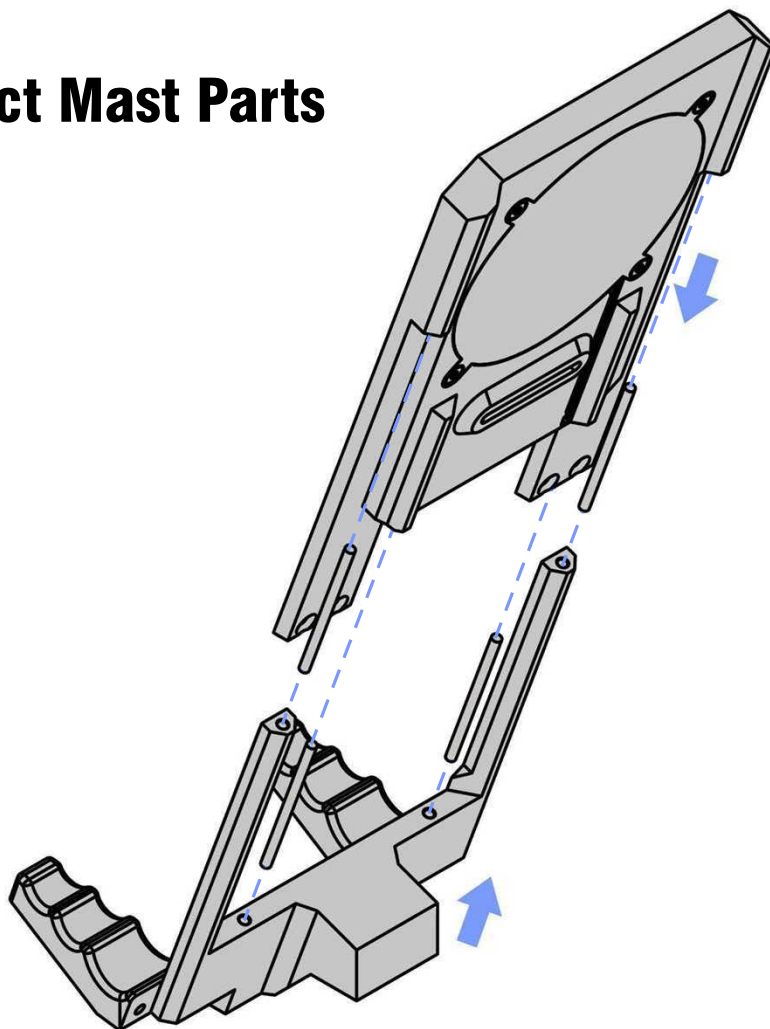


12 | Mount Mast To Body

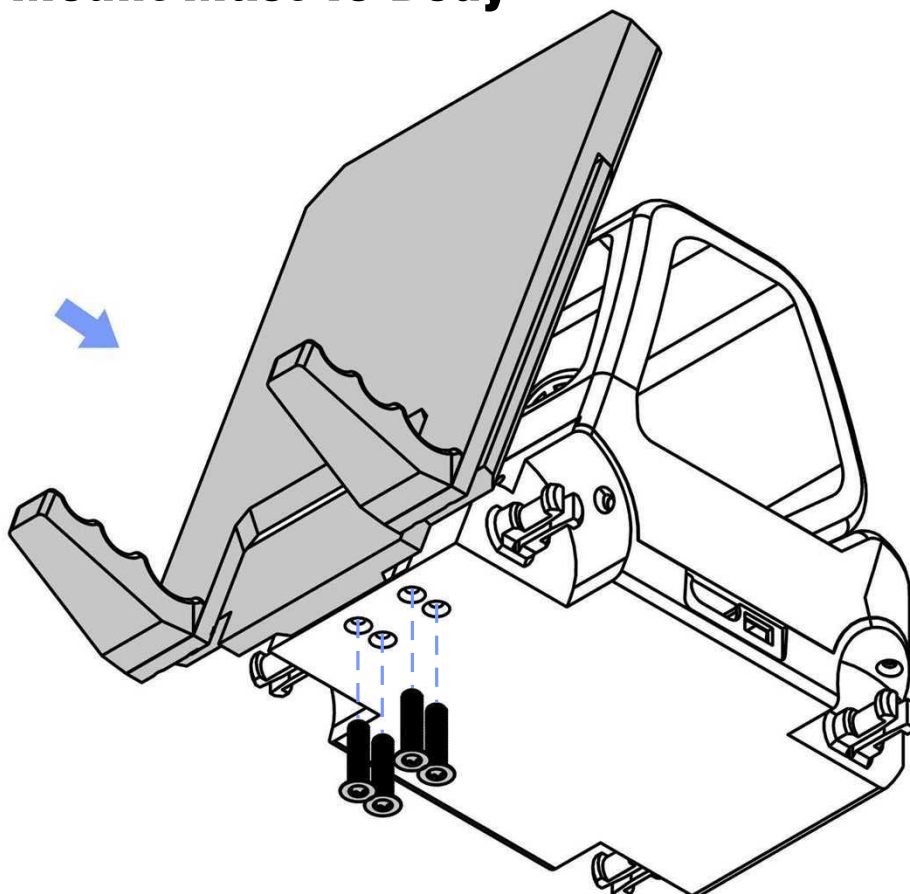

Screws: 4 x M2*12

13

Install Wheels

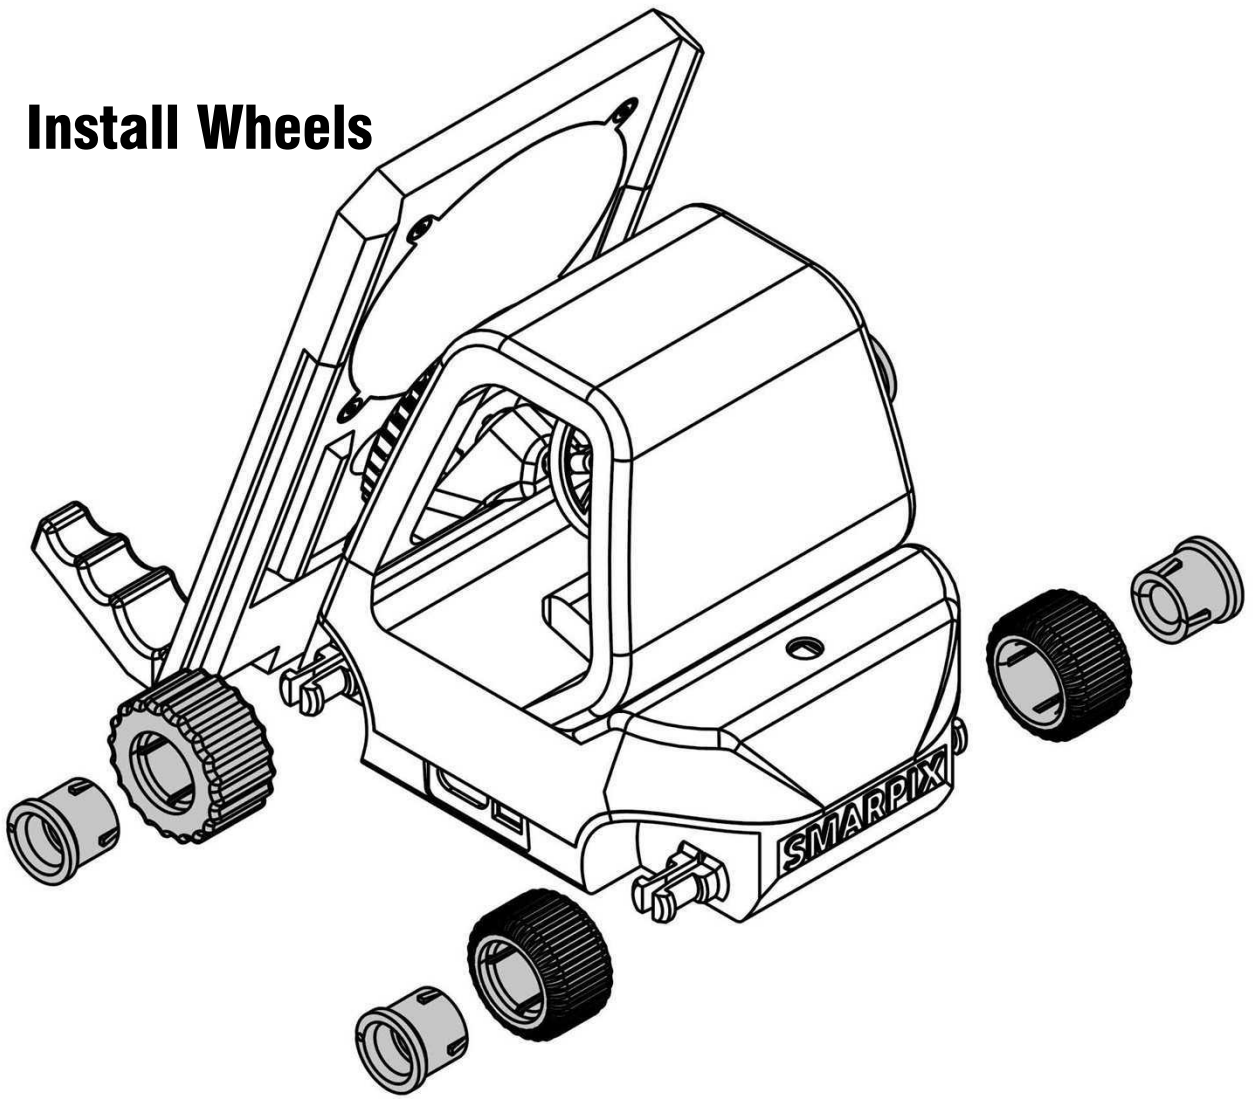

14

All Done

