HOW TO INSTALL WINDSHIELD WIPERS ON A J-HOOK


Instructed By: Dennis Smith



KNOW THE YEAR, MAKE, AND MODEL OF VEHICLE Check your owners' manual for the right blade size.

REMOVE THE PRE – INSTALLED PIN FROM CENTER OF WIPER FRAME.

SLIDE THE FRAME ONTO THE ARM THROUGH THE HOLE THAT MATCHES.

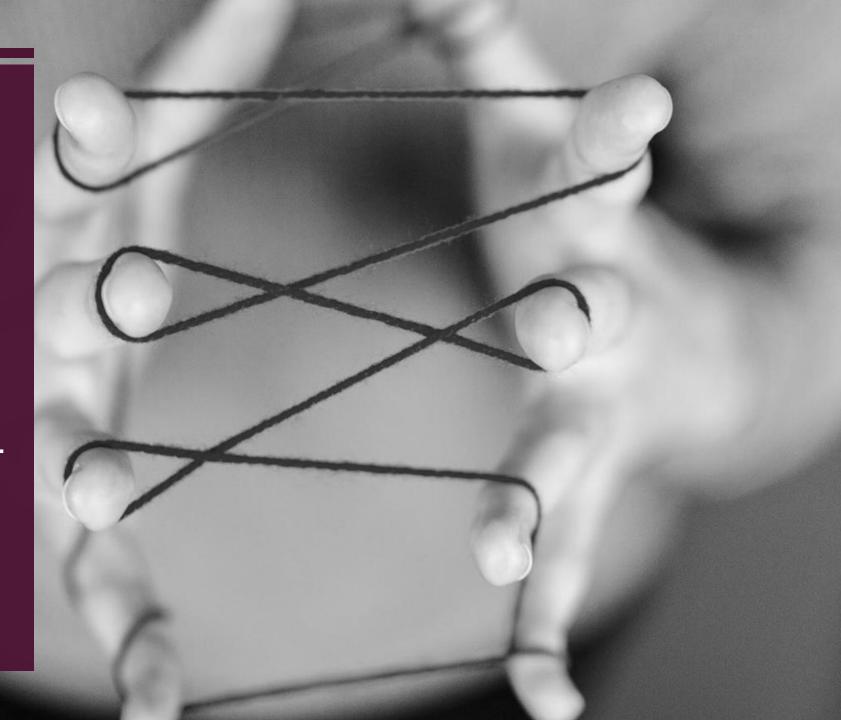

INSTALL THE ALTERNATE CONNECTOR THAT IS IN THE PACKAGE BY SNAPPING THE MIDDLE ARCH.

LIFT THE WIPER OFF YOUR WINDSHIELD

PRESS DOWN ON THE WIPER TAB (IF THERE IS ONE).



Pull the blade straight down toward the windshield to remove old blade

Slide your new wiper blade onto the hook until it clicks in place

