




Laser Block Dimensions

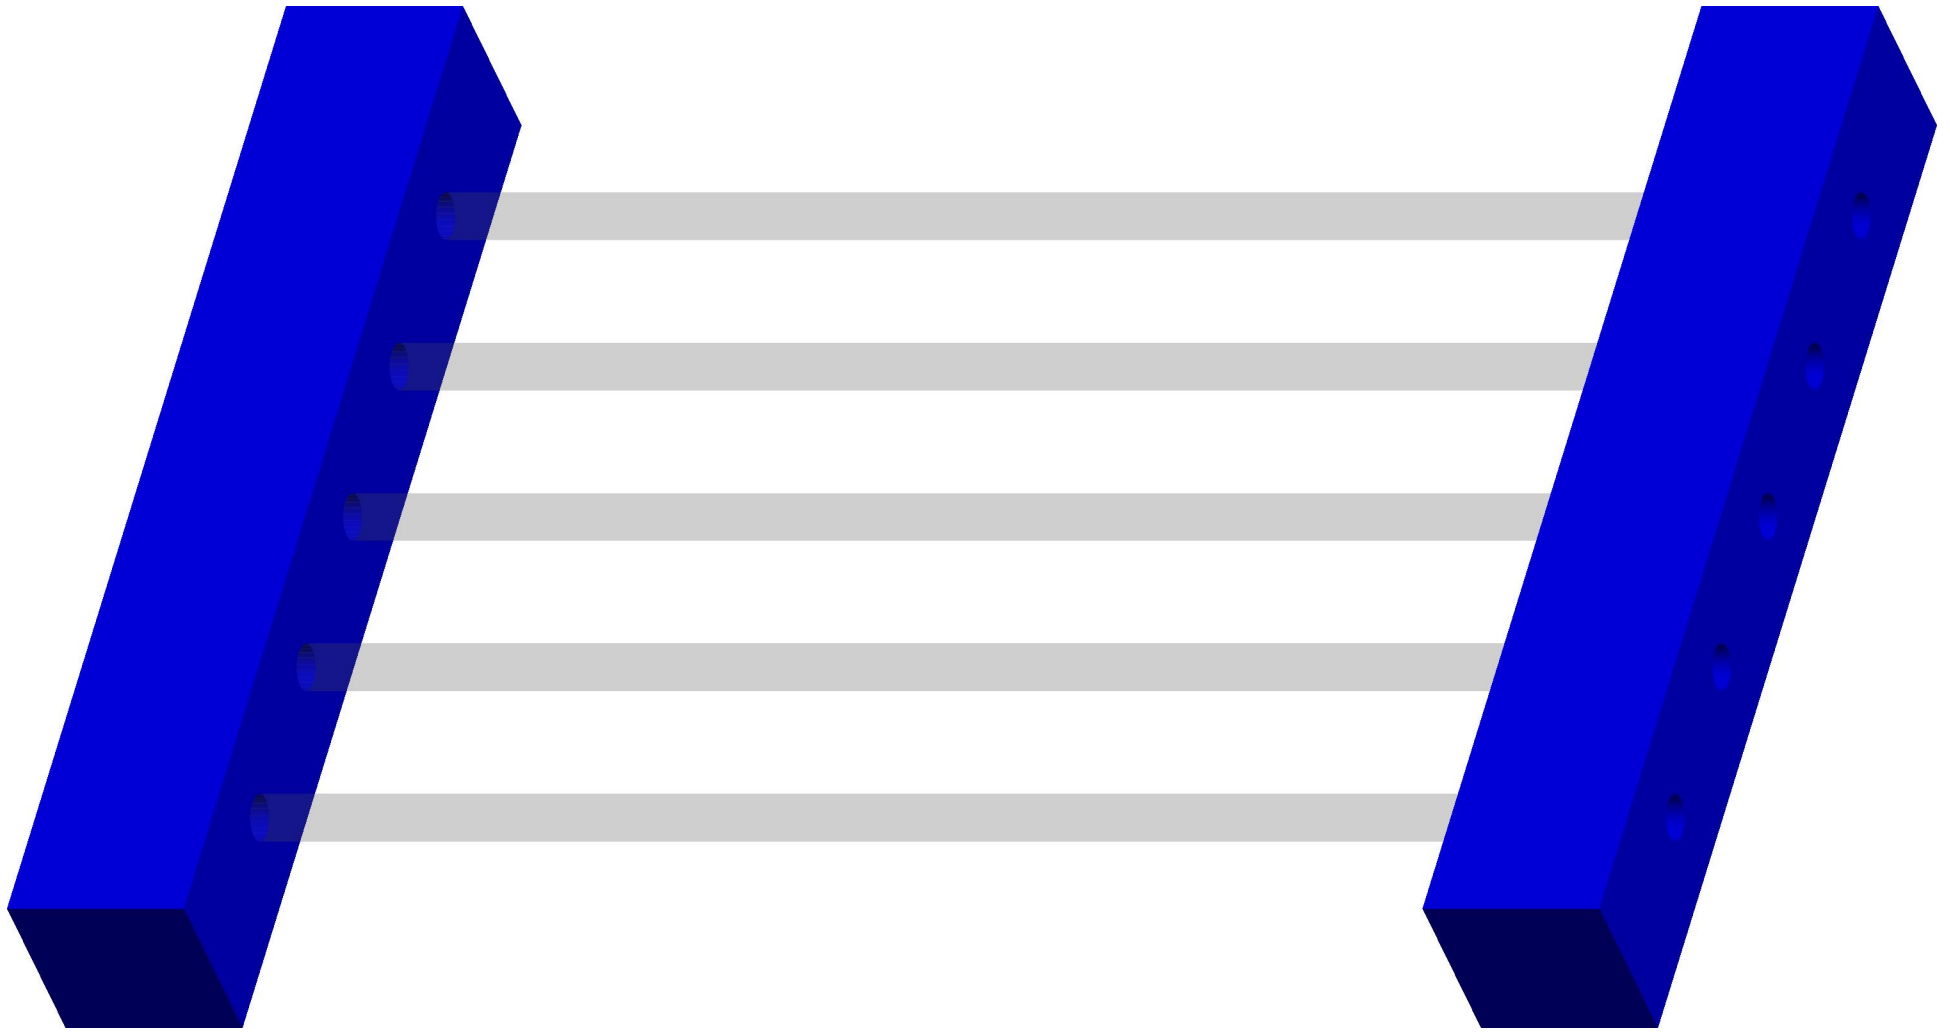

Units: Inches

Transducer

Receiver

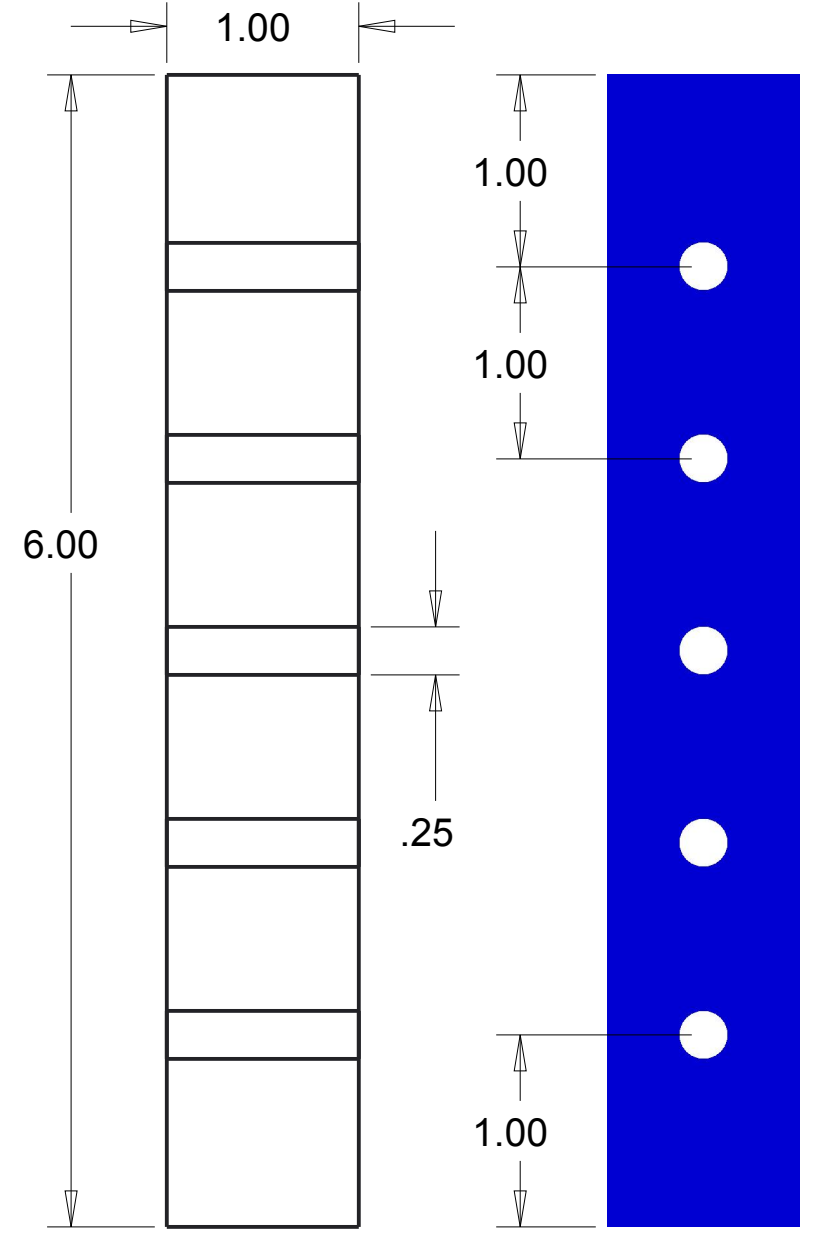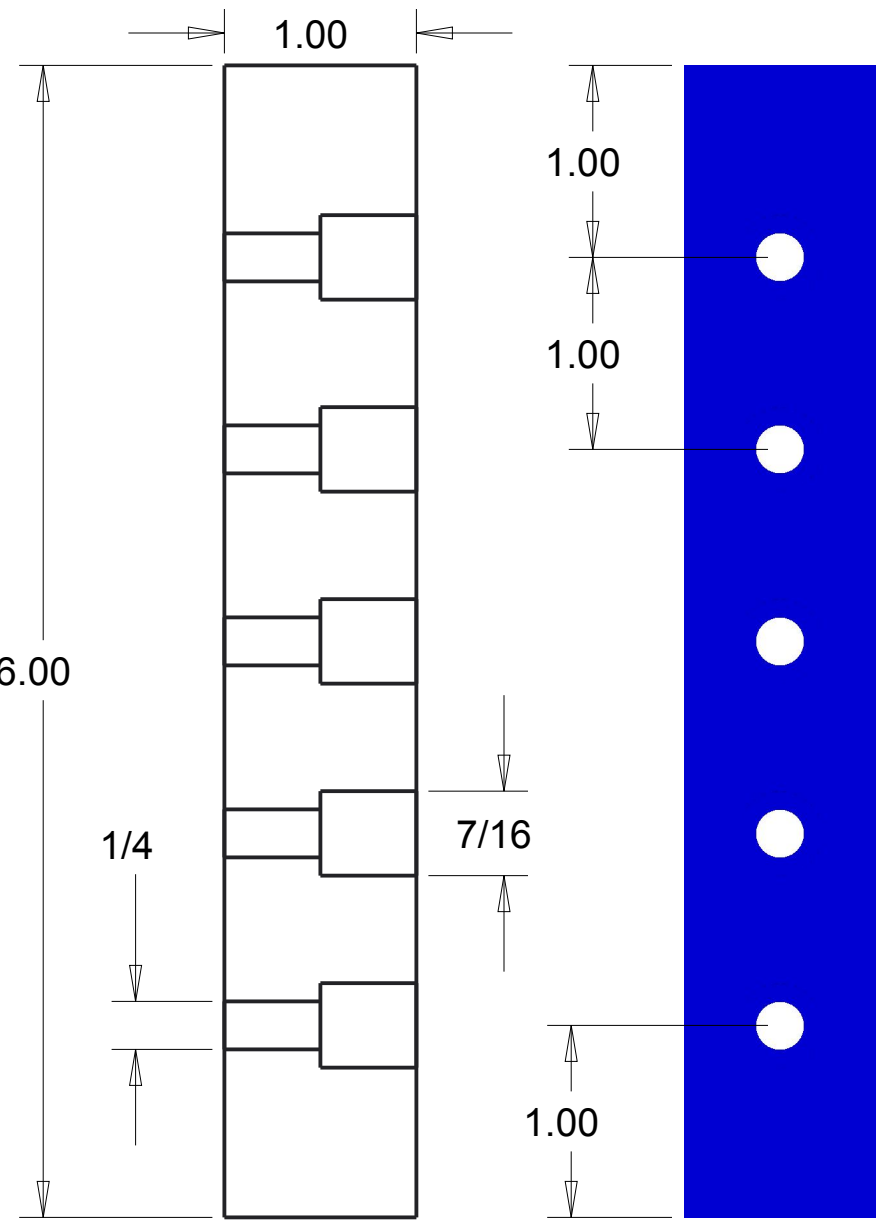

To make the 1/4 in acylic rods fit into the 1/4 in diamentor holes take an acylic rod and break a corner off at a end. Twist and insert to a depth of approximently .4 in into the wax