

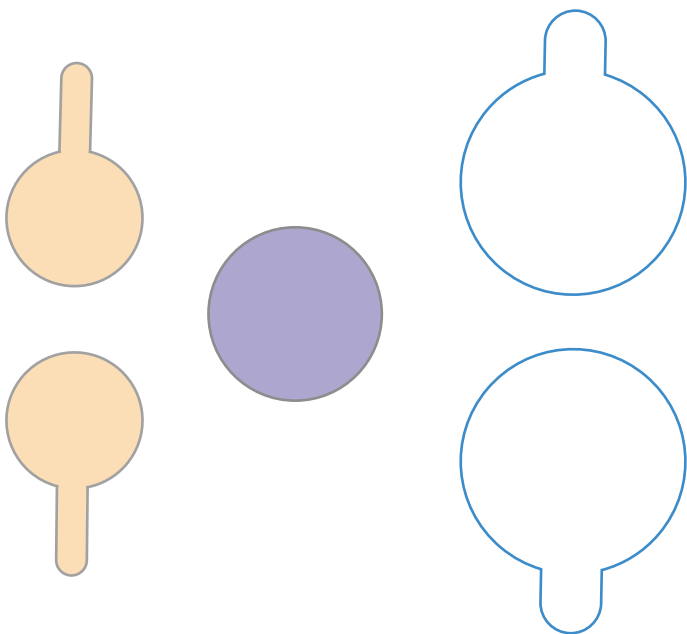


Conductive Fabric
Switch

How to Put Together

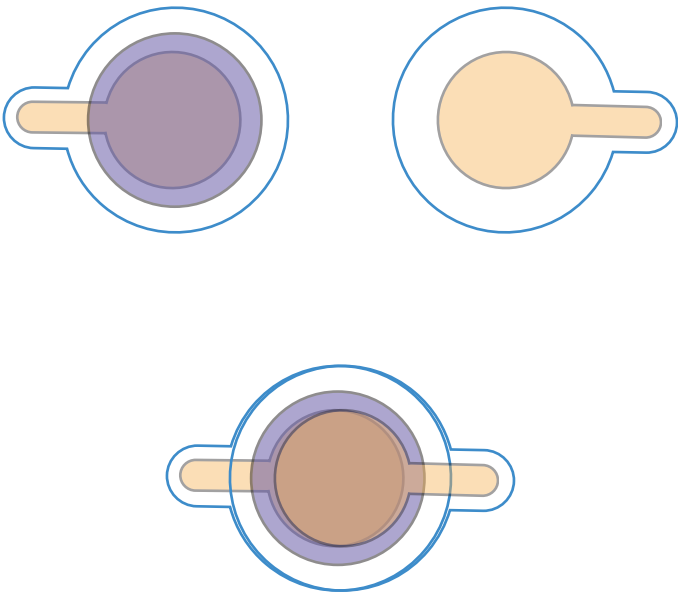

Iron on Conductive Fabric



Netting or Other Spacer Fabric



Fabric

