
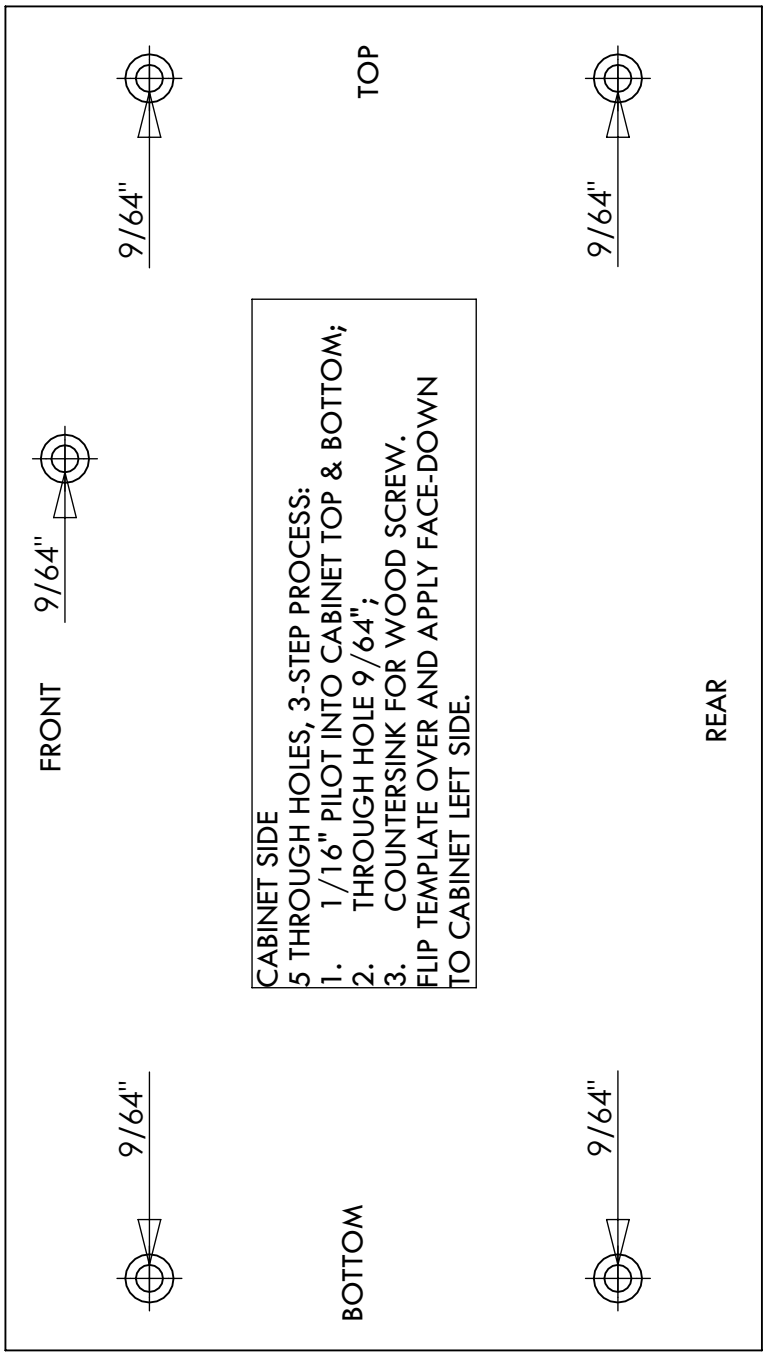





VERIFY THE TEMPLATE PRINTS ACCURATELY TO FULL-SIZE: CHECK BOTH SCALES WITH RULER. MAKE SURE PRINTER IS SET FOR 100%.



ZEPPELIN DESIGN LABS, LLC
 2950 N WESTERN AVE CHICAGO IL 60618
 WWW.ZEPPELINDESIGNLABS.COM

**PERCOLATOR 2W AMP
 FULL SIZE DRILLING TEMPLATES**

VERIFY THE TEMPLATE PRINTS ACCURATELY
TO FULL-SIZE: CHECK BOTH SCALES WITH
RULER. MAKE SURE PRINTER IS SET FOR 100%.

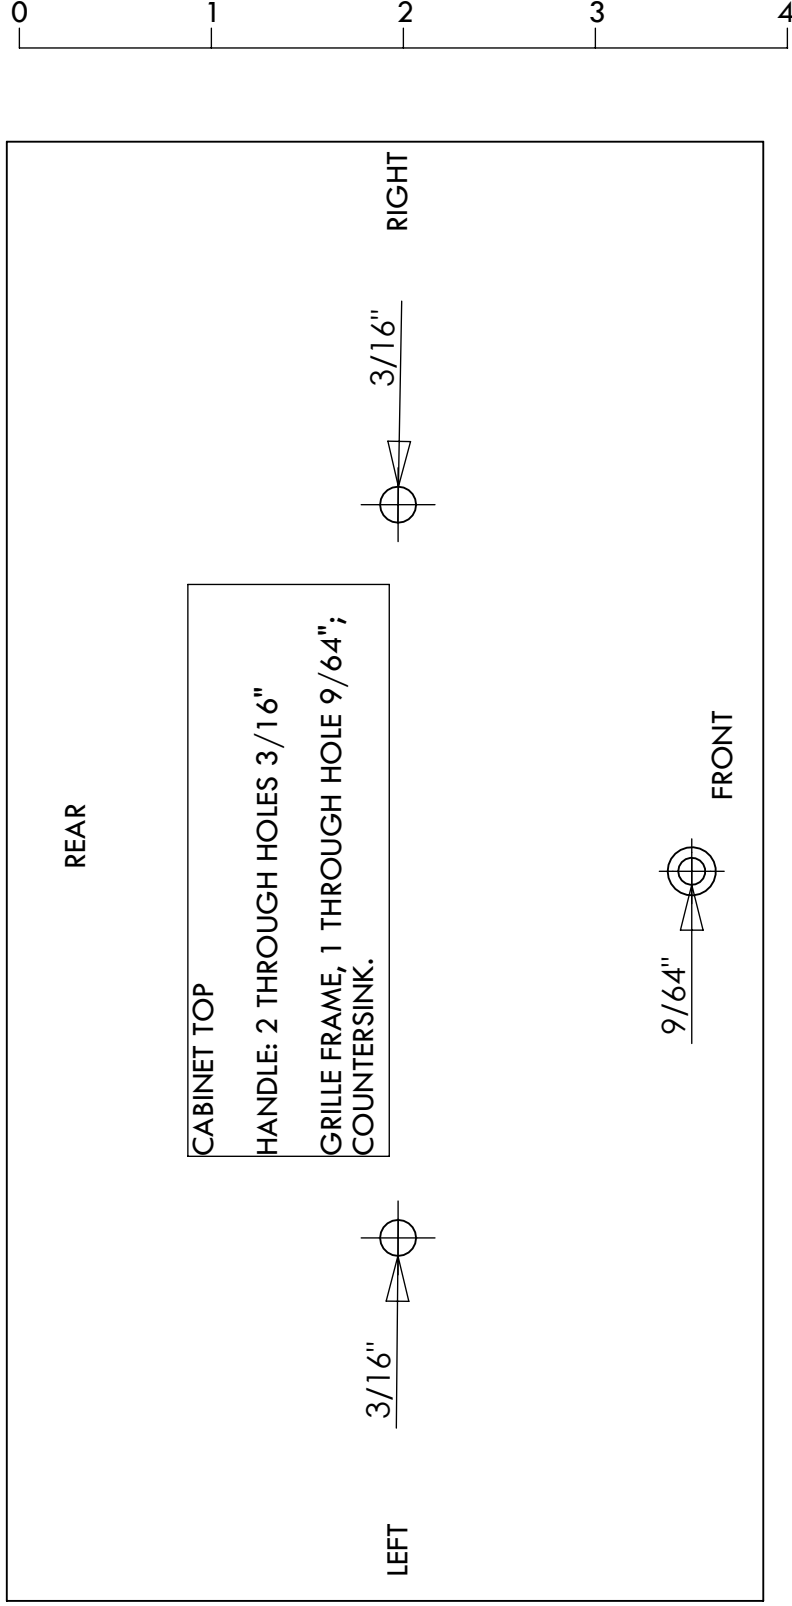




ZEPPELIN DESIGN LABS, LLC
2950 N WESTERN AVE CHICAGO IL 60618
WWW.ZEPPELINDESIGNLABS.COM

**PERCOLATOR 2W AMP
FULL SIZE DRILLING TEMPLATES**

REV. DATE 1/27/2015

PAGE 2 of 3

VERIFY THE TEMPLATE PRINTS ACCURATELY TO FULL-SIZE: CHECK BOTH SCALES WITH RULER. MAKE SURE PRINTER IS SET FOR 100%.

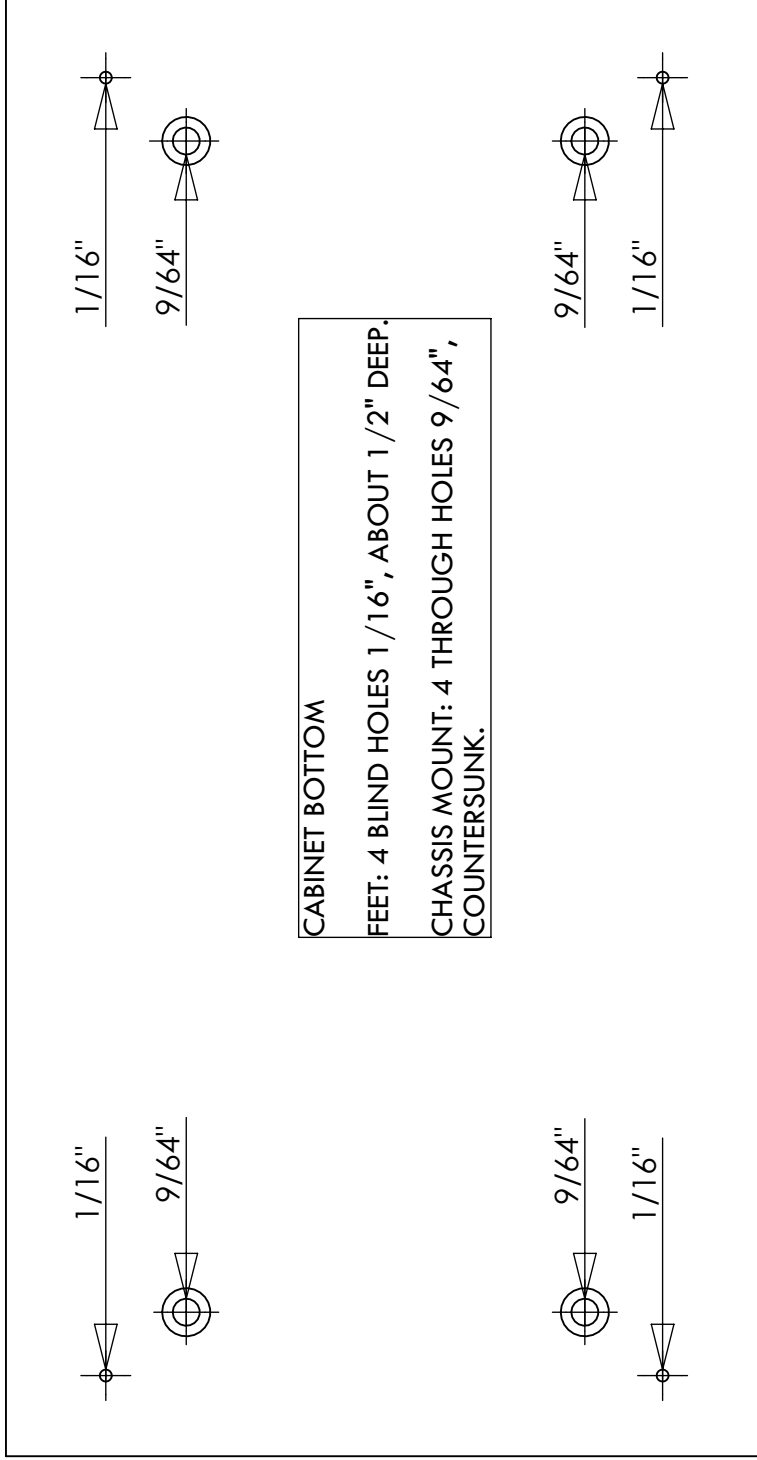

ZEPPELIN DESIGN LABS, LLC
2950 N WESTERN AVE CHICAGO IL 60618
WWW.ZEPPELINDESIGNLABS.COM

**PERCOLATOR 2W AMP
FULL SIZE DRILLING TEMPLATES**

REV. DATE 1/27/2015

PAGE 3 of 3