




Assembly Steps:

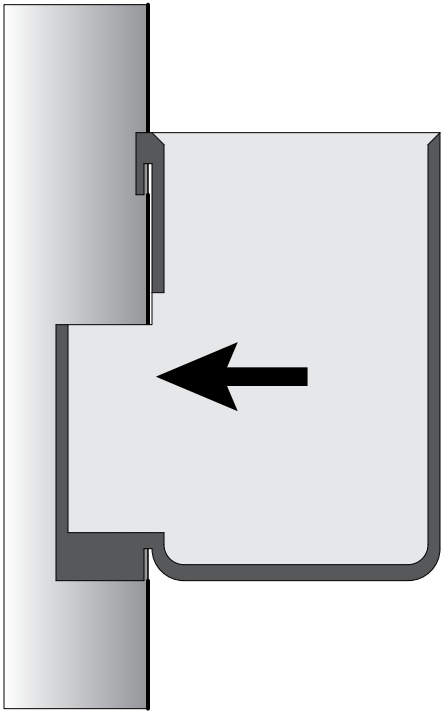

Push in Reservoir.

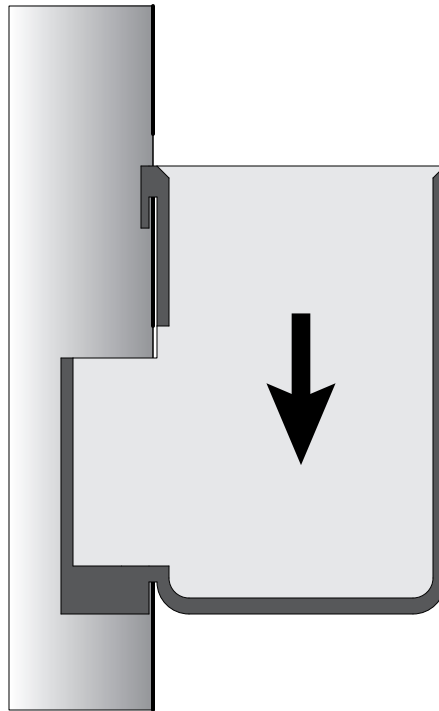

Push Reservoir Down
into Slot.

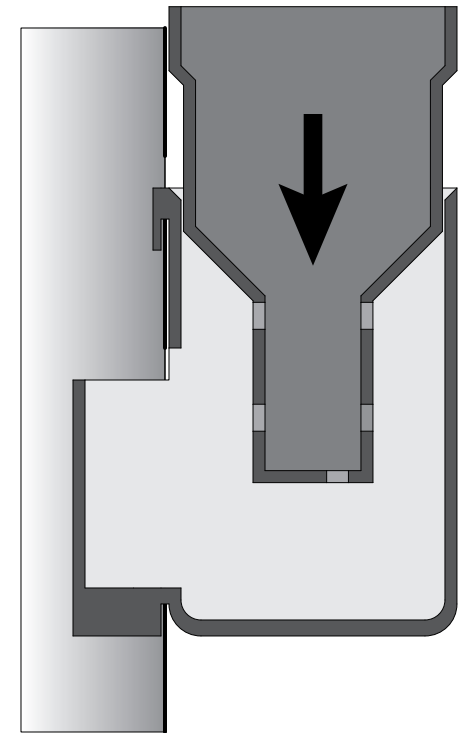

Place Planting basket
into Reservoir.