


Template 5

Control Cavity

1. Cut on outer lines and mount paper template to 1/2" MDF.
3. Drill out the corners of the cavity and saw between holes.
4. Cut close to the lines but not on them. file and sand to the line for best fit.

Routing

1. Check with your router specs but I used the template as is.
2. I used a 1/2" router bit for this cut
3. You'll need to route this in 2 steps. Once with this template and once without to reach a final depth of of 1 5/8" for the cavity.

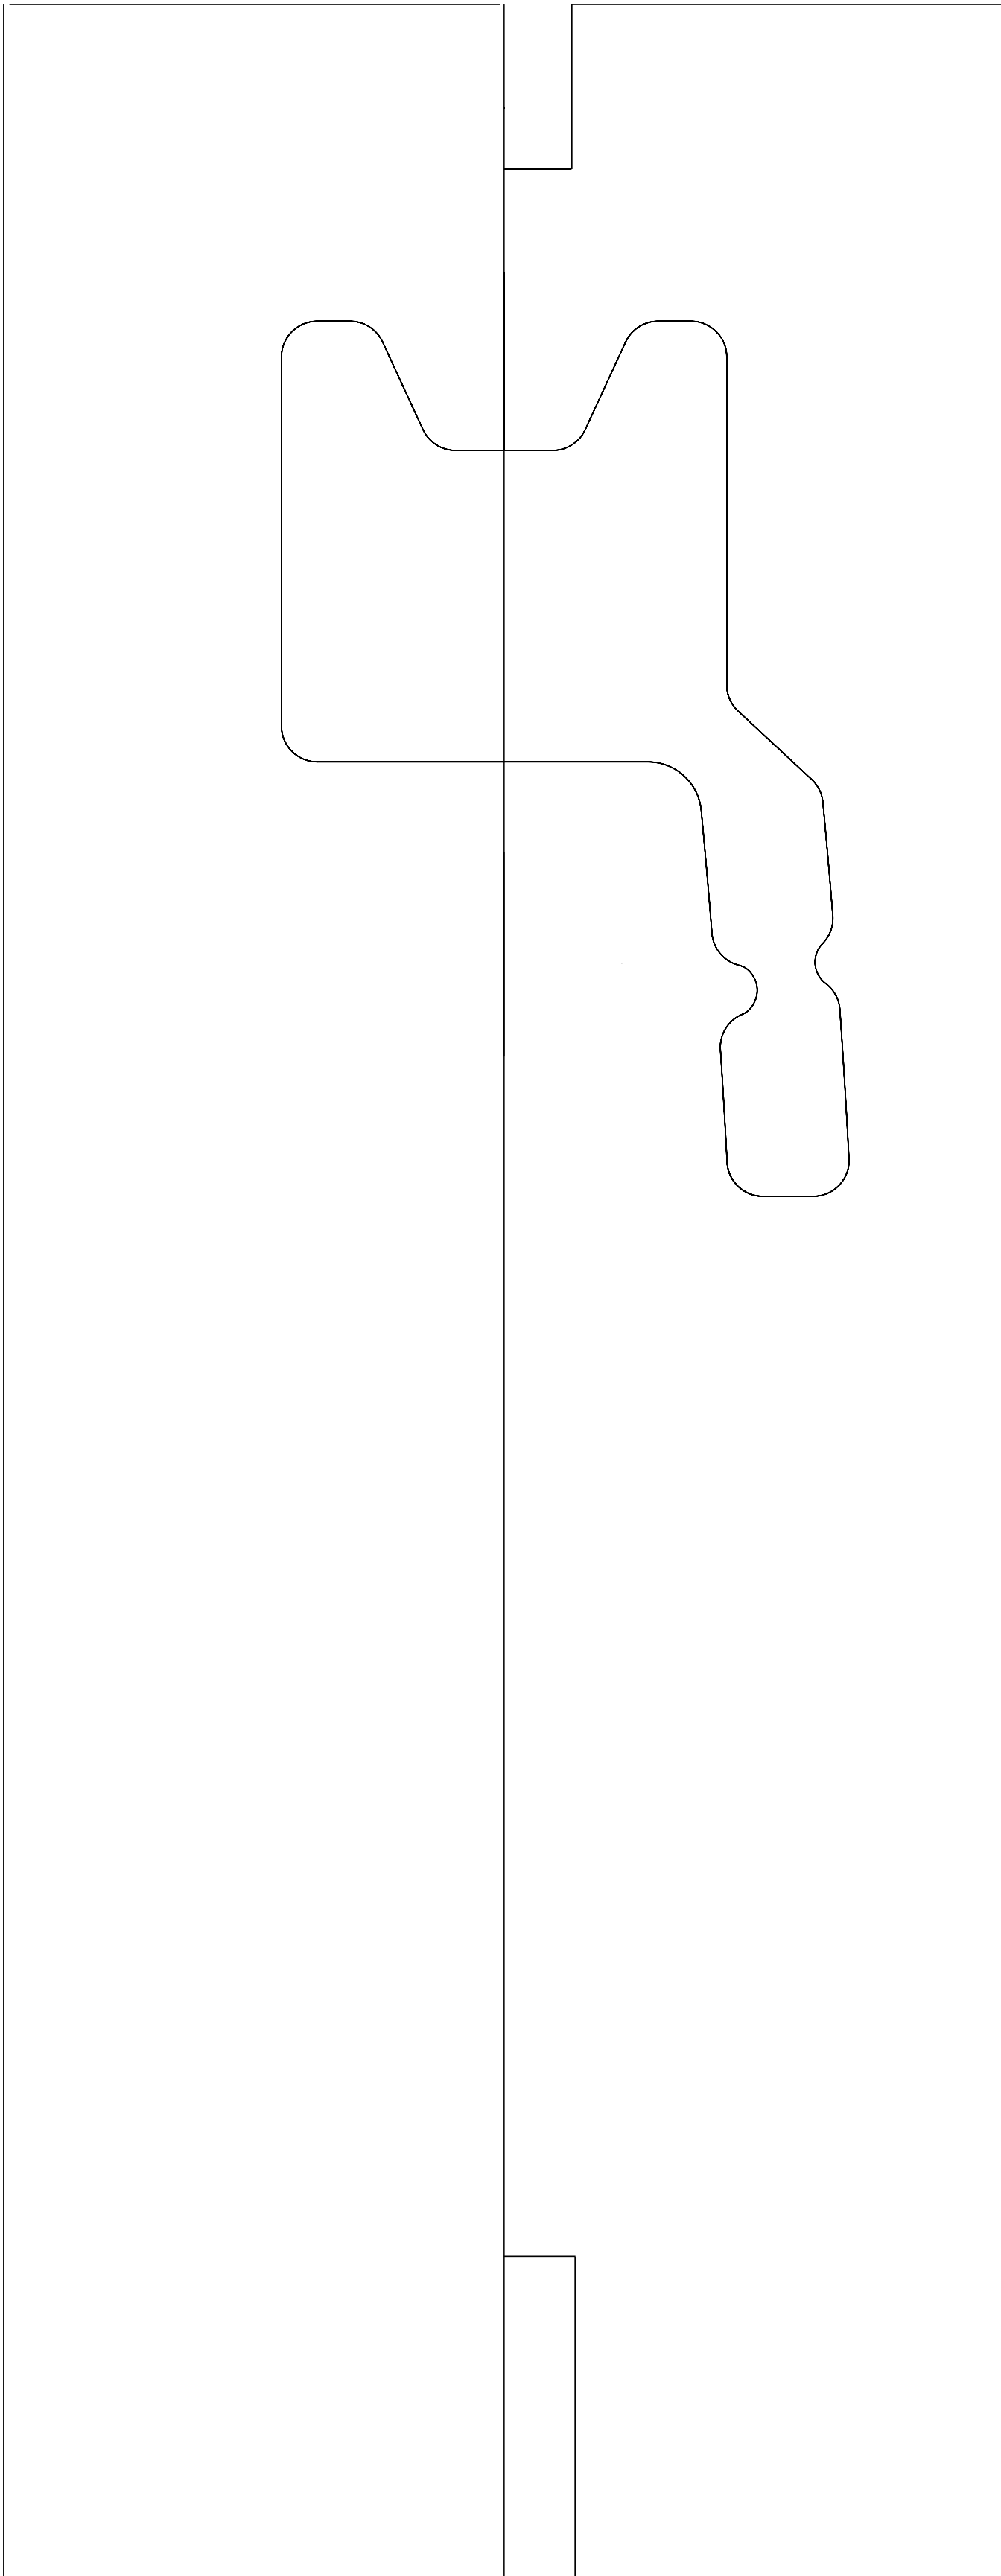

4 Inches