


Thru-Bolt and Mounting Bolt Layout for 30, 60 & 90" MikroBeamers

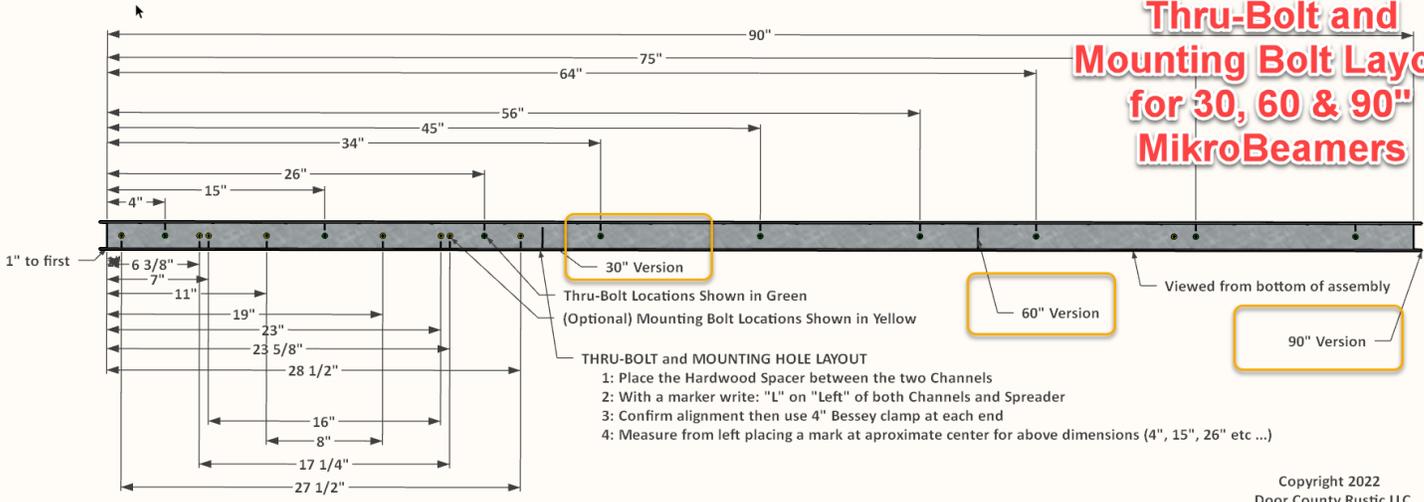

Thru-Bolt Locations Shown in Green
(Optional) Mounting Bolt Locations Shown in Yellow

- THRU-BOLT and MOUNTING HOLE LAYOUT**
- 1: Place the Hardwood Spacer between the two Channels
 - 2: With a marker write: "L" on "Left" of both Channels and Spreader
 - 3: Confirm alignment then use 4" Bessey clamp at each end
 - 4: Measure from left placing a mark at approximate center for above dimensions (4", 15", 26" etc ...)

Copyright 2022
Door County Rustic LLC