


BUTTER WARMER WIRING DIAGRAM

LED POLARITY

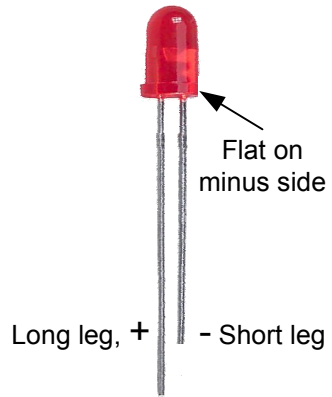

FAN DETAIL

Small scraps of copper-clad PC board, glued to partition above and below fan, resistors soldered on. Keep resistors about 6mm away from fan inlet. Cover the exposed copper with a heat-resistant, electrically insulating material.

