


Print out both halves of the template. On the right side template cut along the dotted line.

Align the pages carefully so that the two halves are exactly in the correct position and tape the pages together with scotch tape.

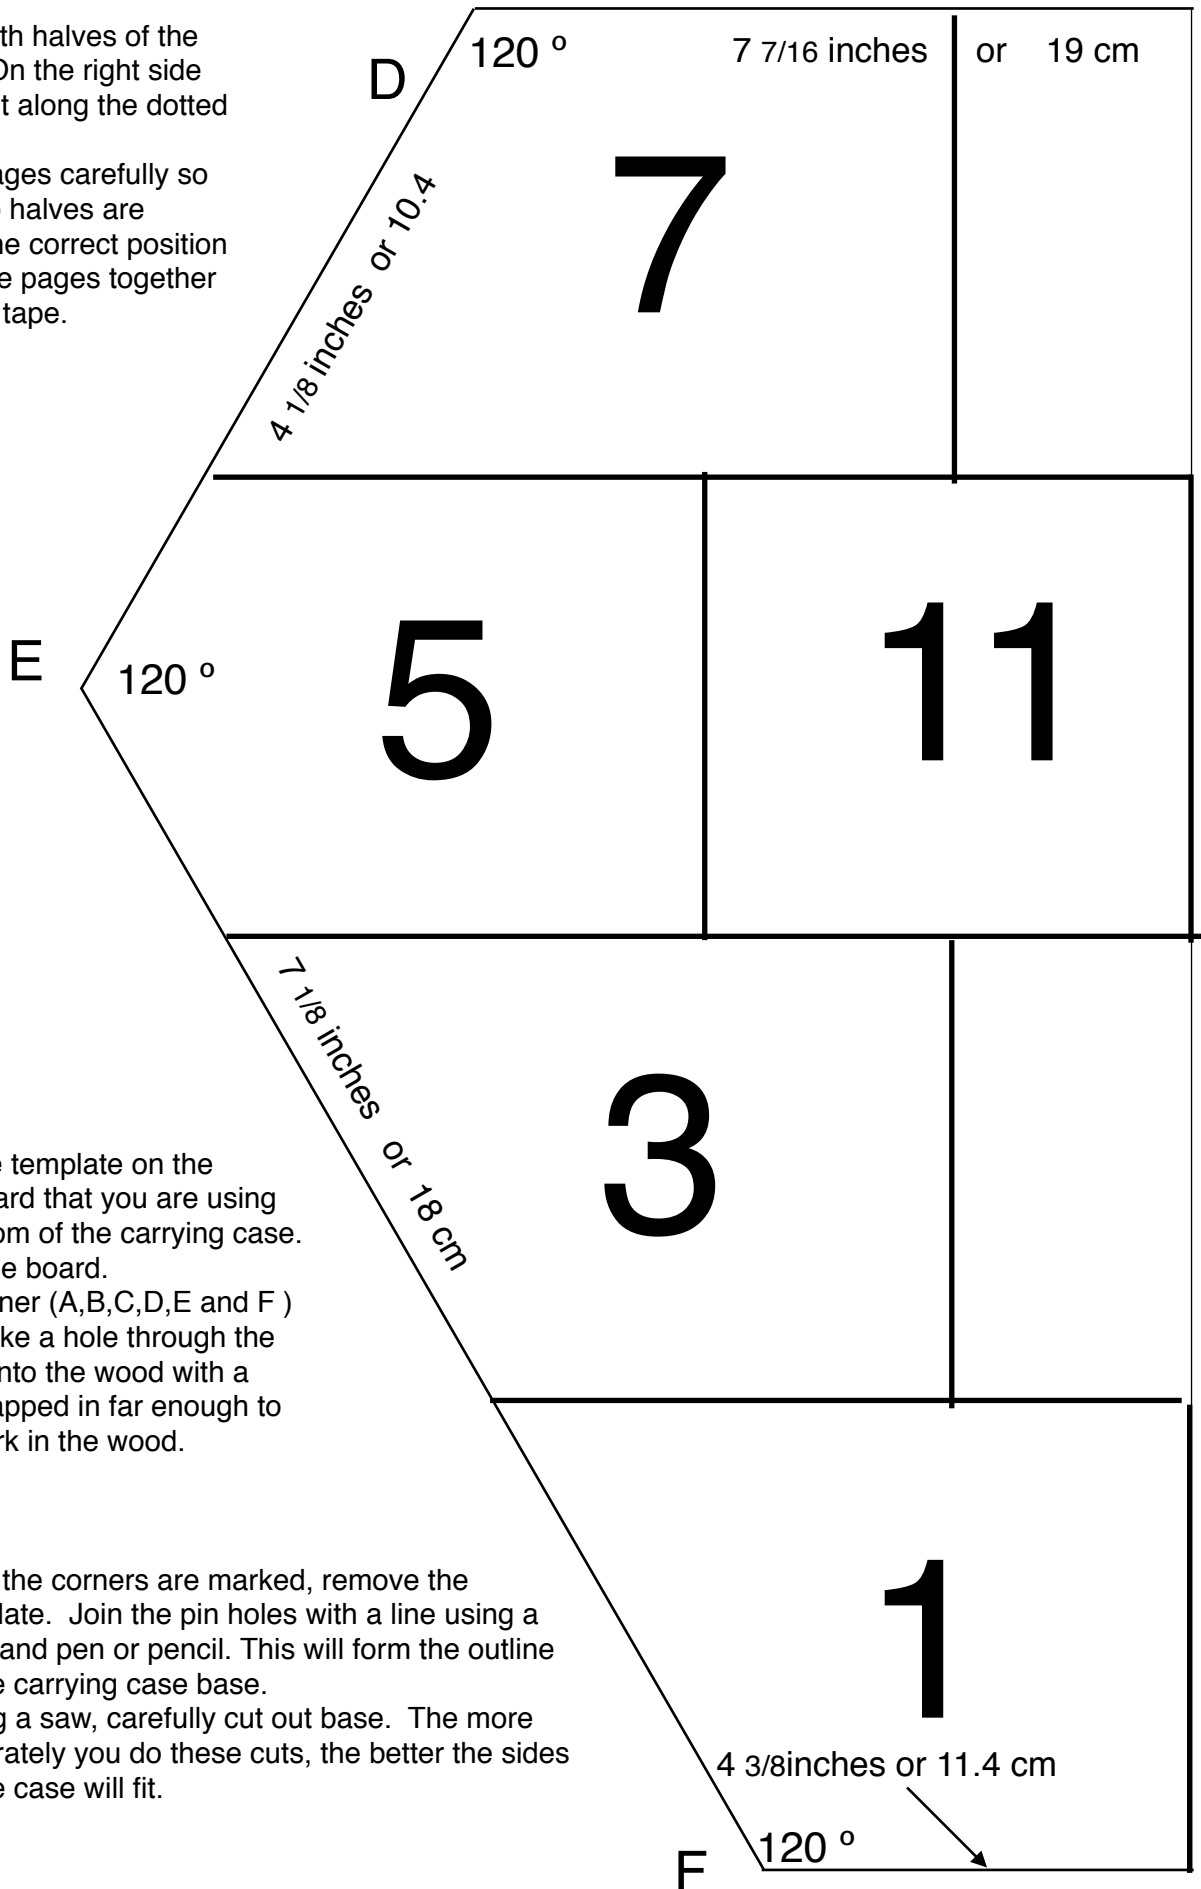

Position the template on the wooden board that you are using for the bottom of the carrying case. Tape it to the board.

At each corner (A,B,C,D,E and F ) carefully poke a hole through the paper and into the wood with a small nail tapped in far enough to make a mark in the wood.

After the corners are marked, remove the template. Join the pin holes with a line using a ruler and pen or pencil. This will form the outline of the carrying case base. Using a saw, carefully cut out base. The more accurately you do these cuts, the better the sides of the case will fit.