










FINALLY ADD YOUR HARNESS. IN THIS CASE WE USED AN ELASTIC PIECE OF RUBBER CUT FROM A BICYCLE TUBE. ALTHOUGH ANY PIECE OF ELASTIC OR LARGE RUBBER

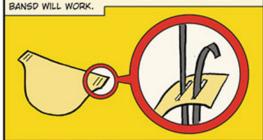

TO FASTEN YOUR ELASTIC BAND JUST TAKE THE STRAP AND GO OUT THE INNER SLIT, THEN COME BACK THROUGH THE OUTER SLIT. DO THIS FOR BOTH SIDES.





