


# Bill Of Material

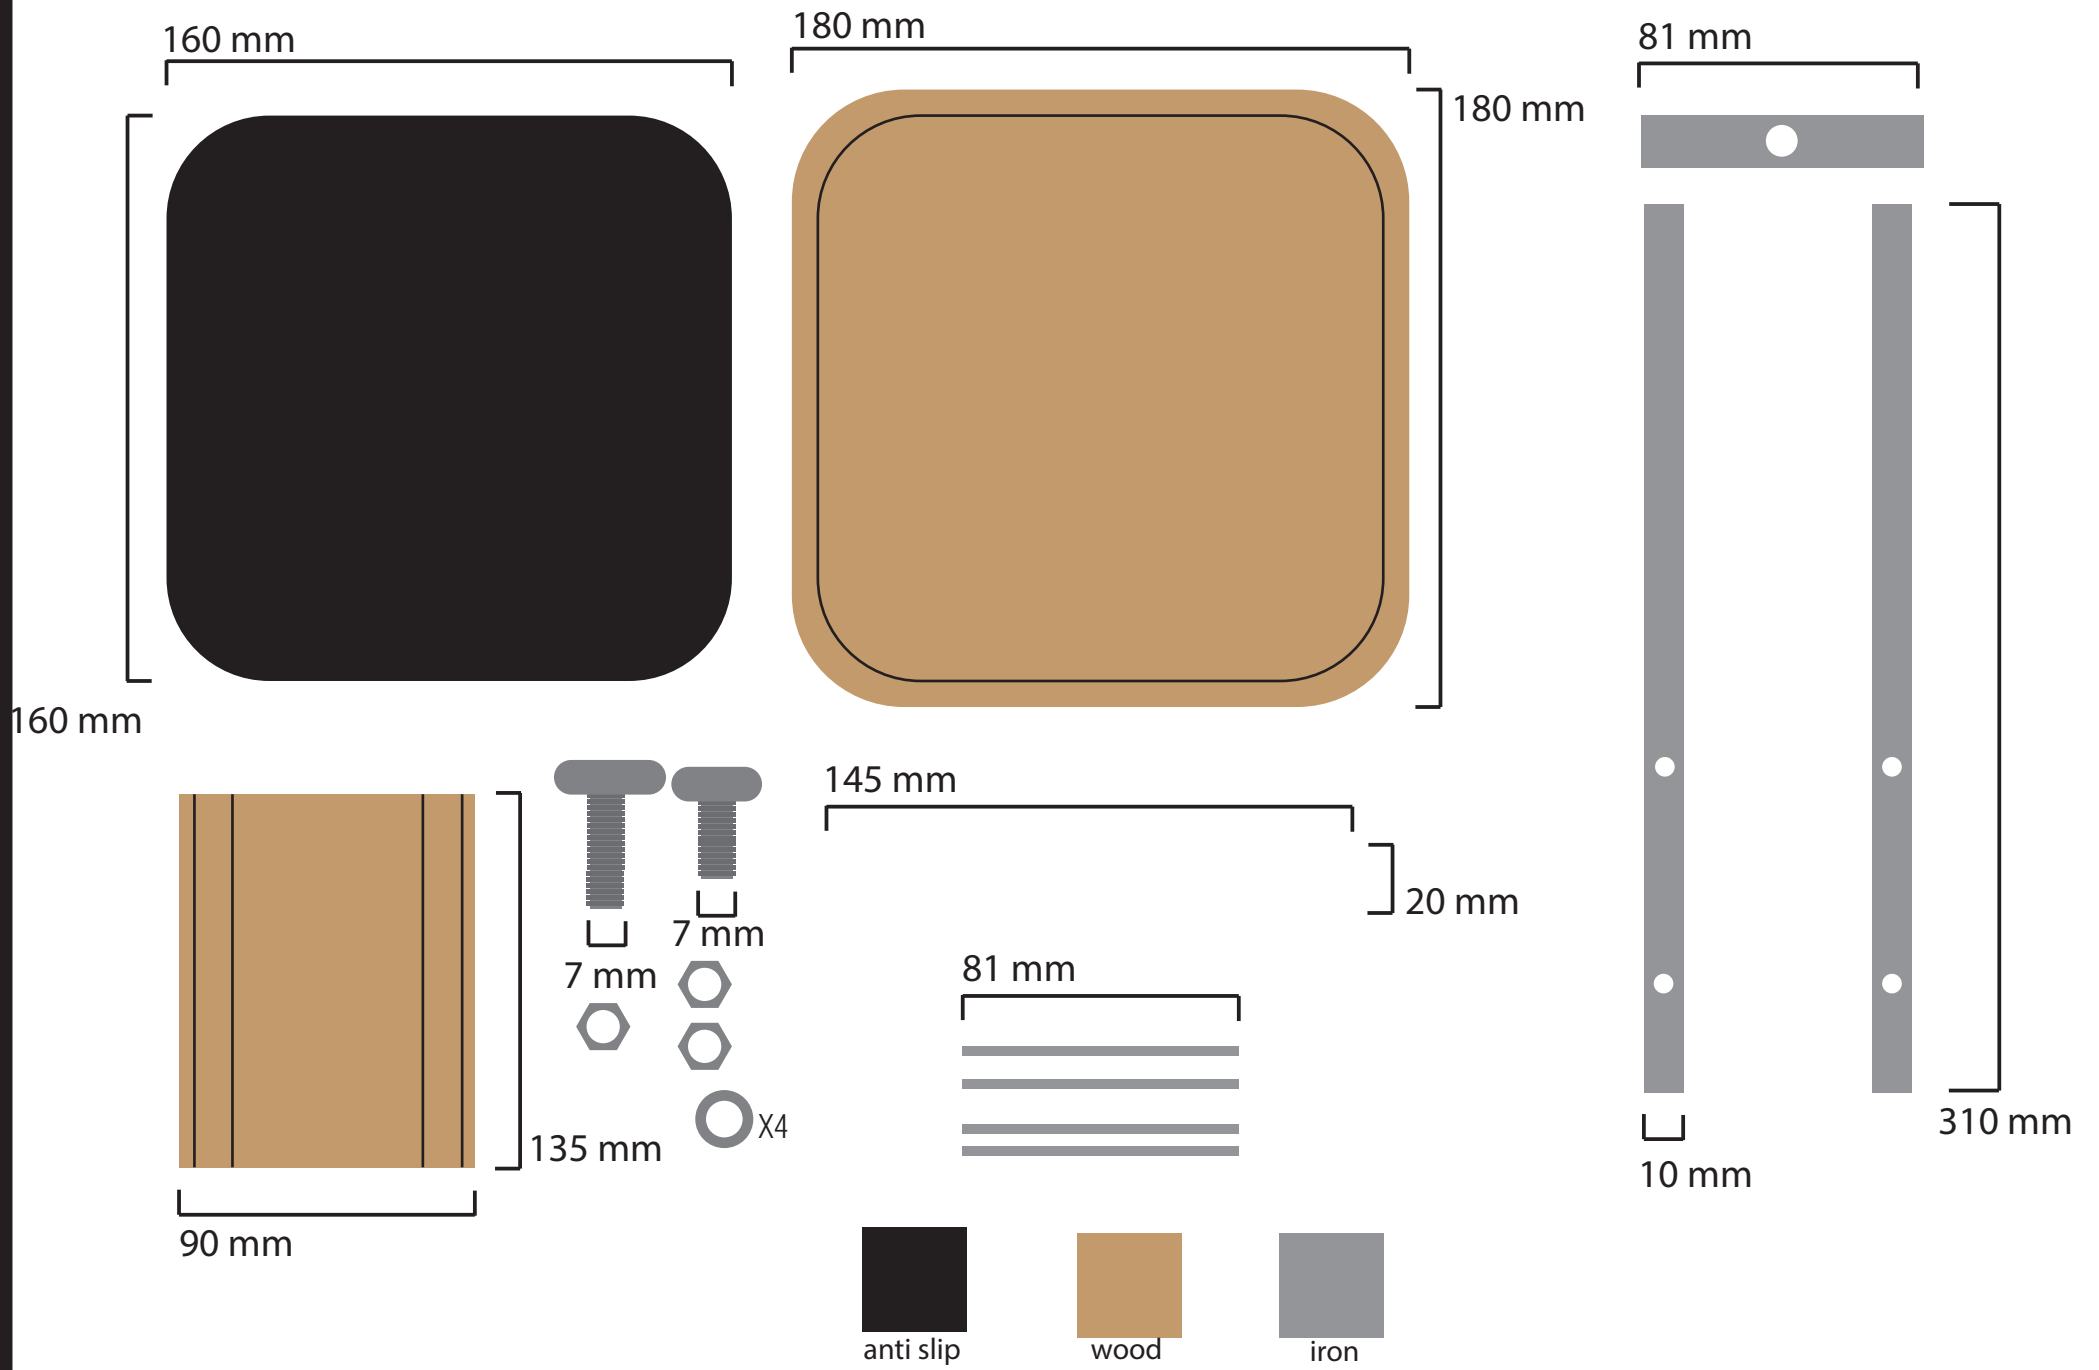


# Tools And Actions



welding



drilling

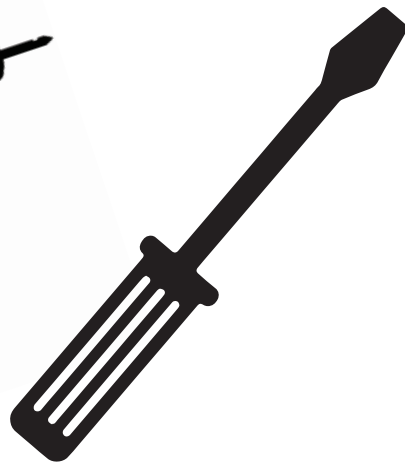

screwing




Glue



hammer


# For The CNC

1


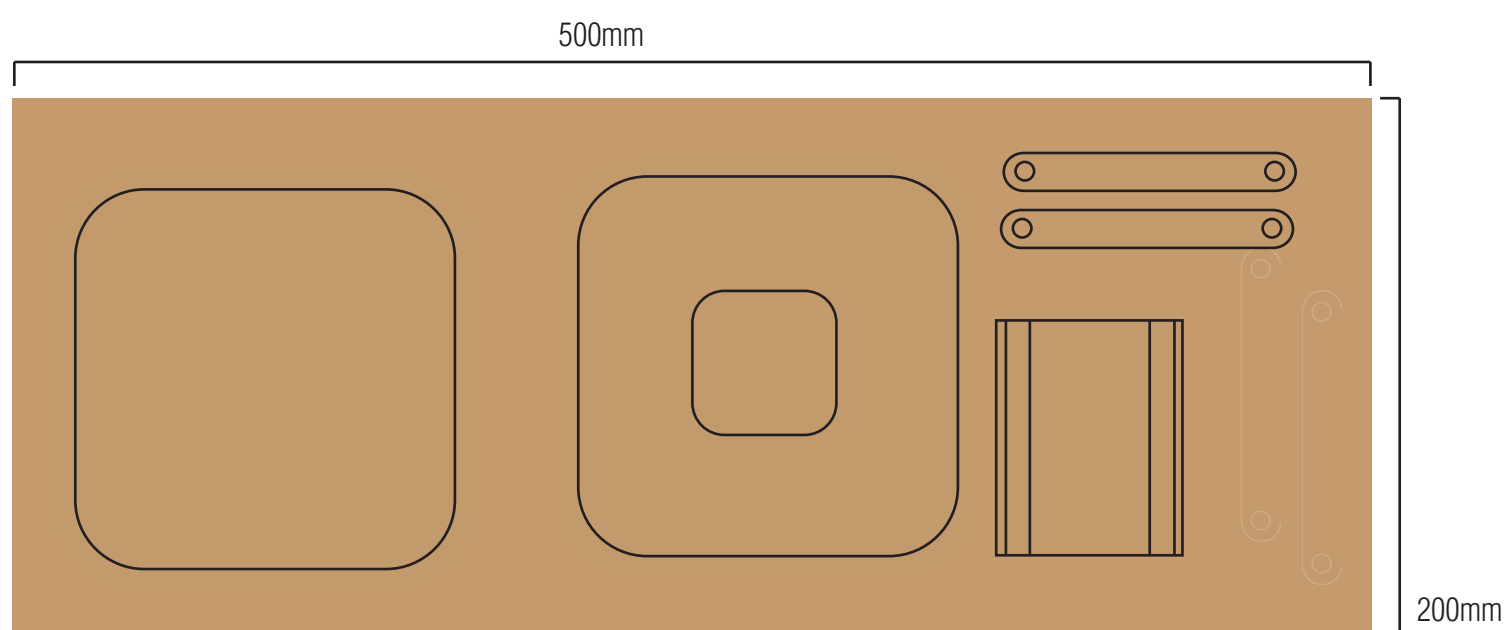



- prepare Beech wood 500X200 mm 20 mm thick
- use the stl file for the CNC.

2

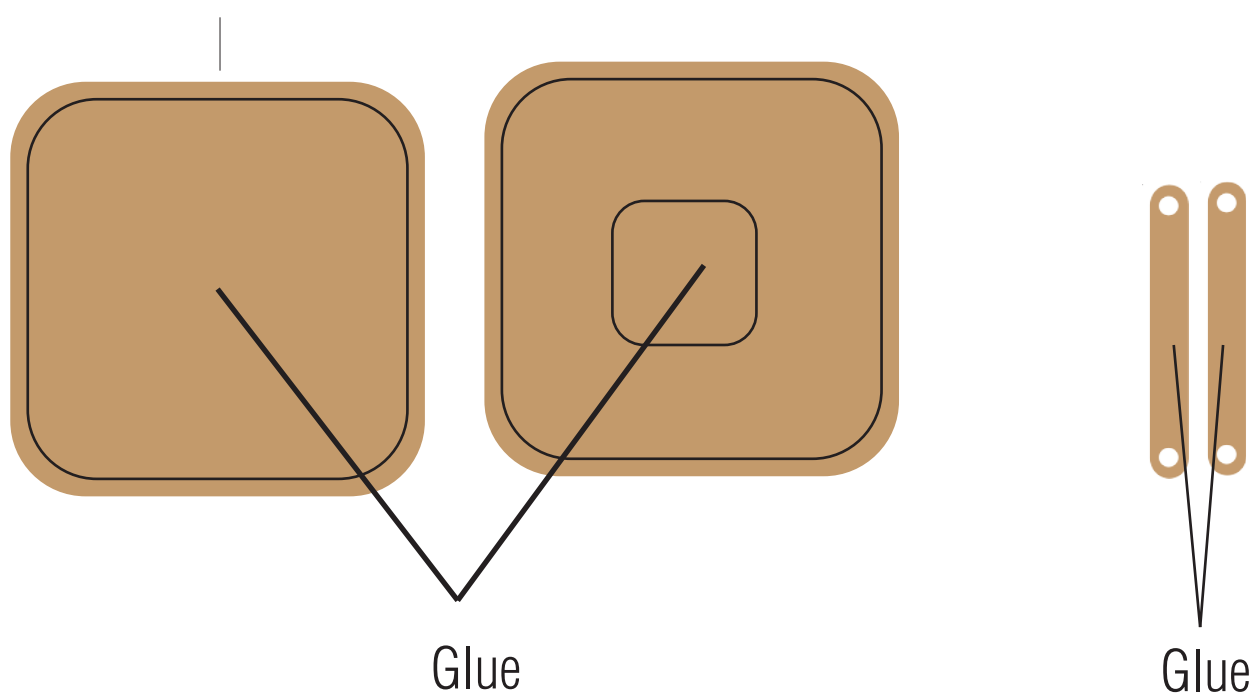


- glue the two flat surfaces one to the other, of both the arm and the tray.

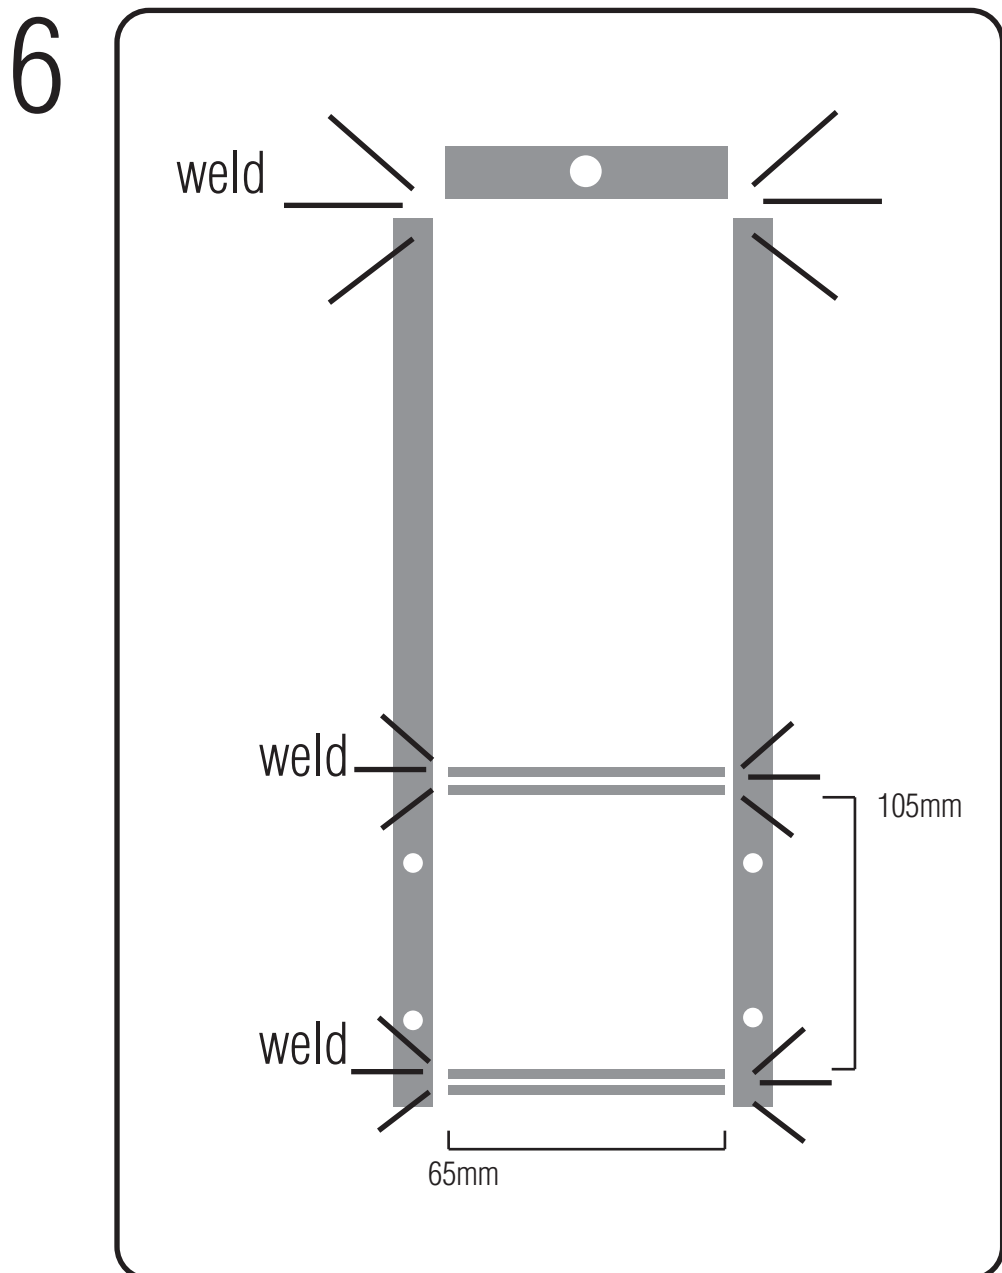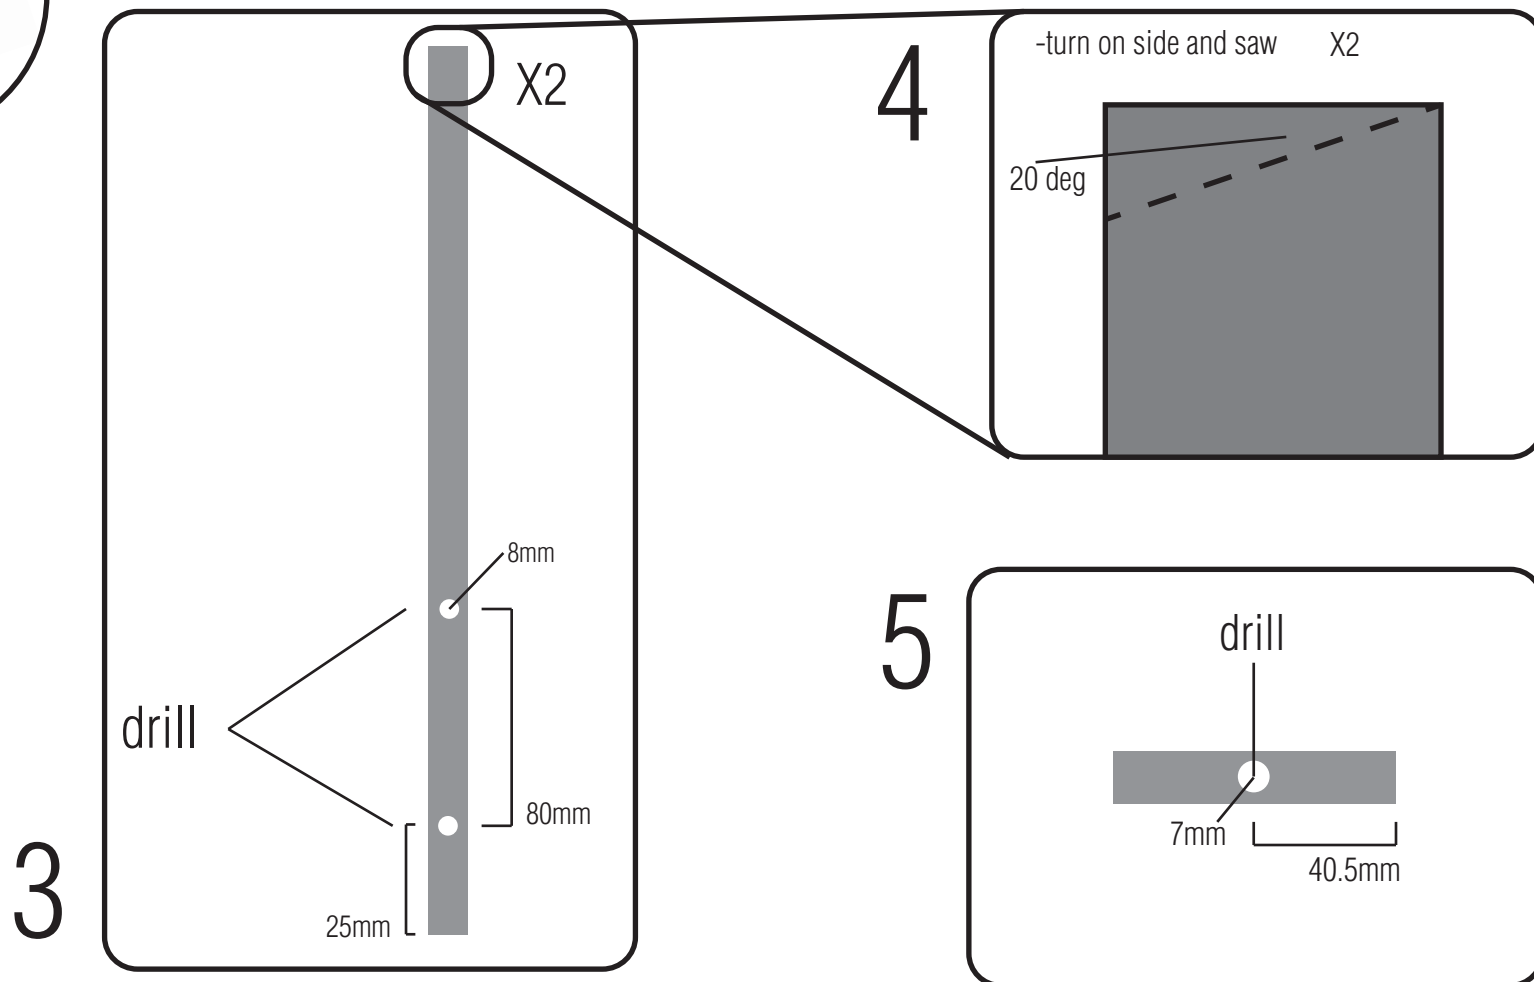


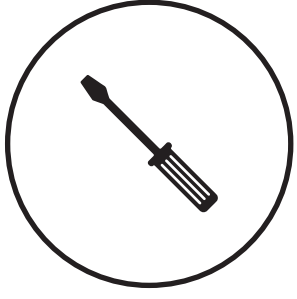


7

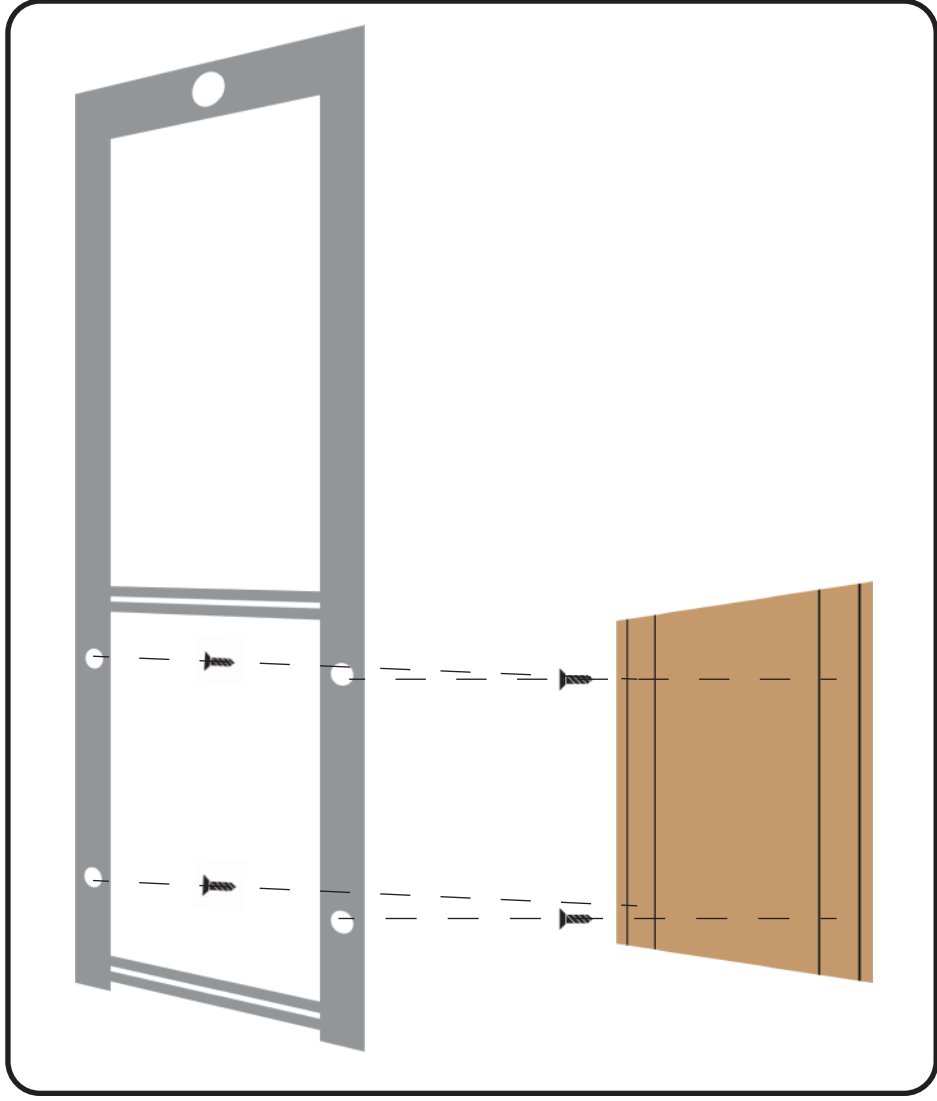

8

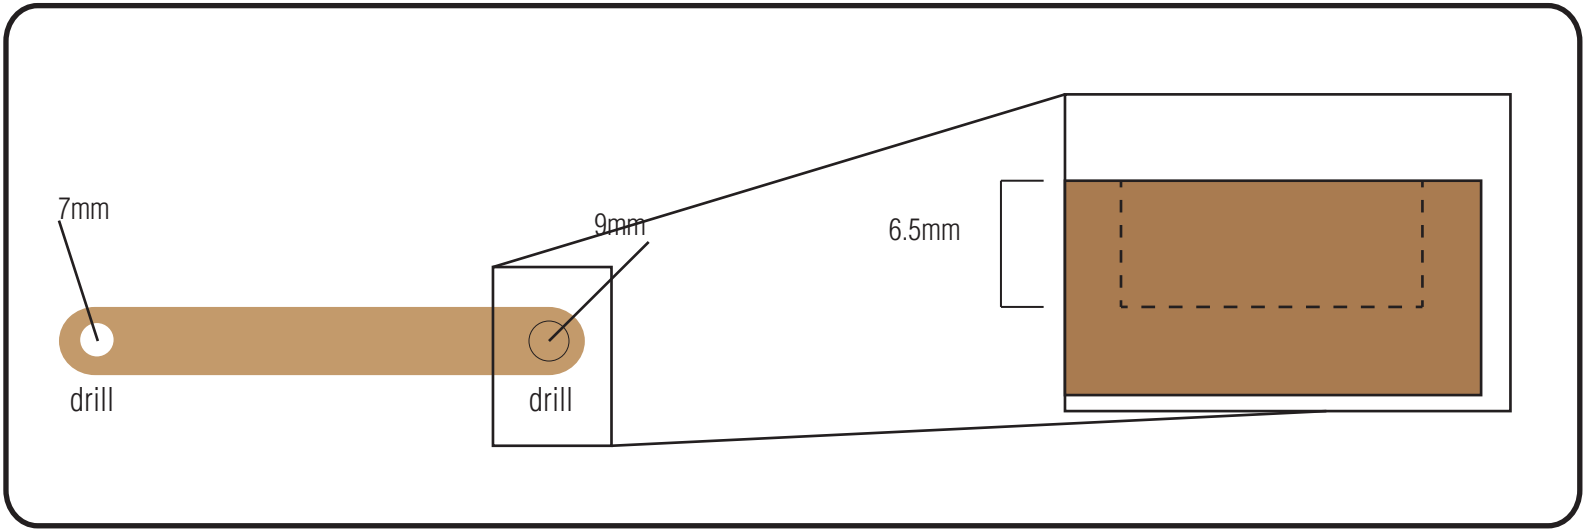


9

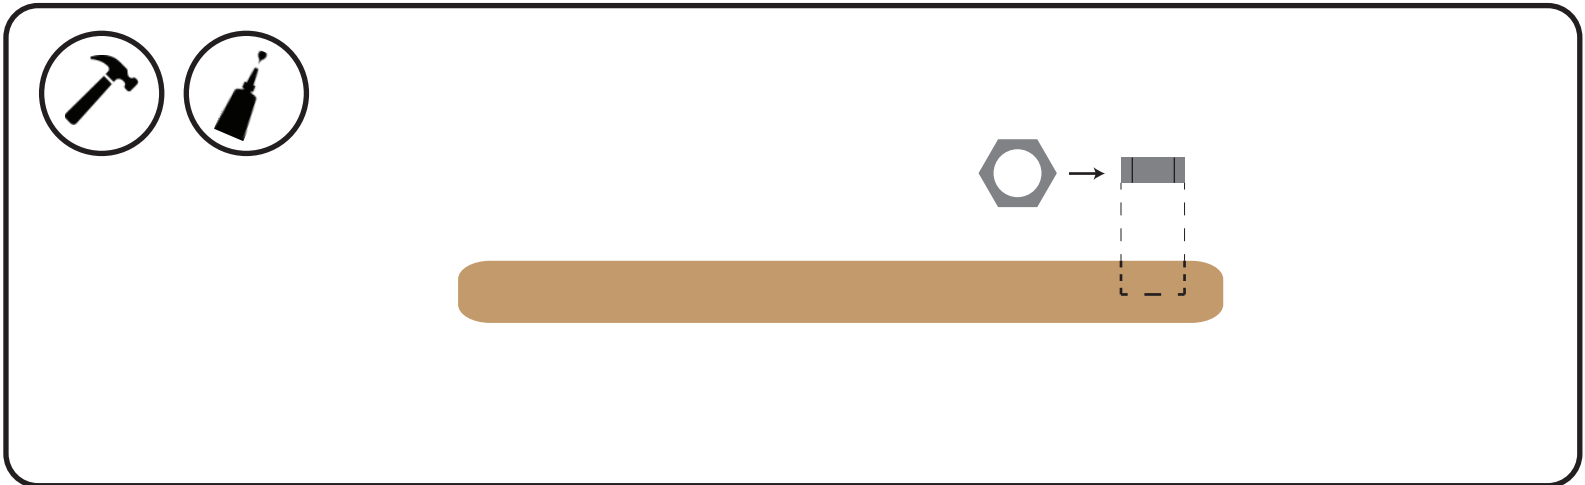





10

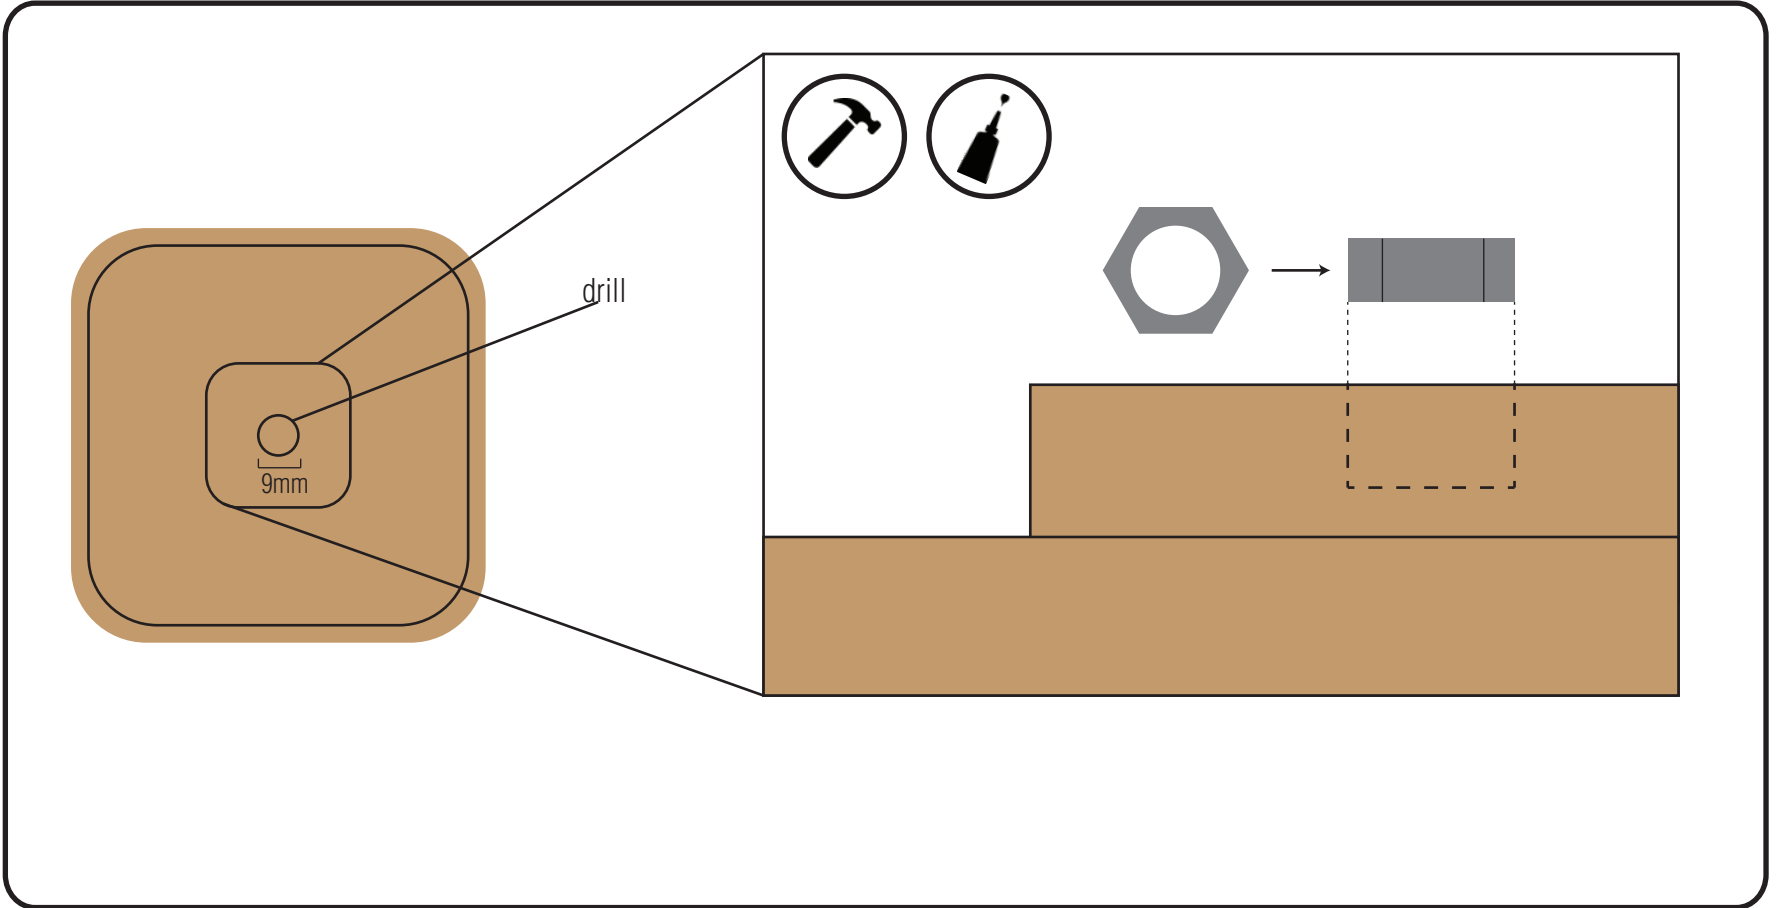


11

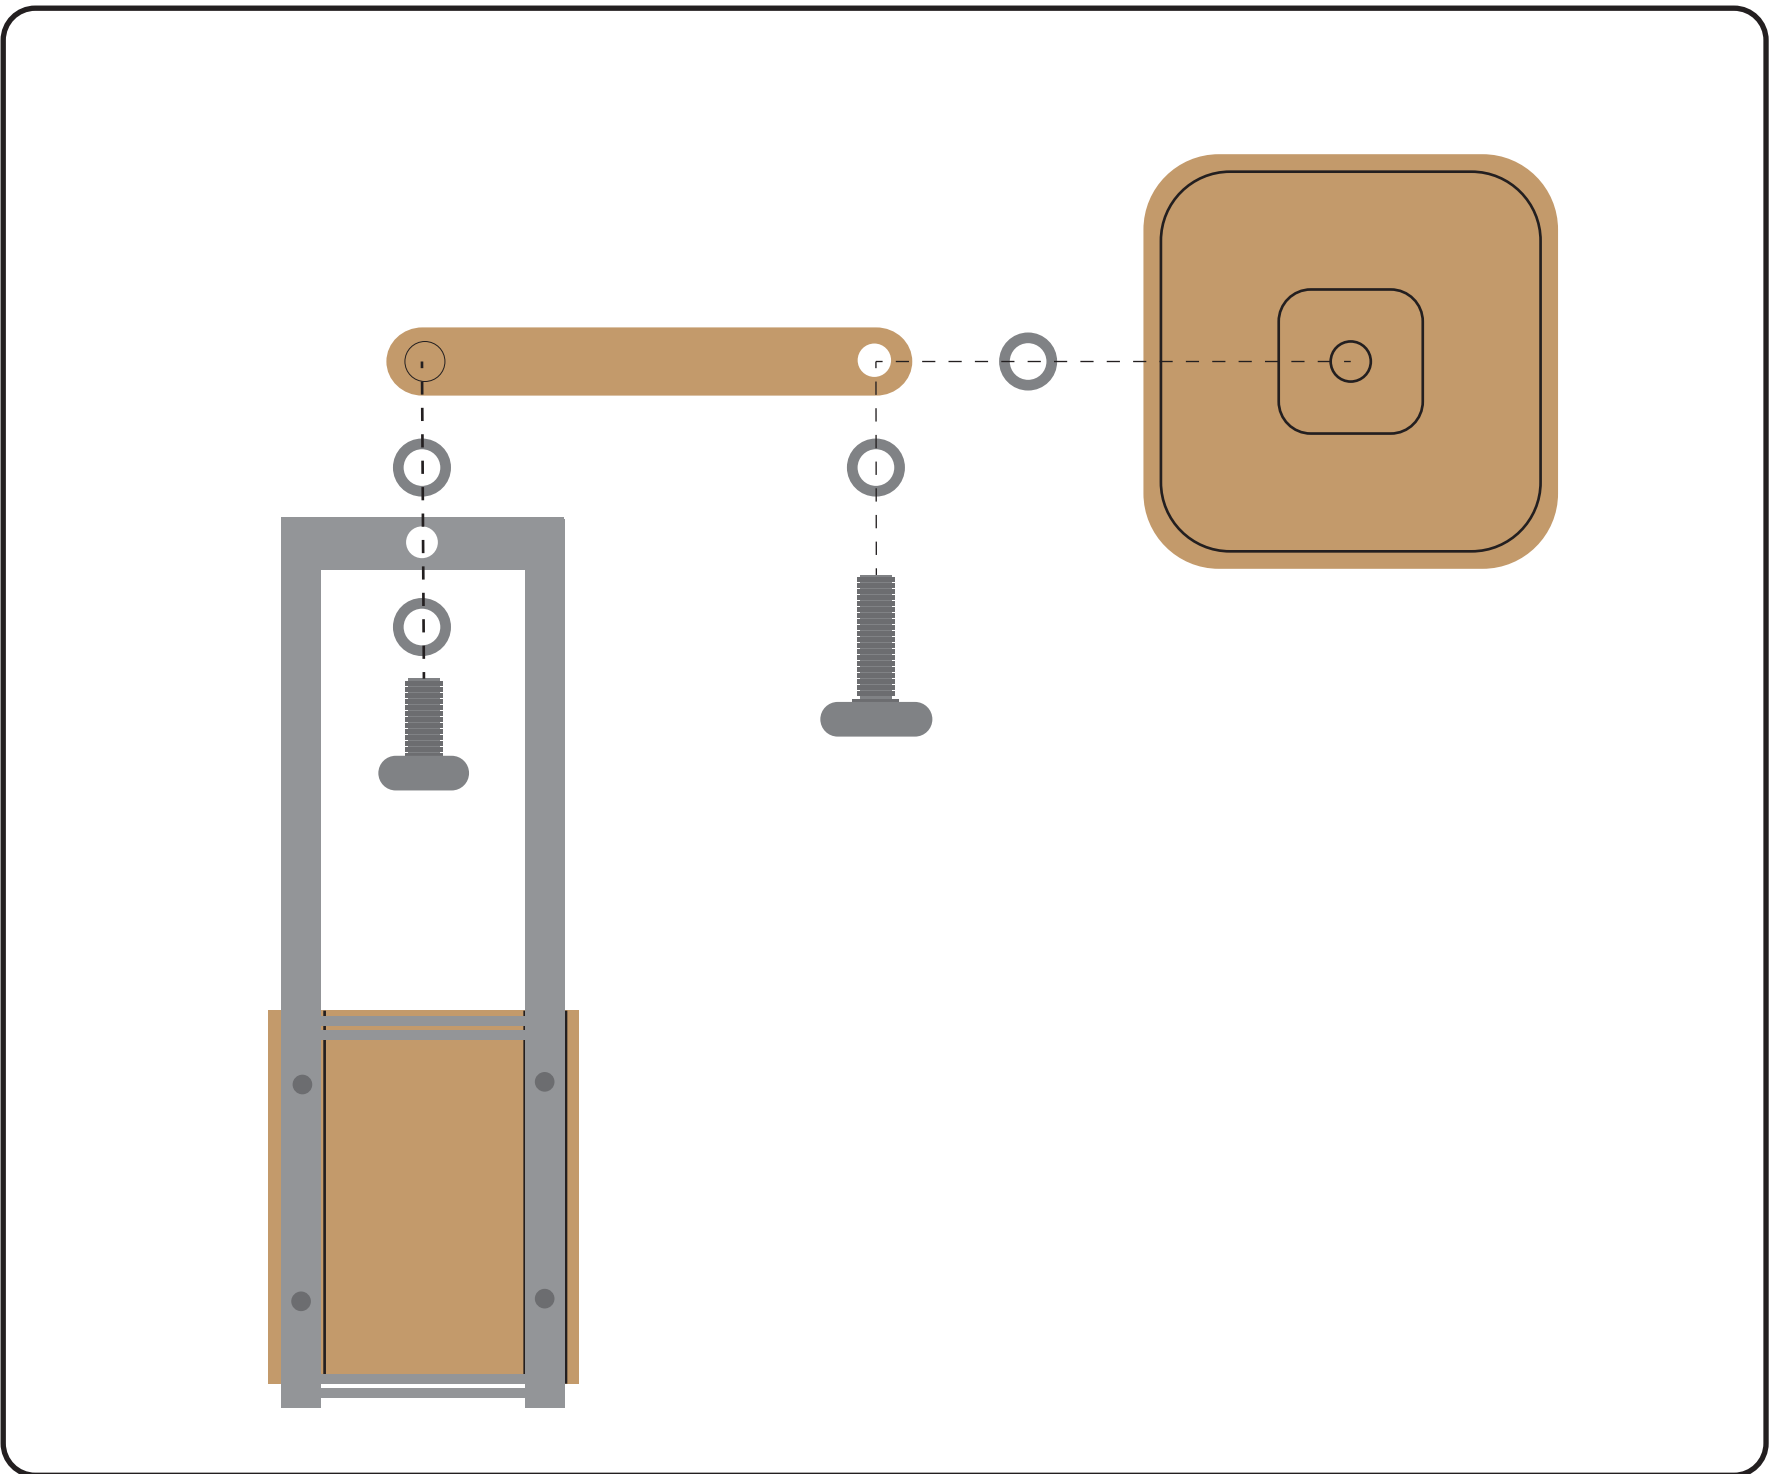

12



print out the template and cut the antislip surface.

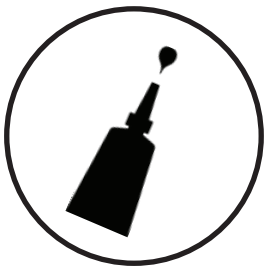

13

