

# DIY Spectrometry Paper Slit Kit

Instructions: [PublicLab.org/n/15235](http://PublicLab.org/n/15235)


Open Hardware - CERN OHL 1.2

1. cut out bar and U-shape below, keeping lines as straight as possible



2. move upper piece down to

form slit; glue or tape in place

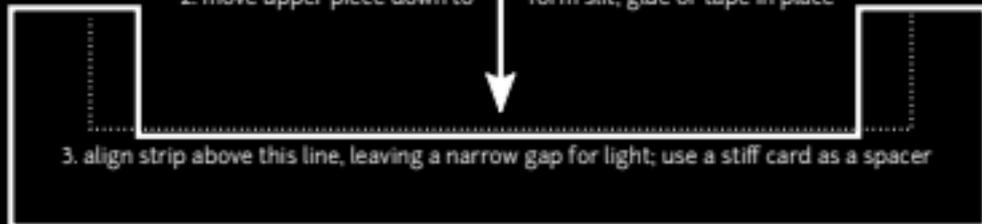

3. align strip above this line, leaving a narrow gap for light; use a stiff card as a spacer



<--- aim for this narrow - 0.4mm - or less; hold up to light to compare