

STEP 1

CUT ON THE SOLID LINES
FOLD ON THE DOTTED LINES

UNICORN HEAD

okay, so this looks complicated, but stay with me & follow the numbers...



9 SOLDERING HORN STRIPS (LONG & SHORT) COME THROUGH SLOT FROM OTHER SIDE

JAW, CHISELED

10 TAPE SHORT STRIP HERE

DON'T FORGET TO CUT THE EARS

17 CURL THE HAIR ...OR KEEP THE MOHAWK YOU DO YOU

SOLDERING HORN

TAPE TO INSIDE OF CHISELED JAW

15

GOTTA CUT THESE TOO

2 ADD COPPER TAPE

TAPE INSIDE FOREHEAD

4 FOLD UNDER TO THIS

LED SOLDERCORN PAPERCRAFT WRITTEN & VIDEO INSTRUCTIONS



7 INSERT LED SO EACH LEG TOUCHES COPPER TAPE
THEN SECURE WITH CLEAR TAPE

BATTERY HOLDER

8 TAPE TO A

16 FOLD DOWN & TAPE TO INSIDE OF HEAD


THIS HERE IS THE SPOT

16 FOLD DOWN & TAPE TO INSIDE OF HEAD

13 TAPE THIS OVER OTHER TAB

2032 BATTERY

12 FOLD OVER BATTERY HOME

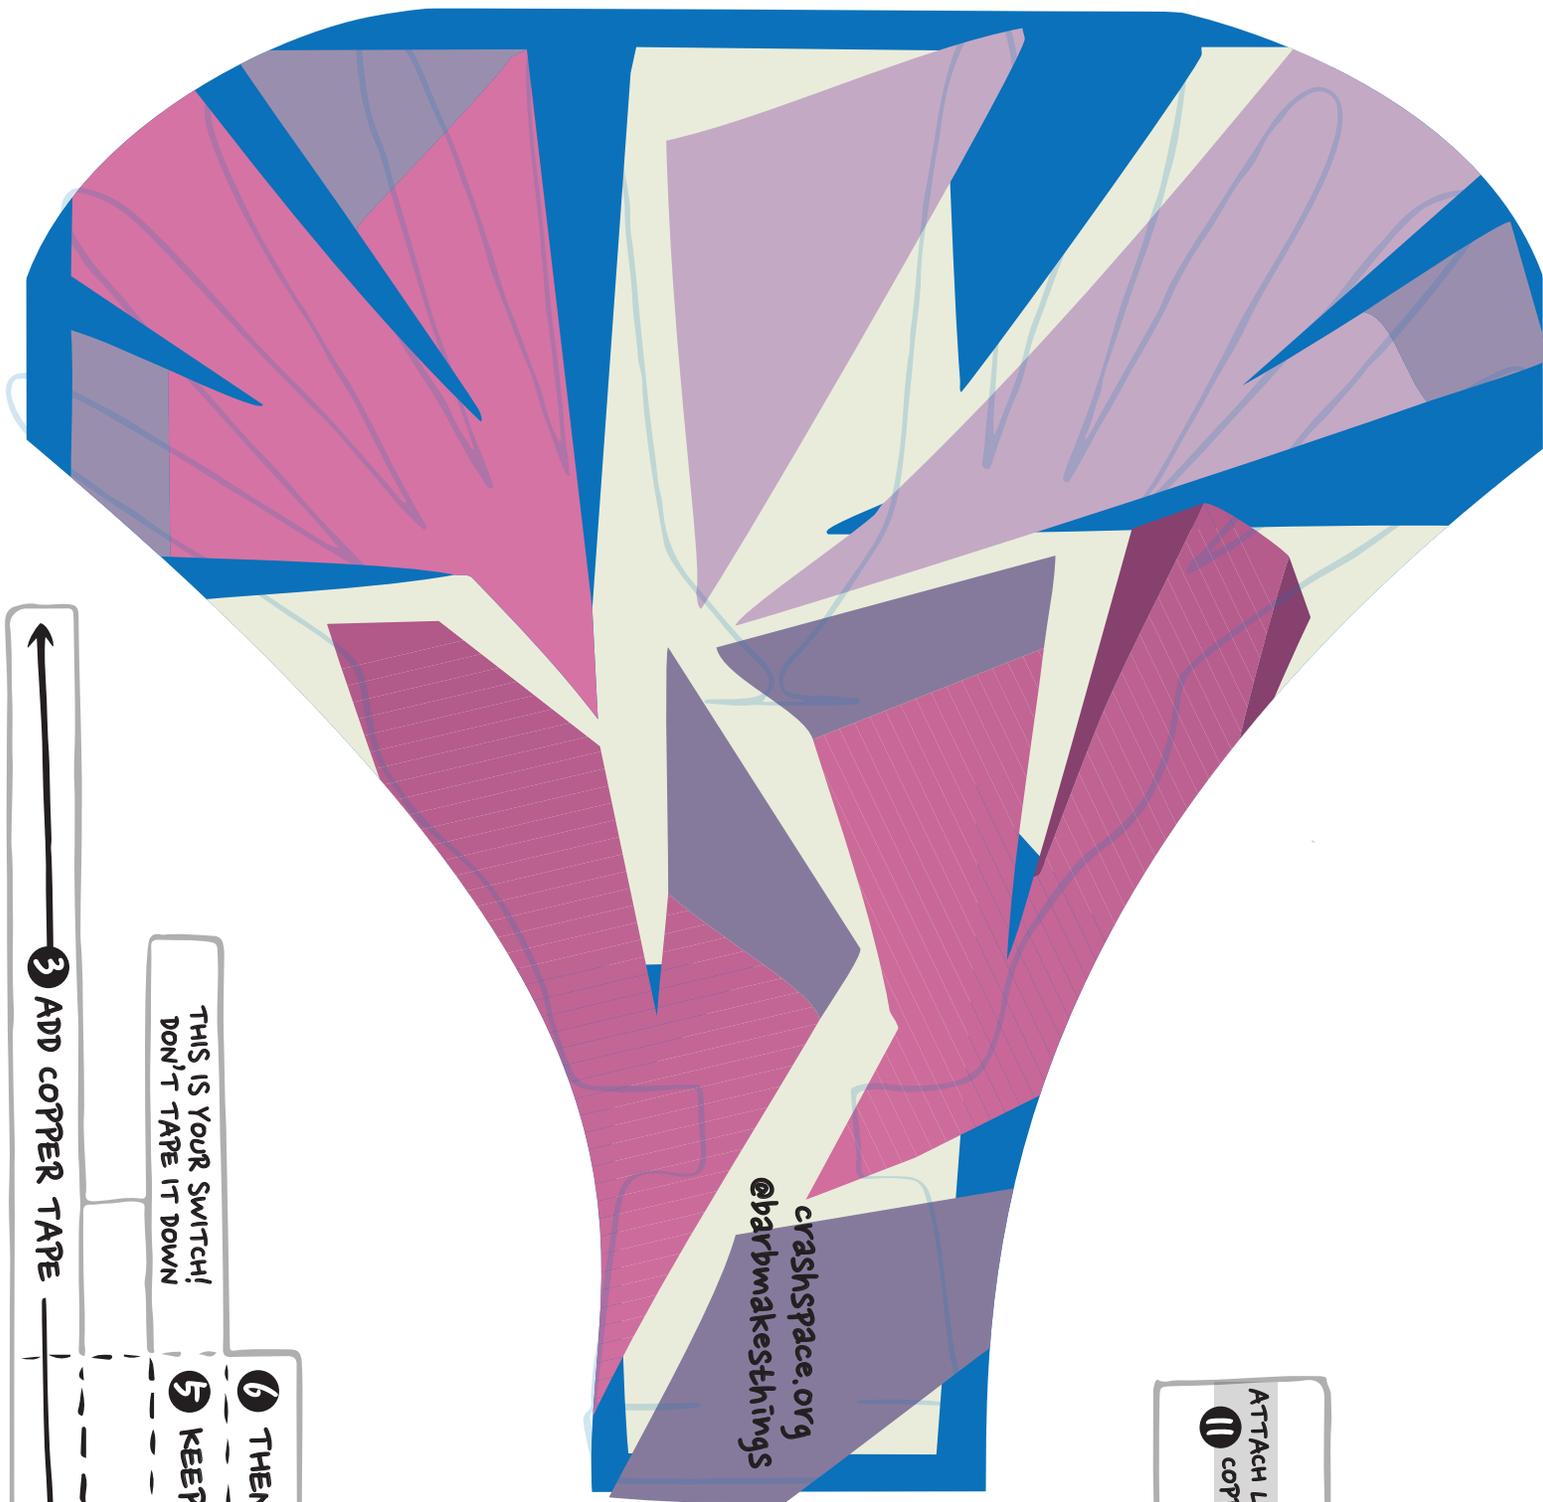

3 ADD COPPER TAPE

THIS IS YOUR SWITCH!
DON'T TAPE IT DOWN

6 THEN TAPE THIS

5 KEEP ROLLIN

8 stick a battery in the holder & insert the outside copper strip. if it doesn't work, flip the battery around. it depends on how you inserted your LED.

ATTACH LONG STRIP FROM SLOT & FOLD OVER

11 COPPER SIDE SHOULD BE UP

THIS IS THE OTHER TAB

14 FOLD THIS UP & ATTACH TO SPOT ABOVE

DESIGNED BY @BARBMAKESTHINGS
(YOUTUBE, TWITTER, AND INSTAGRAM)