

# STEP 1

CUT ON THE SOLID LINES  
FOLD ON THE DOTTED LINES

UNICORN HEAD

17 CURL THE HAIR  
...OR KEEP THE MOHAWK  
YOU DO YOU

9 SOLDERING HORN STRIPS (LONG & SHORT) COME THROUGH SLOT FROM OTHER SIDE

DON'T FORGET TO CUT THE EARS

okay, so this looks complicated, but stay with me & follow the numbers...



SOLDERING HORN

6 TAPE SHORT STRIP HERE

JAW, CHISELED

GOTTA CUT THESE TOO

5 TAPE TO INSIDE OF CHISELED JAW

2 ADD COPPER TAPE

TAPE INSIDE FOREHEAD TO THIS

4 FOLD UNDER

## LED SOLDERCORN PAPERCRAFT WRITTEN & VIDEO INSTRUCTIONS



7 INSERT LED SO EACH LEG TOUCHES COPPER TAPE  
THEN SECURE WITH CLEAR TAPE

BATTERY HOLDER

8 TAPE TO A

16 FOLD DOWN & TAPE TO INSIDE OF HEAD



THIS HERE IS THE SPOT

16 FOLD DOWN & TAPE TO INSIDE OF HEAD


13 TAPE THIS OVER OTHER TAB

2032 BATTERY

12 FOLD OVER BATTERY HOME

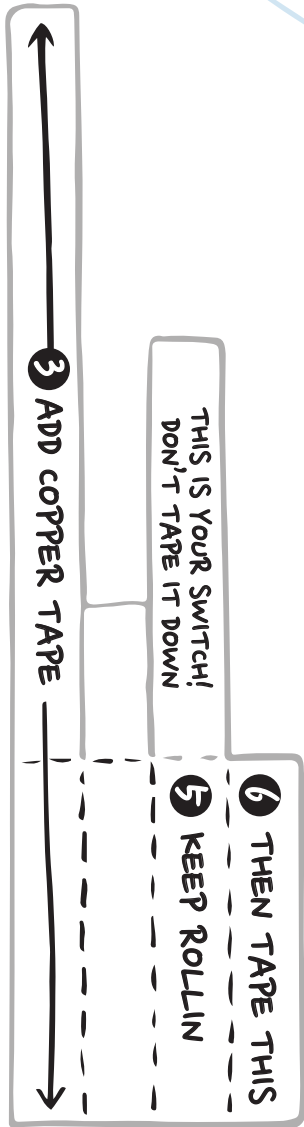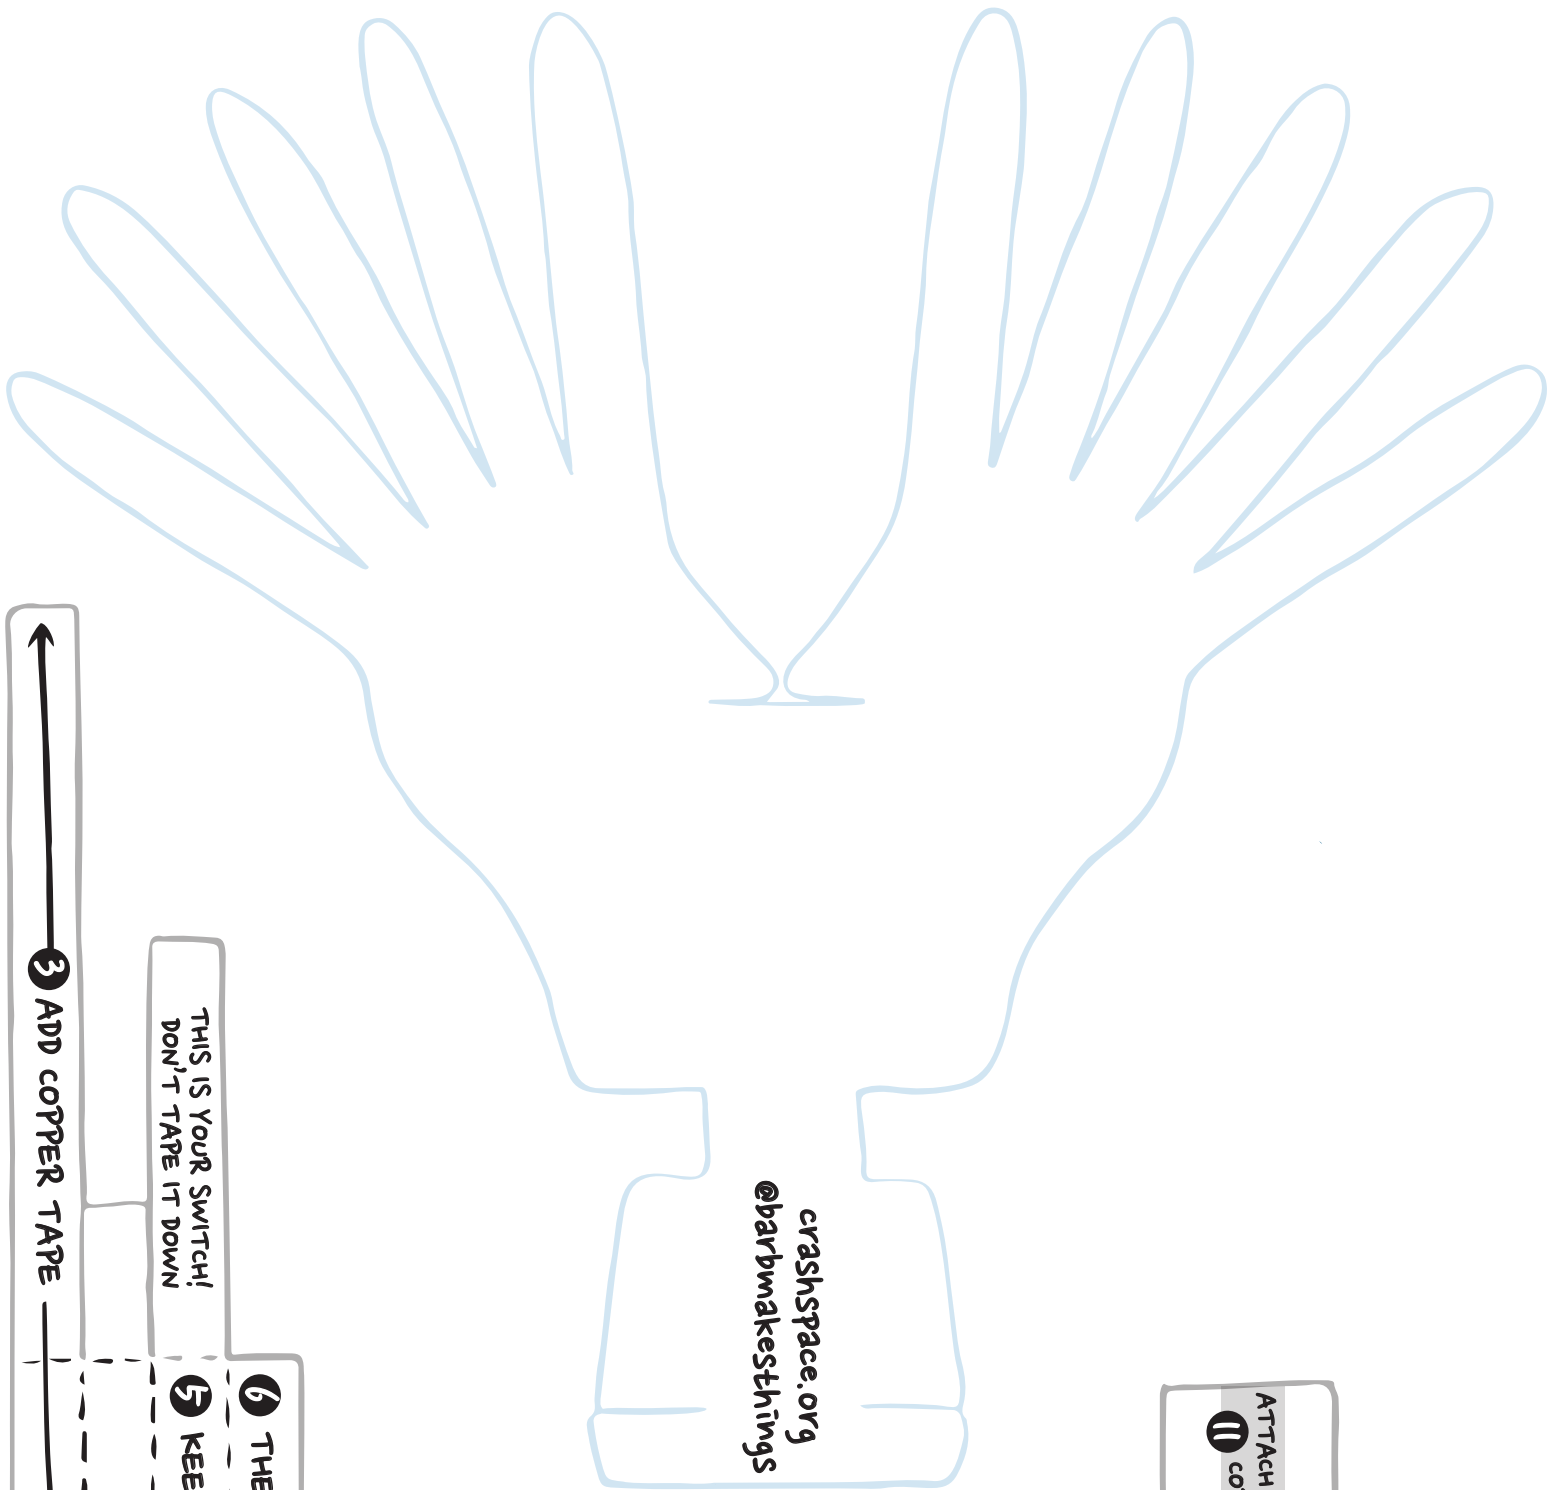

8 Stick a battery in the holder & insert the outside copper strip. if it doesn't work, flip the battery around. it depends on how you inserted your LED.

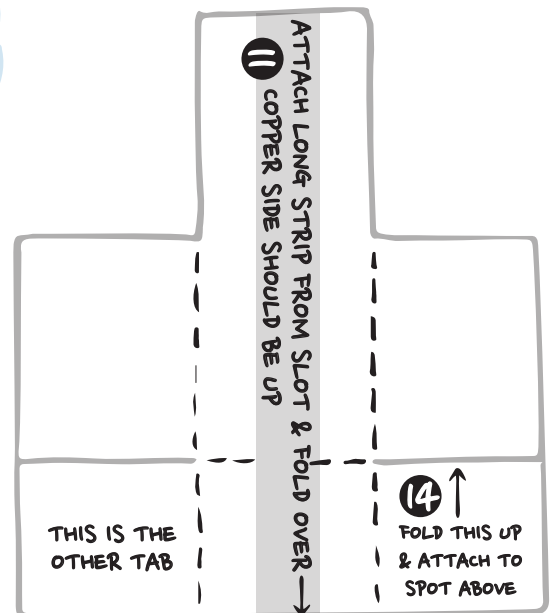

DESIGNED BY @BARBMAKESTHINGS  
(YOUTUBE, TWITTER, AND INSTAGRAM)